


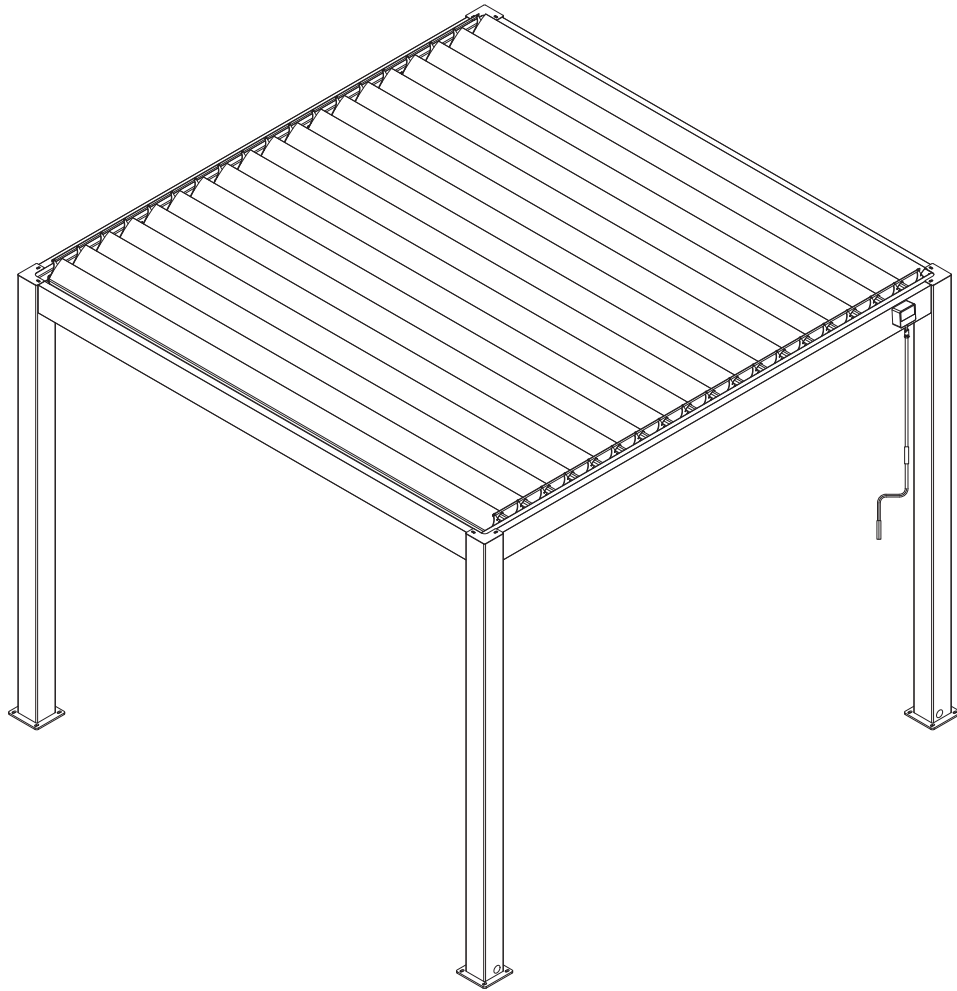

BIOCLIMATIC PERGOLA FREE STANDING 4 POSTS








3 x 3m / 3 x 4m














BIOCLIMATIC PERGOLA FREE STANDING 4 POSTS 3 x 3m


	Item	Qty	Item	Qty	Item	Qty
Carton 1/4	3B-01/B	4	3B-11	4	3B-12	4
	3B-13	4	3B-14	1	3B-15	1
	3B-16	1	3B-18	1	3B-19	8
	3B-20	38+	3B-21	16+	3B-22	24+
	3B-23	16+	3B-24	1	3B-48/B	19+
	3B-49/B	18+	3B-50	1	3B-51	152+
	3B-43	1	3B-64	1	3B-67	10+
	3B-57	3				
Carton 2/4	3B-02	1	3B-03	1	3B-04	2
	3B-05	4	3B-08	2	3B-09	2
Carton 3/4	3B-06	7	3B-07	3		
Carton 4/4	3B-06	9				

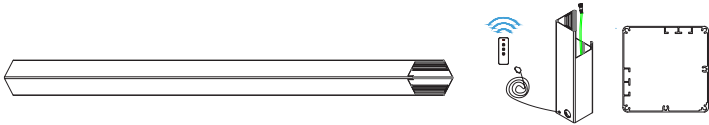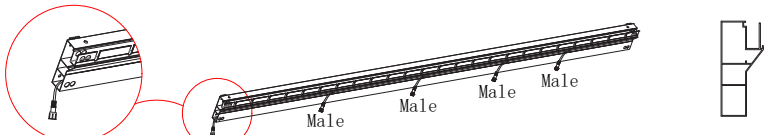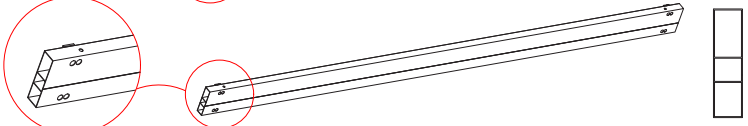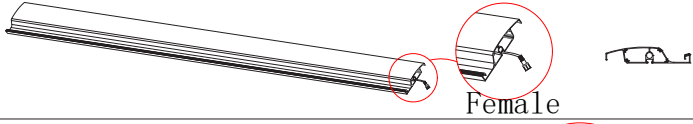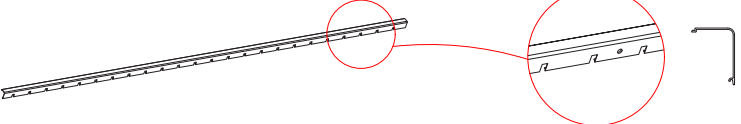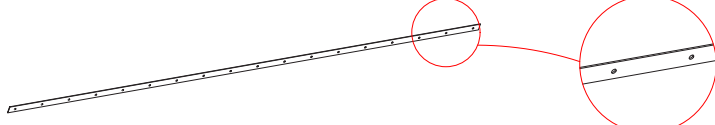Item	Drawings	Qty
3B-01		4
3B-01B		1
3B-02		1
3B-03		1
3B-04		2
3B-05		4
3B-06		16
3B-07		3
3B-08		2
3B-09		2

Item	Drawings	Qty
3B-11		4
3B-12		4
3B-13		4
3B-14		1
3B-15		1
3B-16		1
3B-18		1
3B-19	 M8*20	8
3B-20		38+
3B-21	 M10*80	16+
3B-22	 M5.5*50	24+
3B-57		3








Item	Drawings	Qty
3B-23	 M4.2*19	16+
3B-24		1
3B-43		1
3B-48		16+
3B-48B		3
3B-49		15+
3B-49B		3
3B-50		1
3B-51	 M4.2*25	152+
3B-64		1
3B-67	 M4.2*50	10+





BIOCLIMATIC PERGOLA FREE STANDING 4 POSTS 3 x 3m






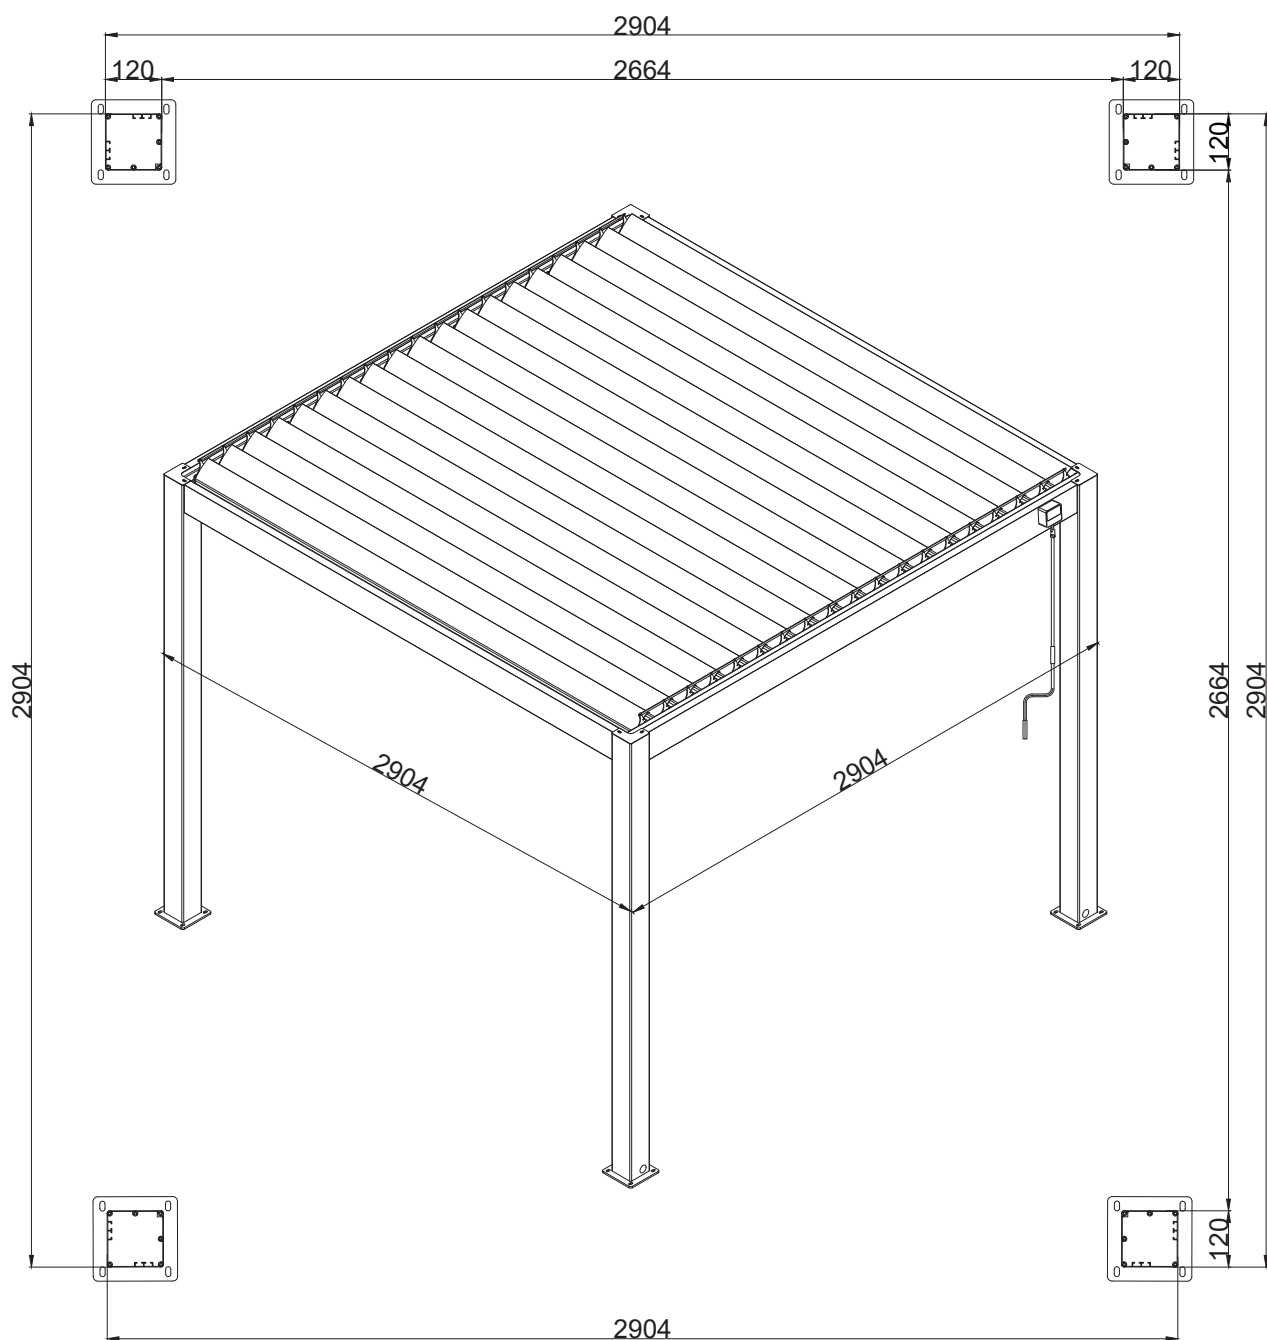


BIOCLIMATIC PERGOLA FREE STANDING 4 POSTS 3 x 4m


	Item	Qty	Item	Qty	Item	Qty
Carton 1/5	3B-01/B	4	3B-11	4	3B-12	4
	3B-13	4	3B-14	1	3B-15	1
	3B-18	1	3B-19	8	3B-20	52+
	3B-21	16+	3B-22	24+	3B-23	18+
	3B-24	1	3B-51	208+	3B-48/B	26+
	3B-49/B	25+	3B-50	1	3B-43	1
	3B-64	1	3B-67	14+	3B-16	1
	3B-57	4				
Carton 2/5	3B-02	1	3B-03	1	3B-04	2
	3B-05	4	3B-08	2	3B-09	2
Carton 3/5	3B-06	4	3B-07	4		
Carton 4/5	3B-06	9				
Carton 5/5	3B-06	9				

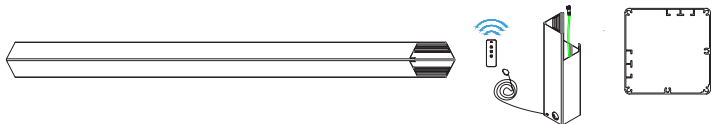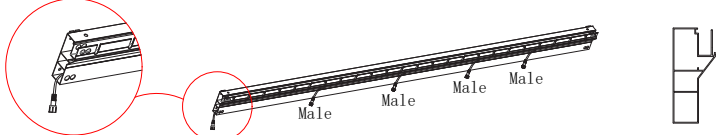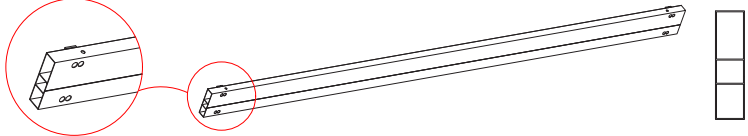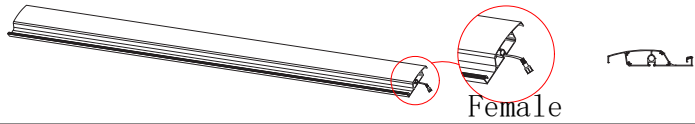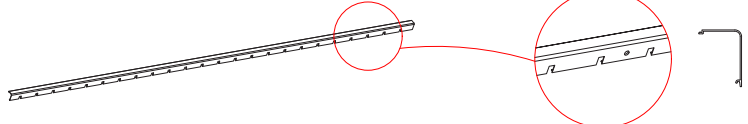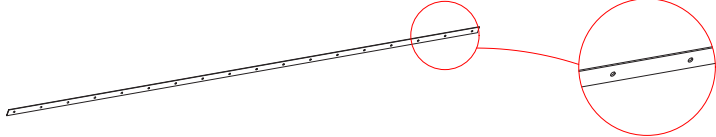
Item	Drawings	Qty
3B-01		3
3B-01B		1
3B-02		1
3B-03		1
3B-04		2
3B-05		4
3B-06		22
3B-07		4
3B-08		2
3B-09		2

Item	Drawings	Qty
3B-11		4
3B-12		4
3B-13		4
3B-14		1
3B-15		1
3B-16		1
3B-18		1
3B-19	 M8*20	8
3B-20		52+
3B-21	 M10*80	16+
3B-22	 M5.5*50	24+
3B-57		4



Item	Drawings	Qty
3B-23	 M4.2*19	18+
3B-24		1
3B-43		1
3B-48		22+
3B-48B		4
3B-49		21+
3B-49B		4
3B-50		1
3B-51	 M4.2*25	208+
3B-64		1
3B-67	 M4.2*50	14+

BIOCLIMATIC PERGOLA FREE STANDING 4 POSTS 3 x 4m



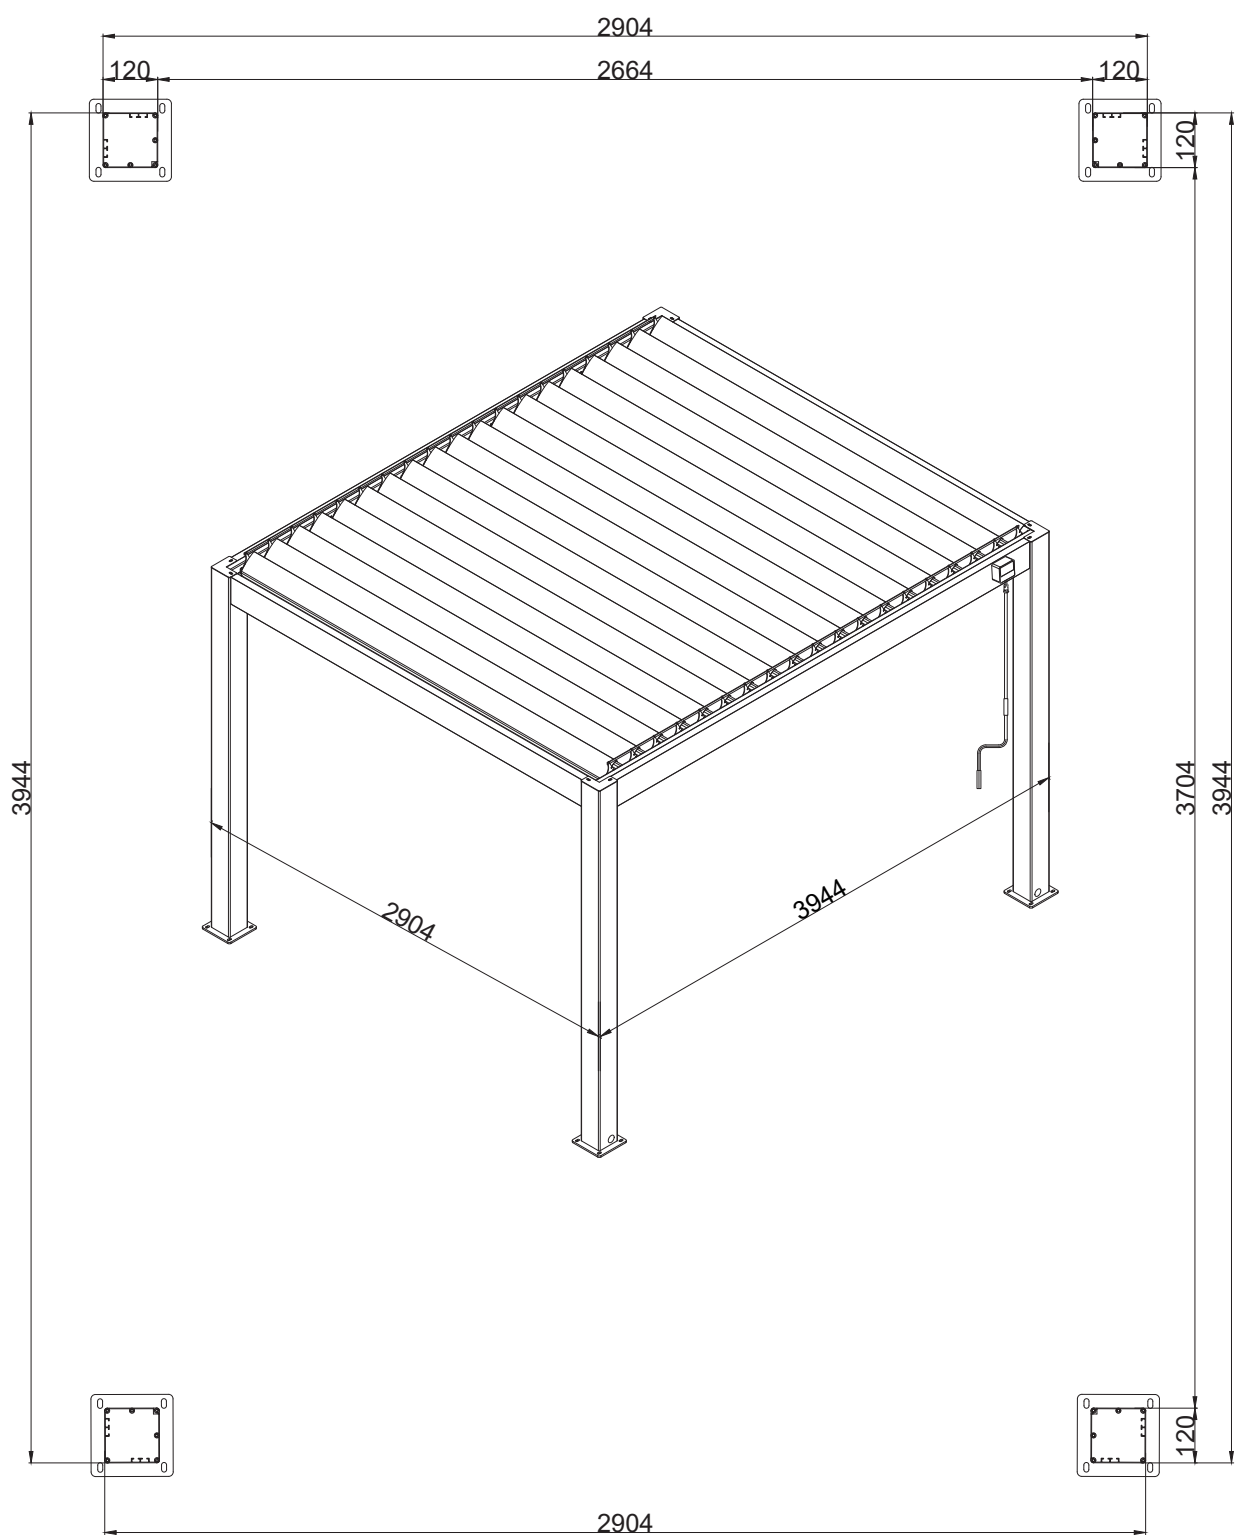


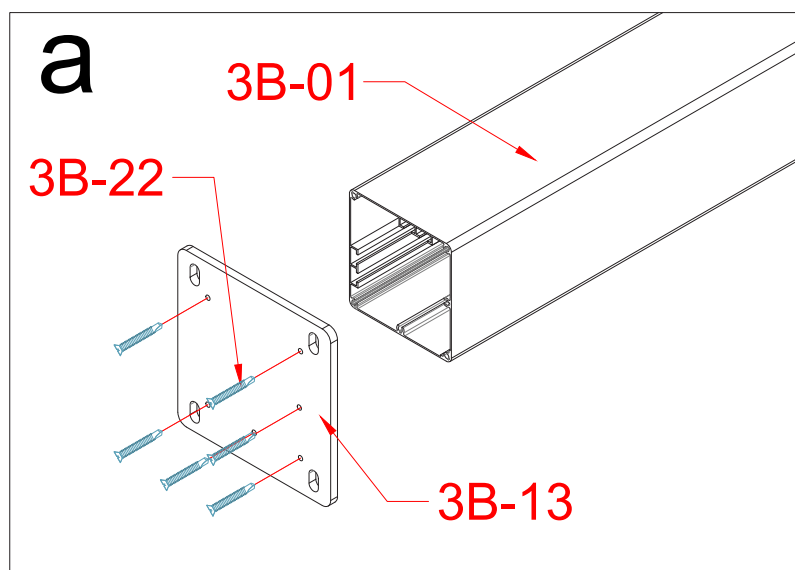





Pls note, if you need to install motorized blind, pls put the cable into post before mounting 3B-13 base plate with post.

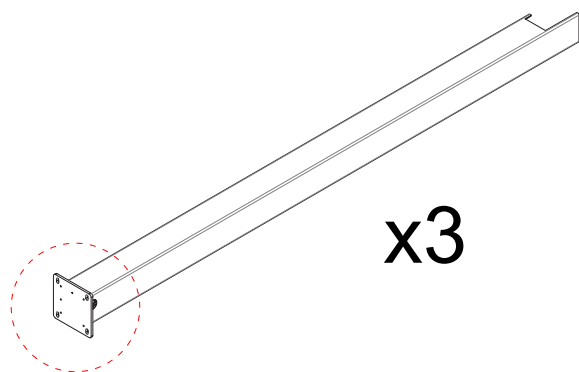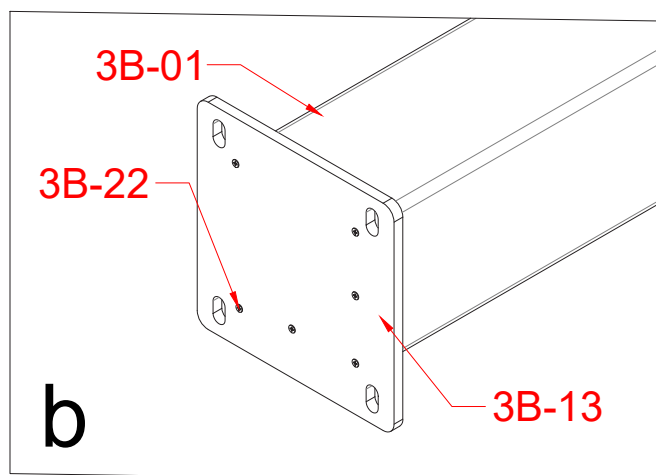




3B-01			3
3B-13			3
3B-22			18

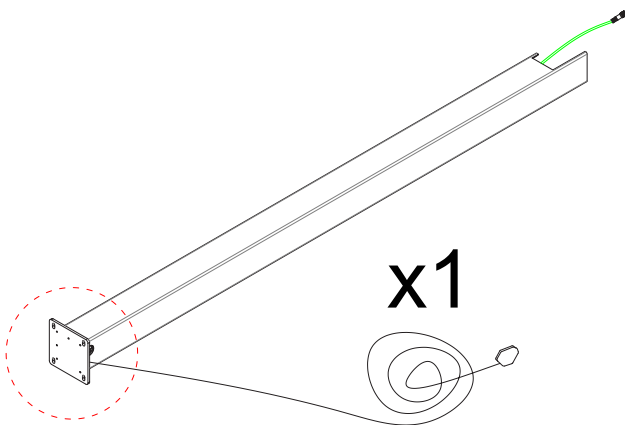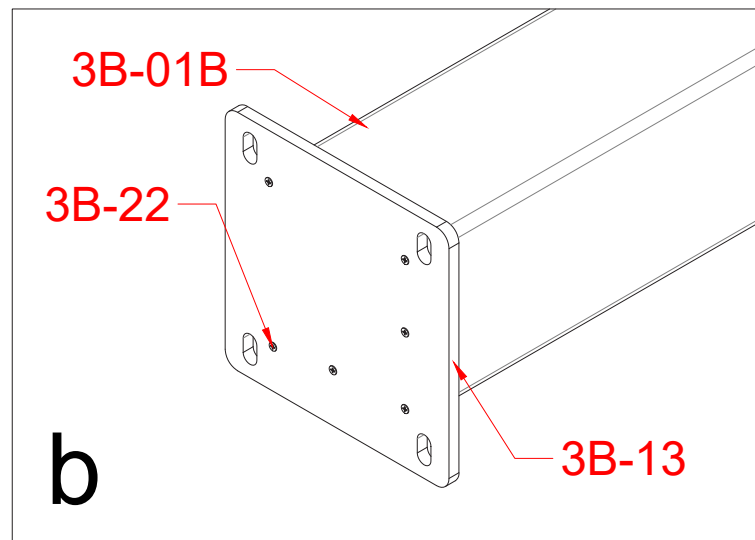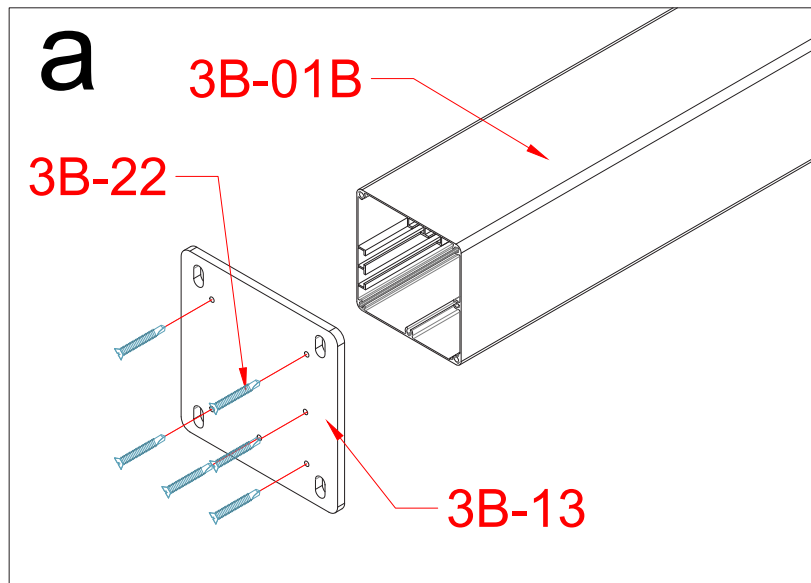




3B-01B		1
3B-13		1
3B-22		6

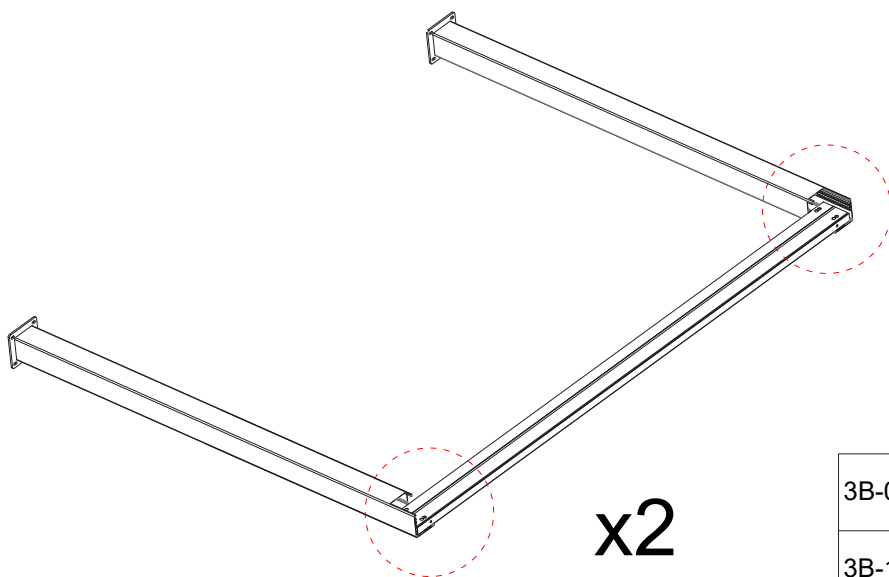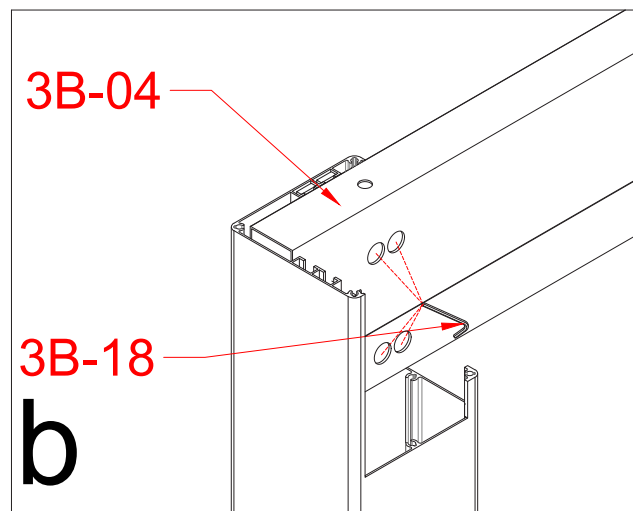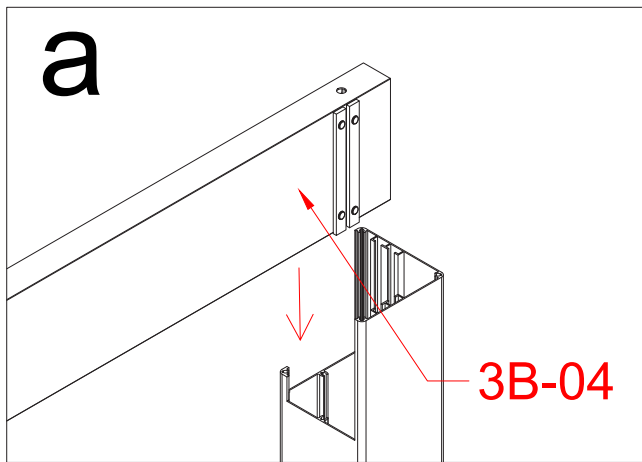

3B-04		2
3B-18		1

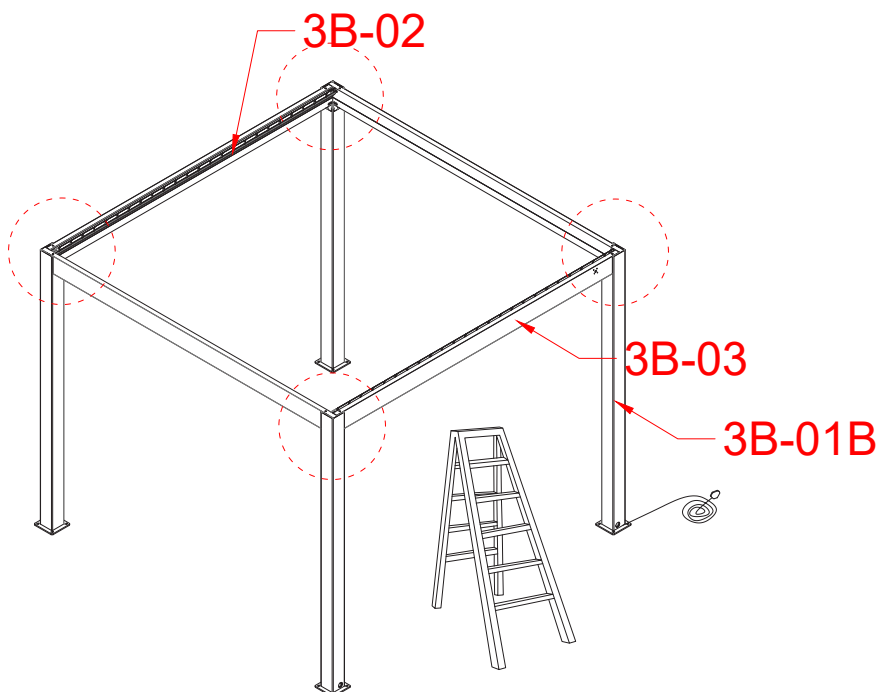
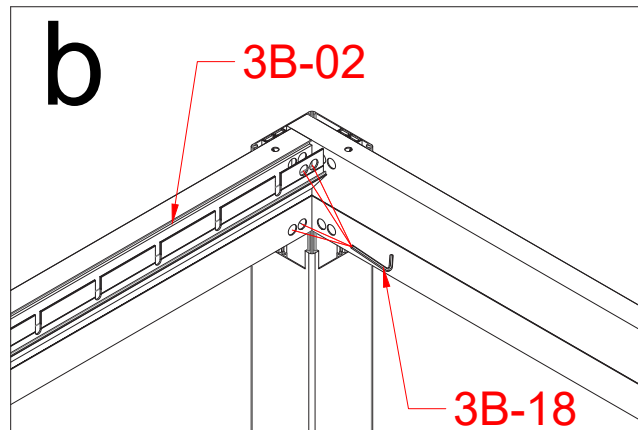
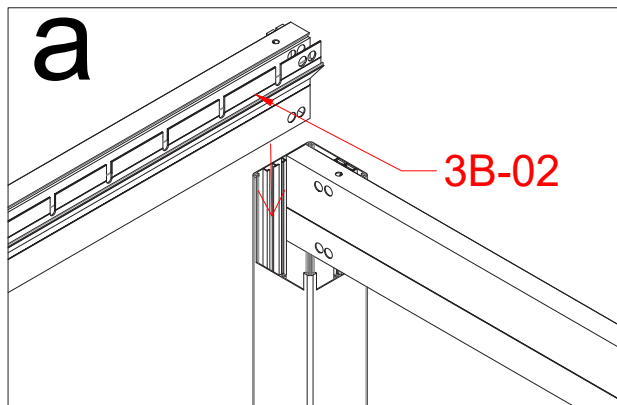



3B-02			1
3B-03			1
3B-18			1

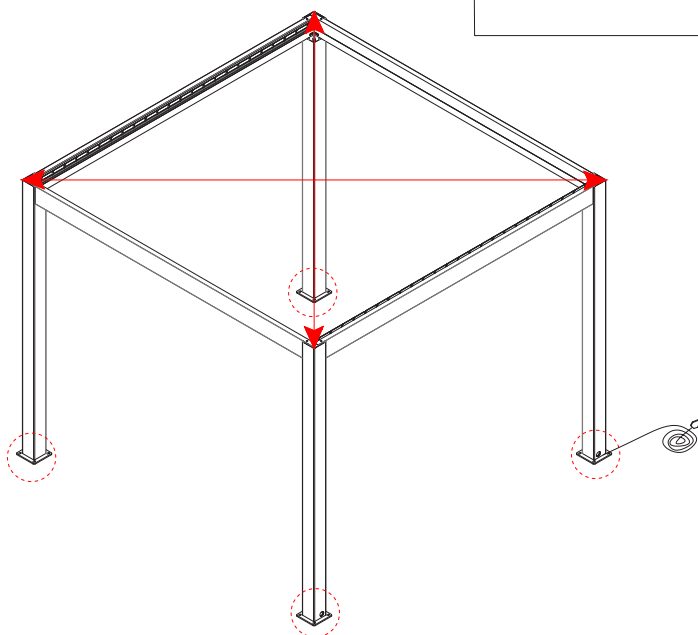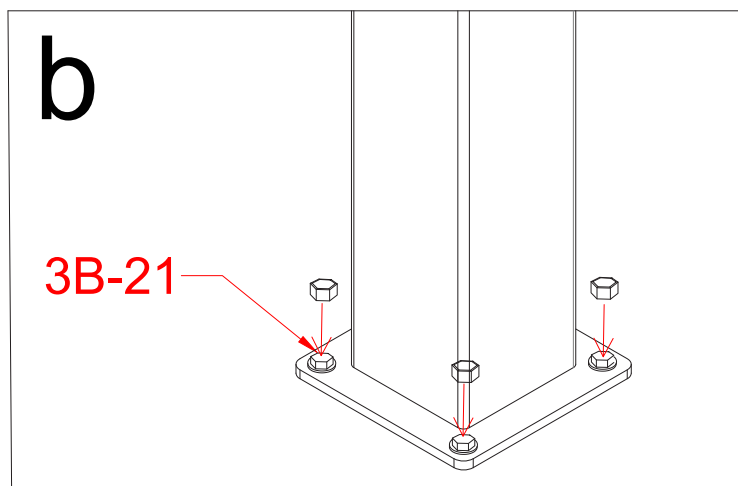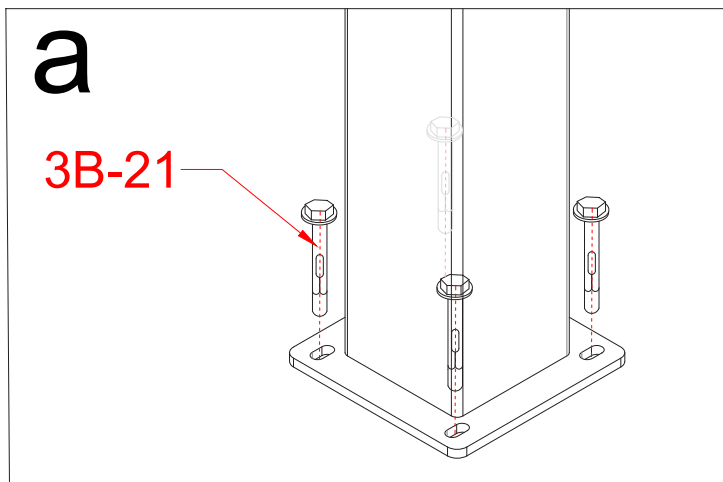


Pls measure the diagonal size and make sure the diagonal size keeps same before screw 3B-21 mounted. If not, pls adjust it to same size.




3B-21		16
-------	---	----

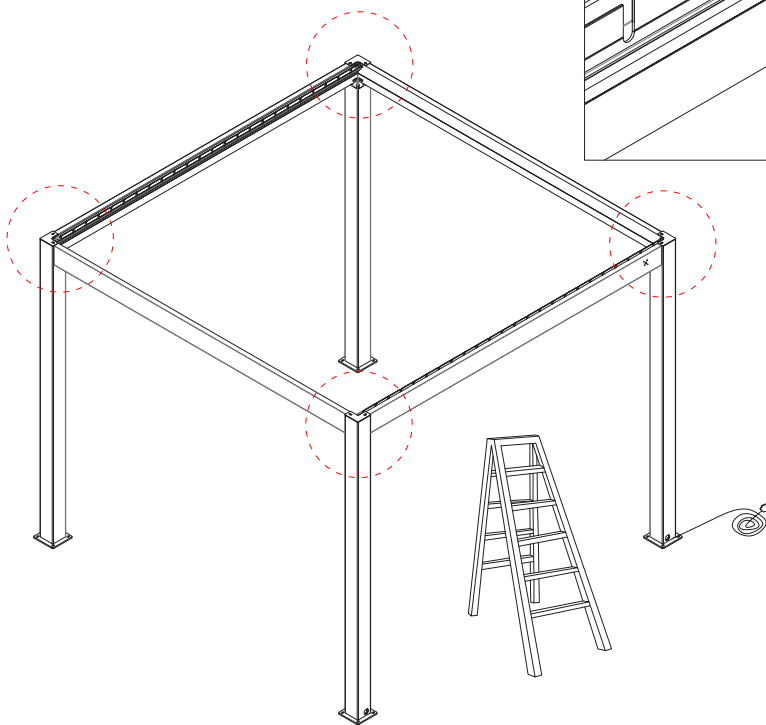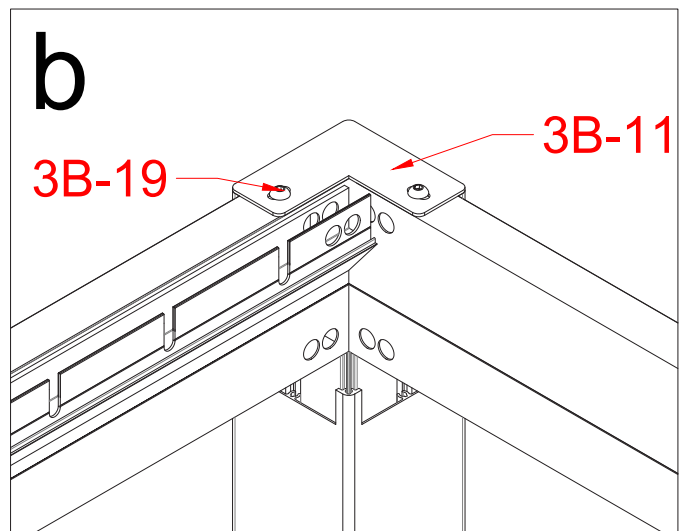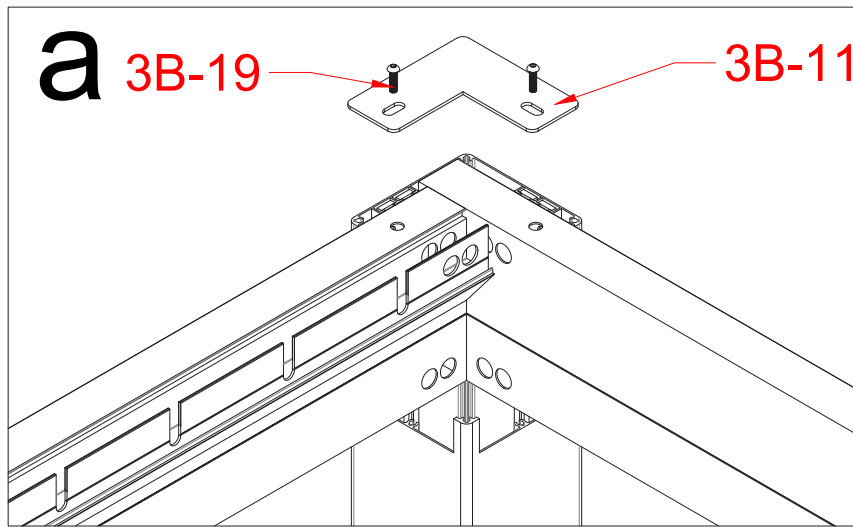

3B-11		4
3B-19		8


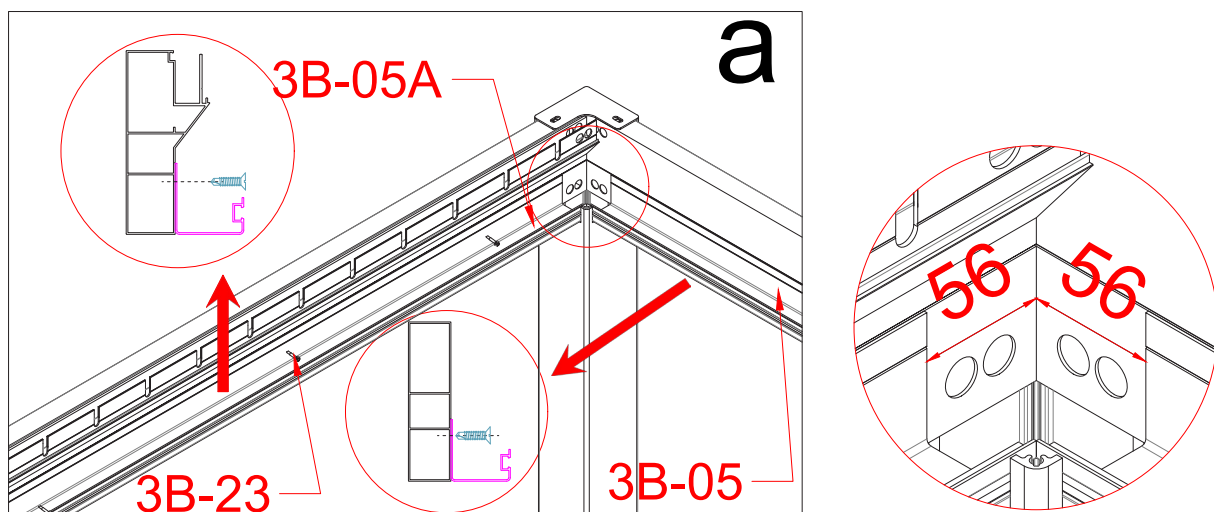





Warning:
Before installation, tear off the protective film on the back side of Gutter.

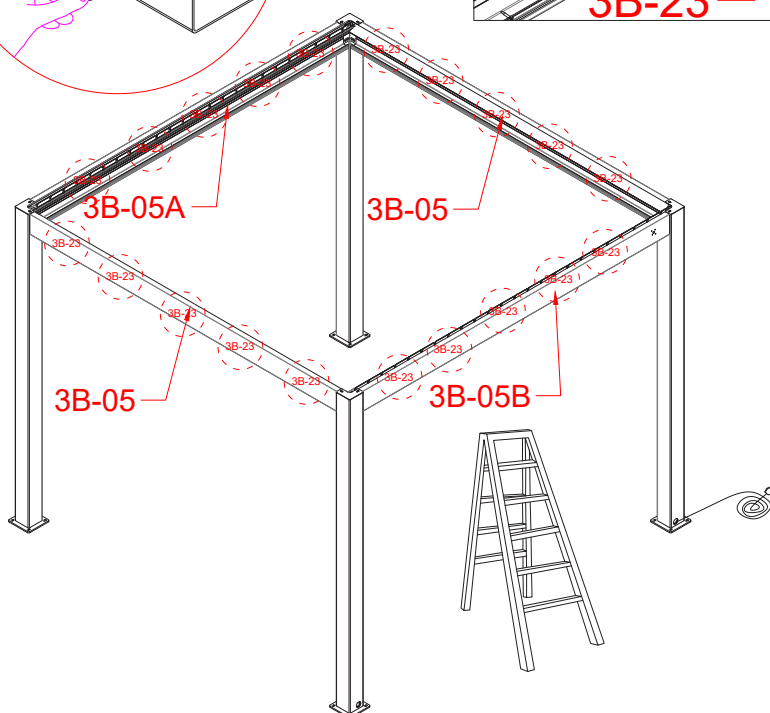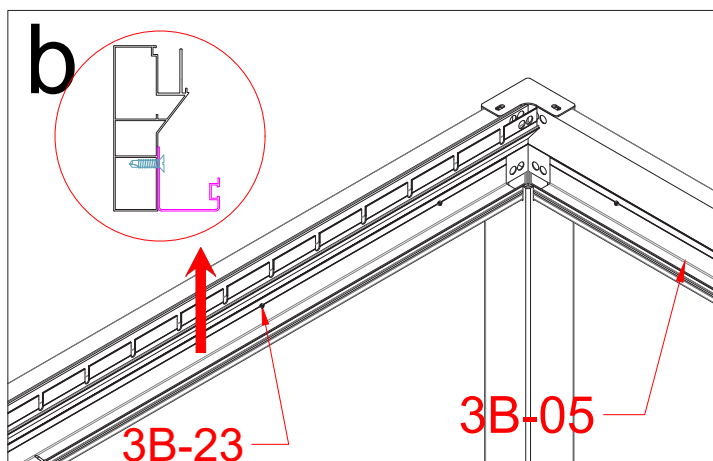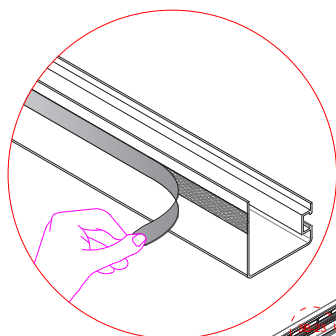





3*3m-16	4screws/3m side
3*4m-18	4screws/3m side 5screws/4m side

3B-05		4
3B-23		x

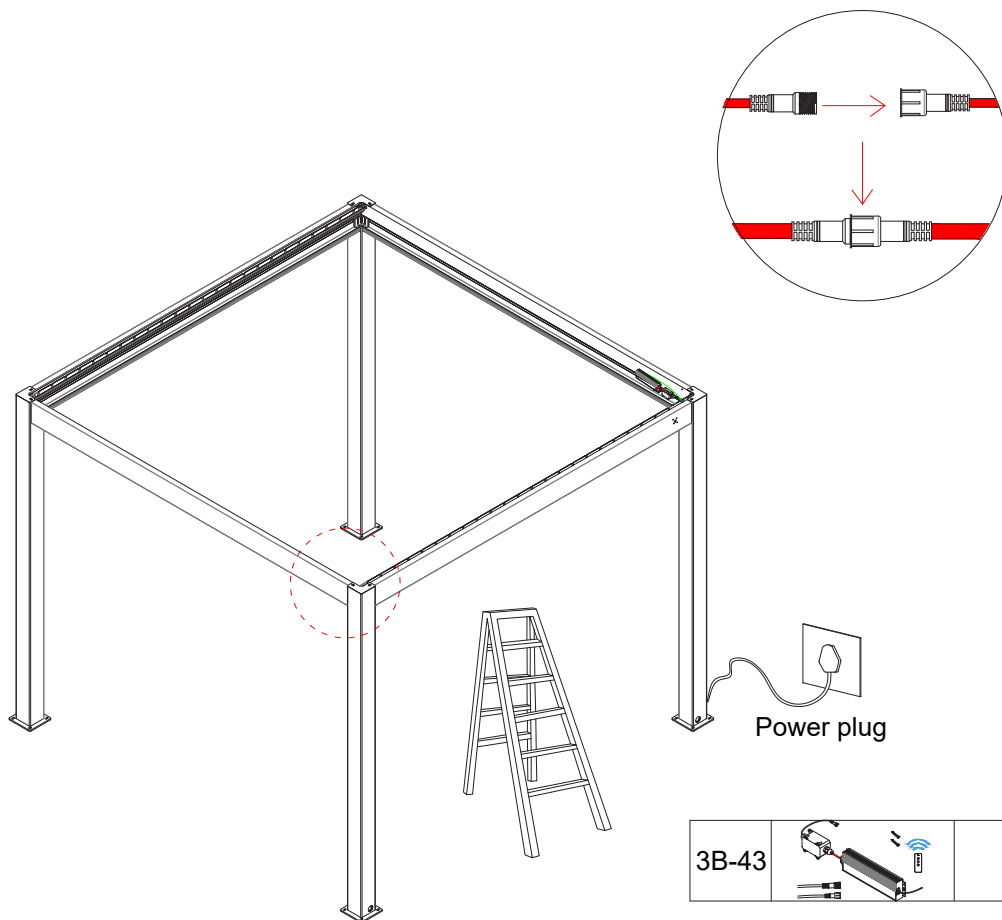
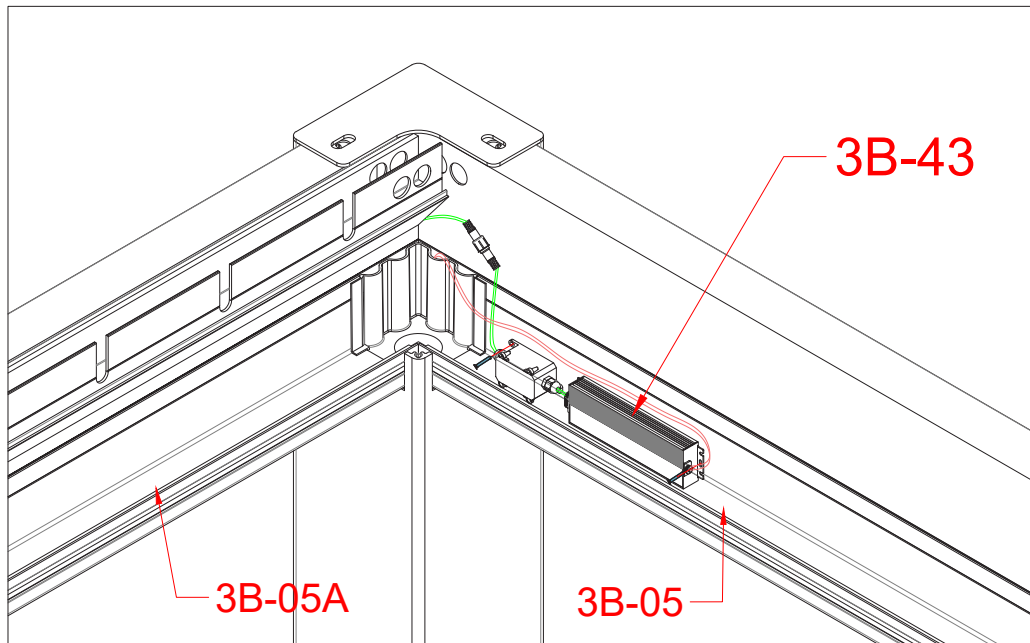


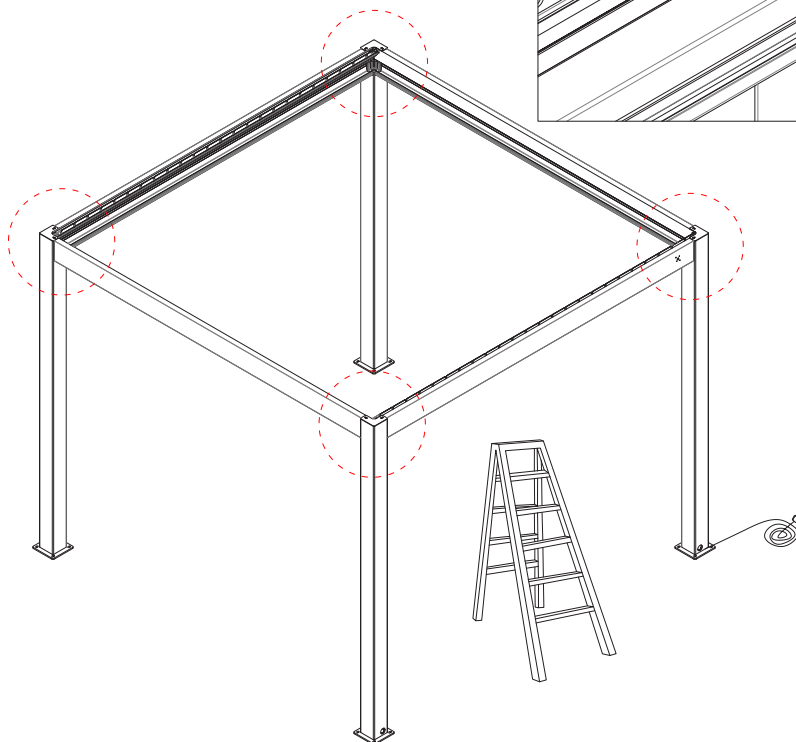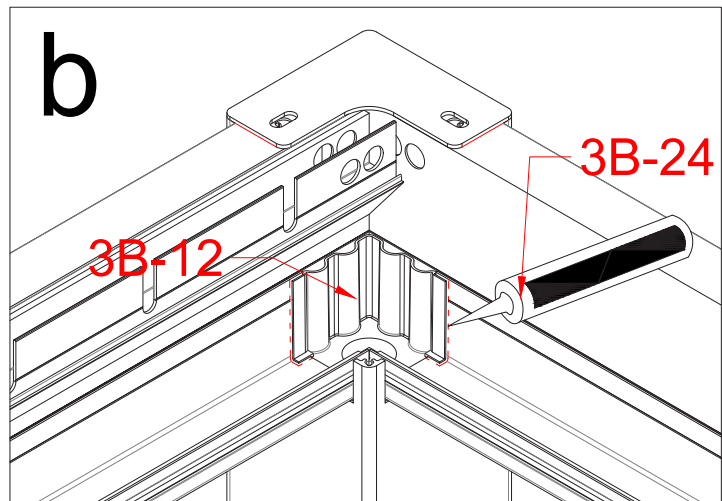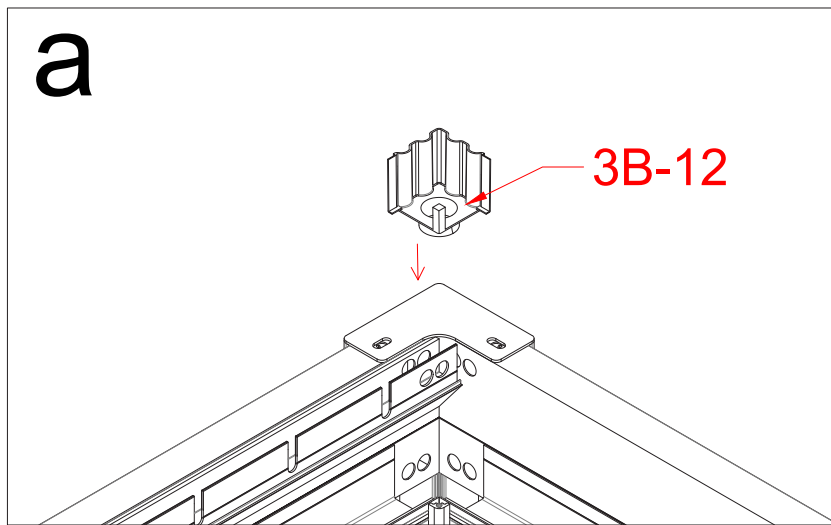







3B-24		1
3B-12		4

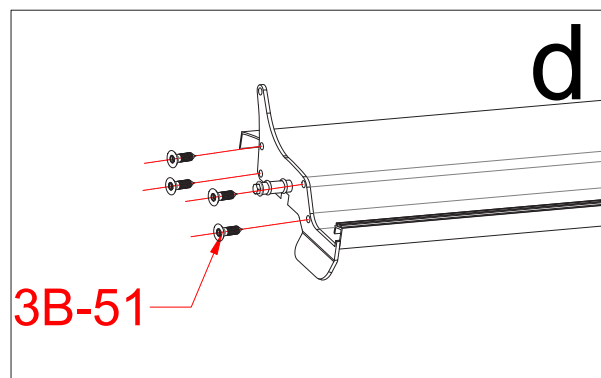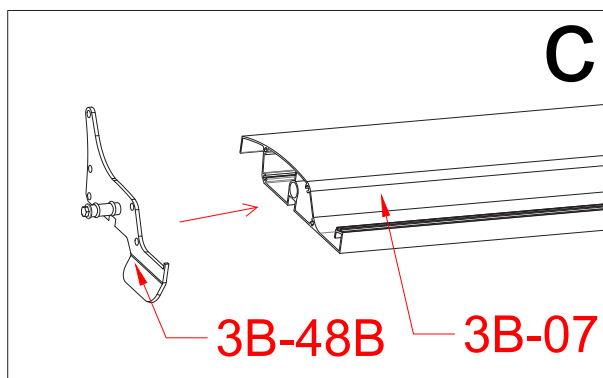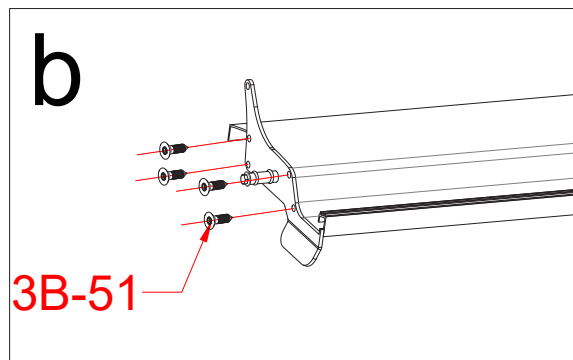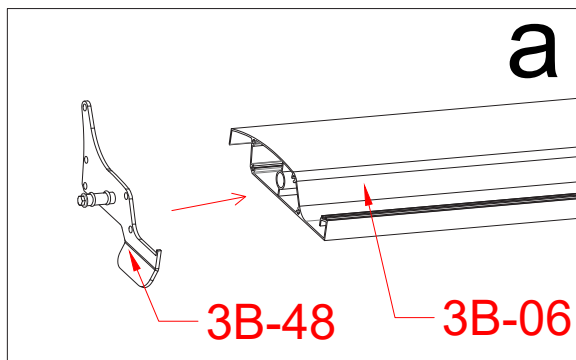





When installing the end cap for louvers, pls don't use the highest gear shift.

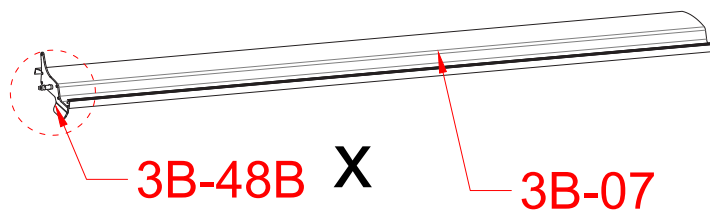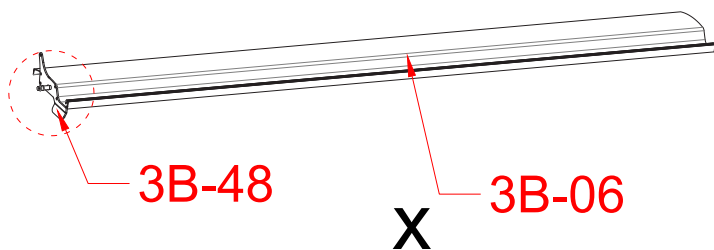


3B-64		1
3B-51		X*4
3B-06		X
3B-07		X
3B-48		X
3B-48B		x

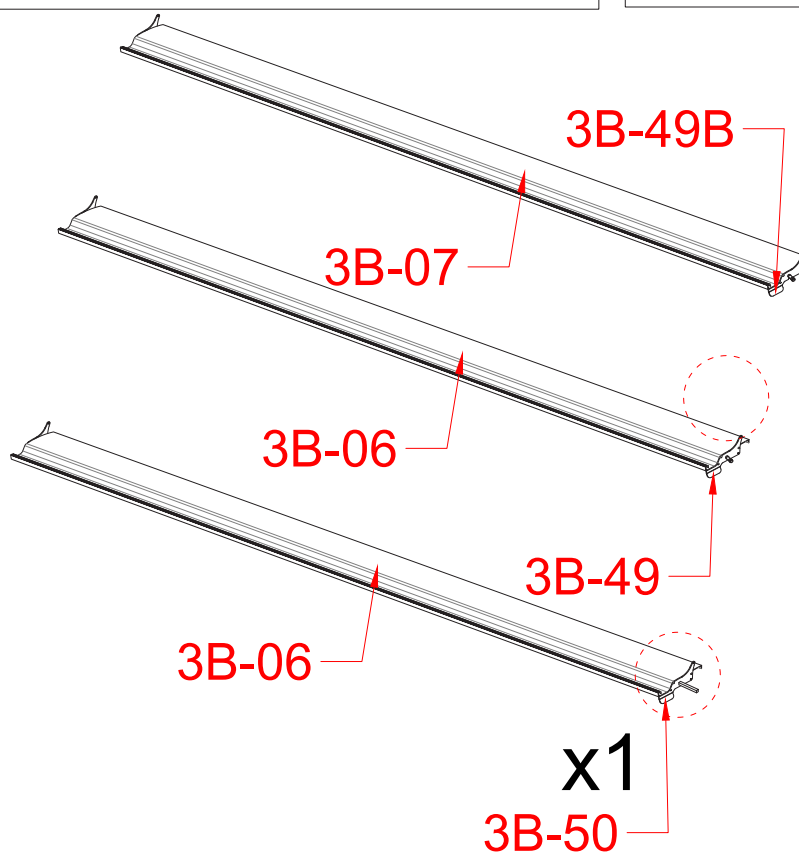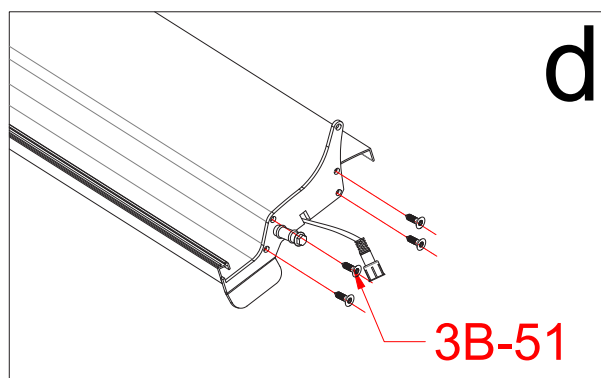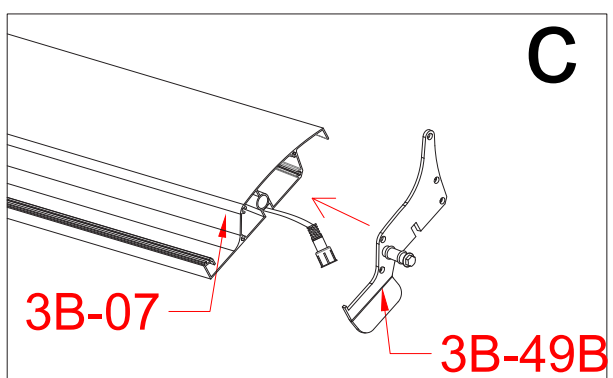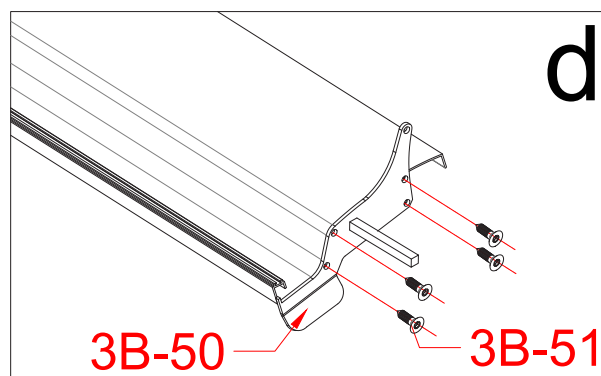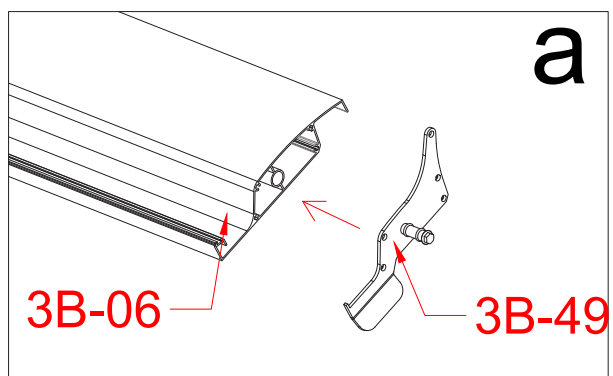

3B-07		X
3B-49B		X
3B-64		1
3B-49		X
3B-50		1
3B-51		X*4

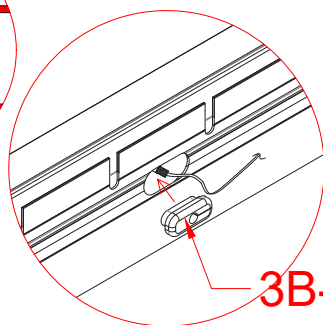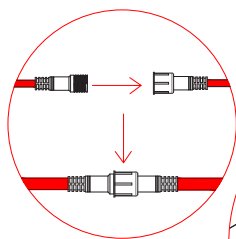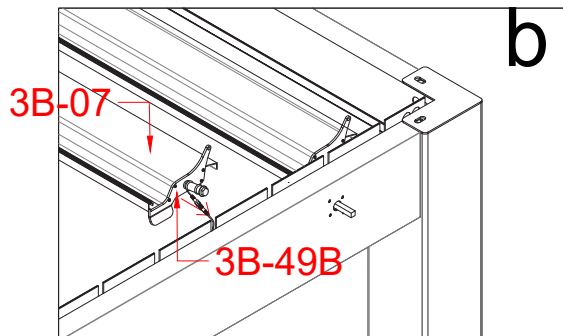
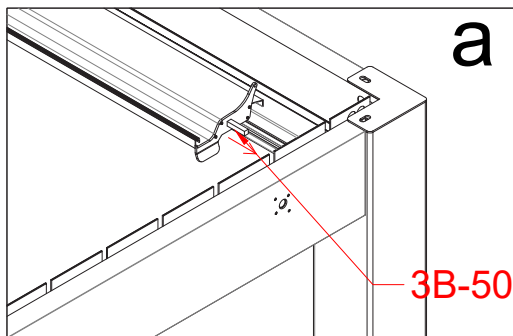


3B-57

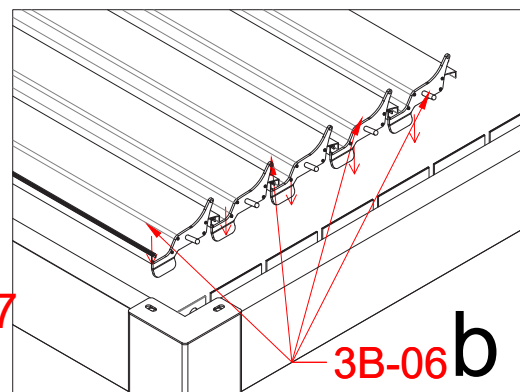


3B-06


Connecting the male and female connectors, then put them into the holes in the main beam, and finally cover plug 3B-57.

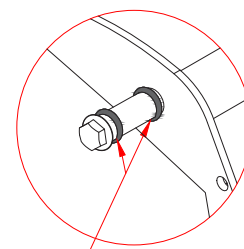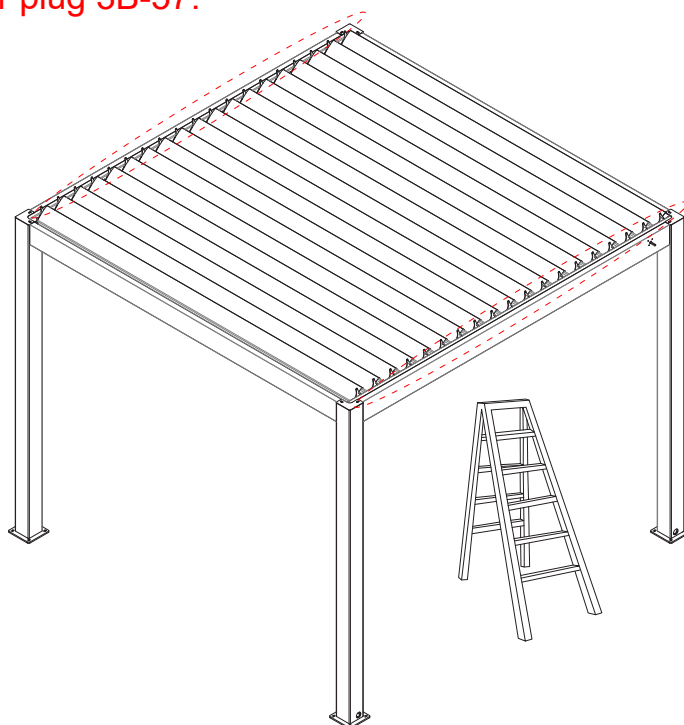



When installing louvers, firstly separate the two rubber gaskets and slide them to both ends of the circular shaft. And please ensure it's closed tightly before next steps of the installation.

3B-57		x
3B-06		x




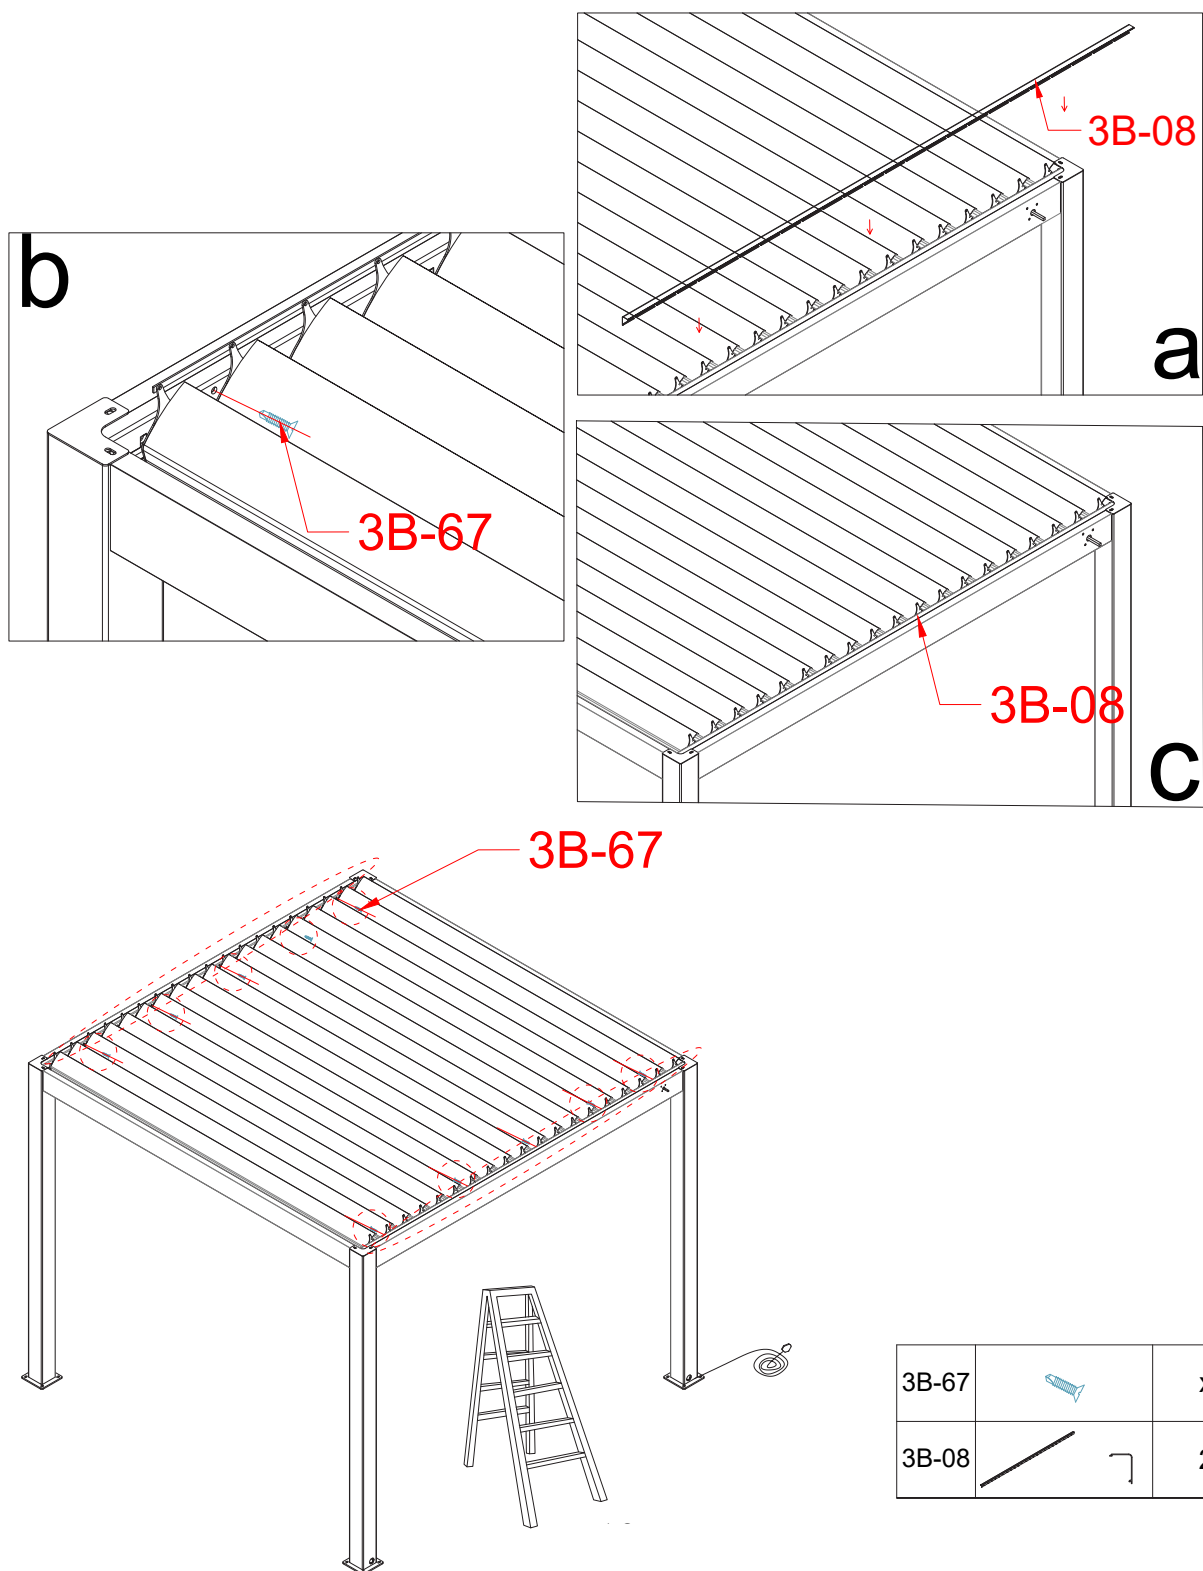


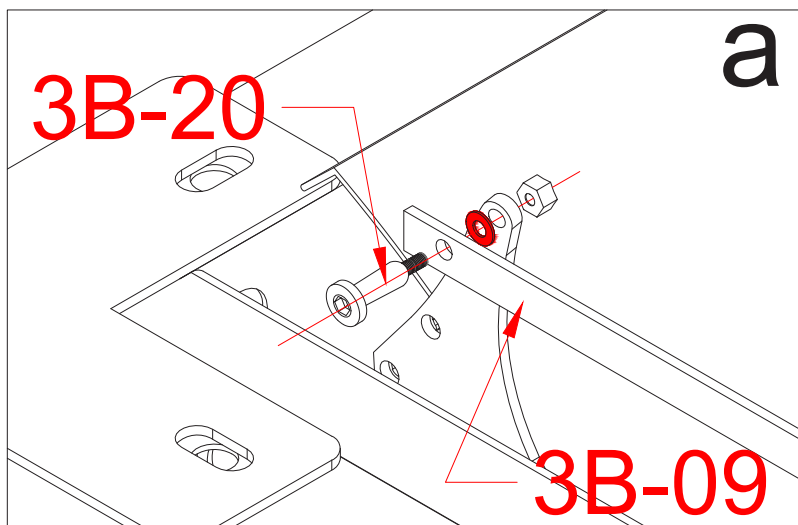




warning:
Bolts must be tightened

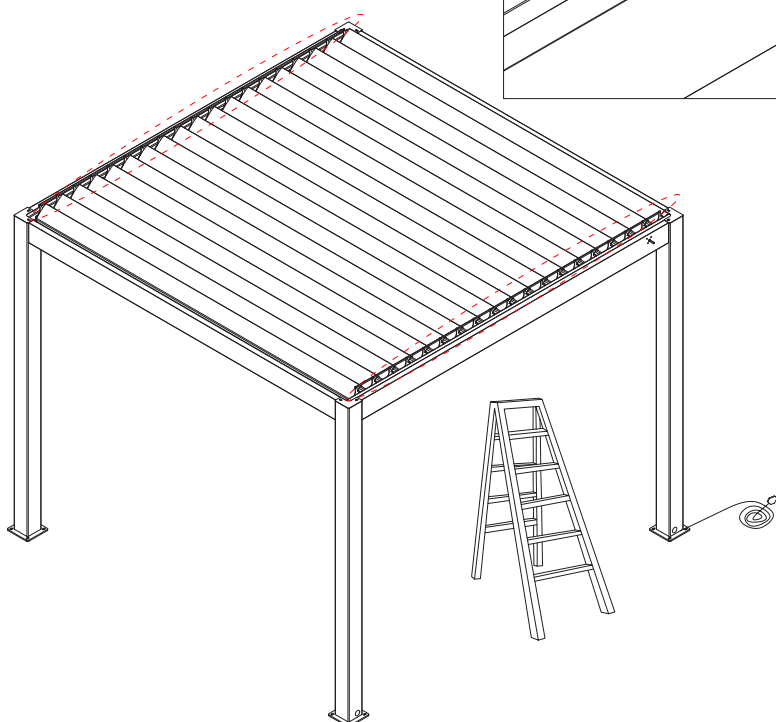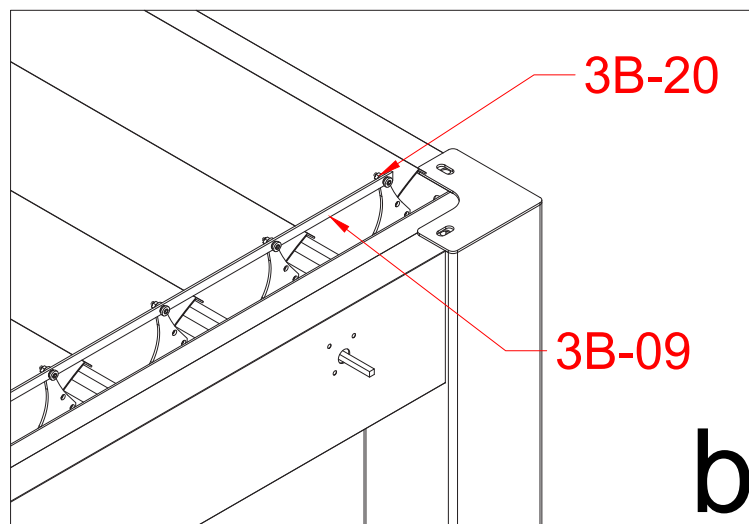


3B-09		2
3B-20		x

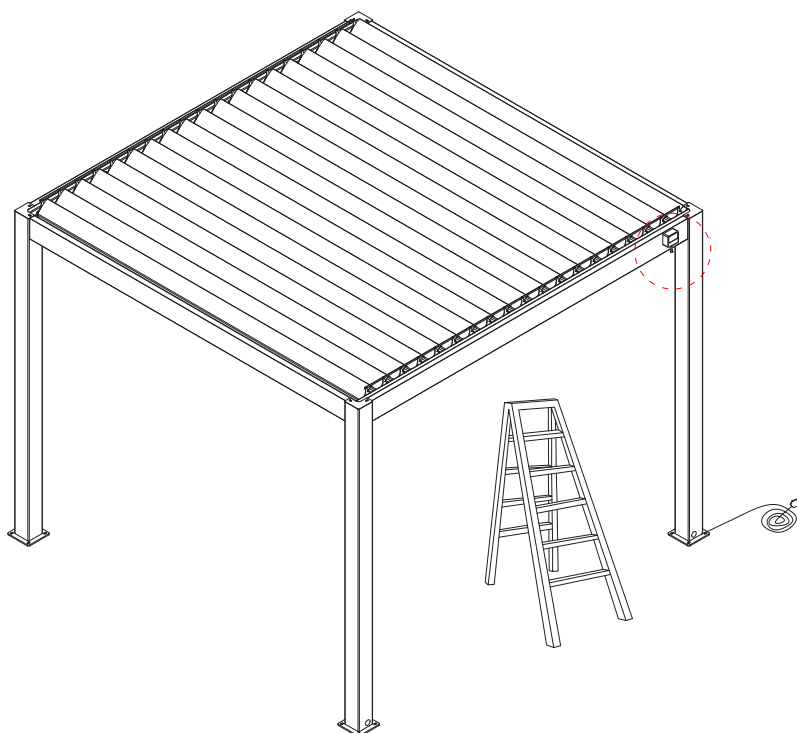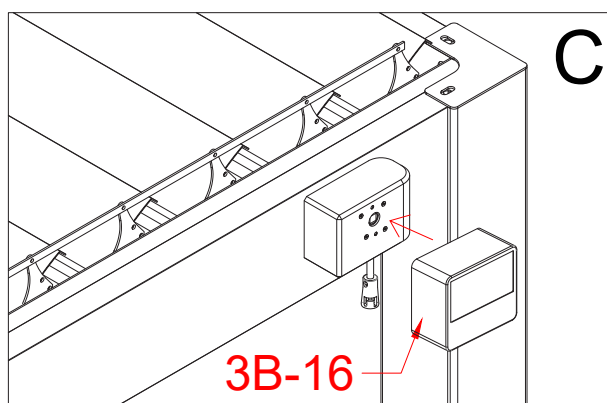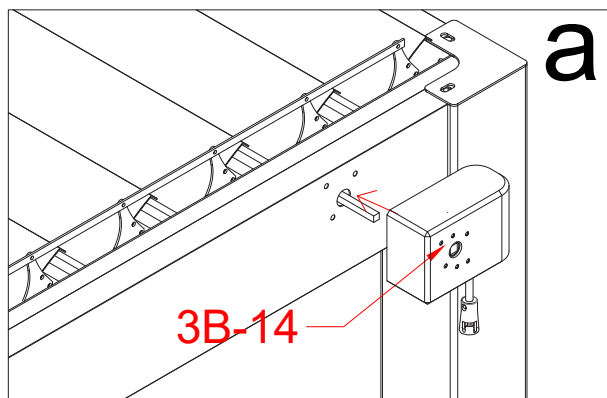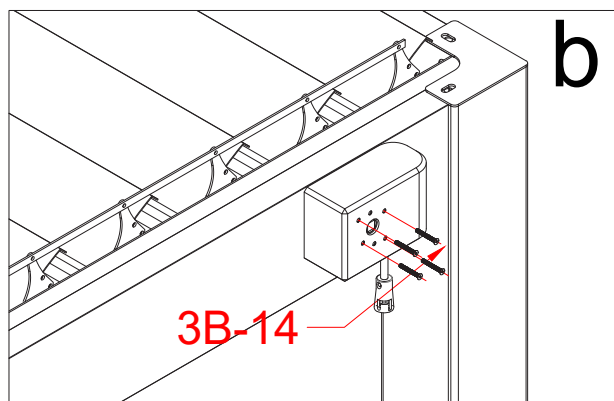



3B-14	 + 	1
3B-16		1

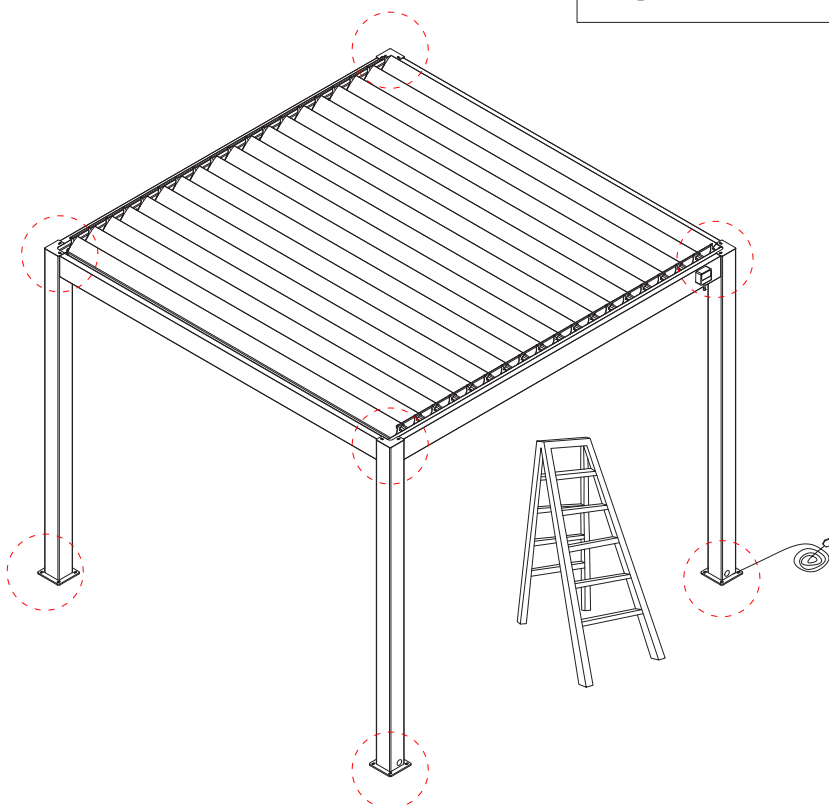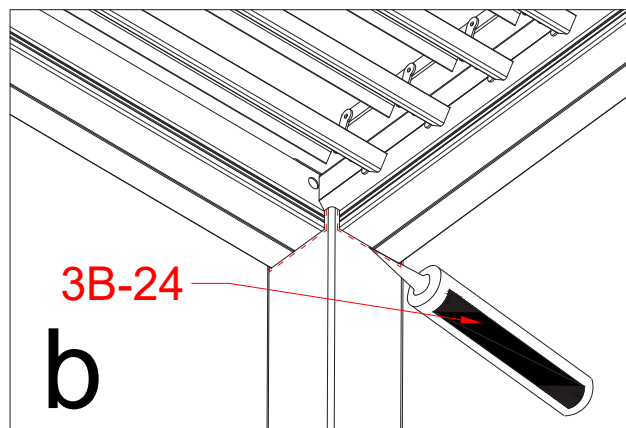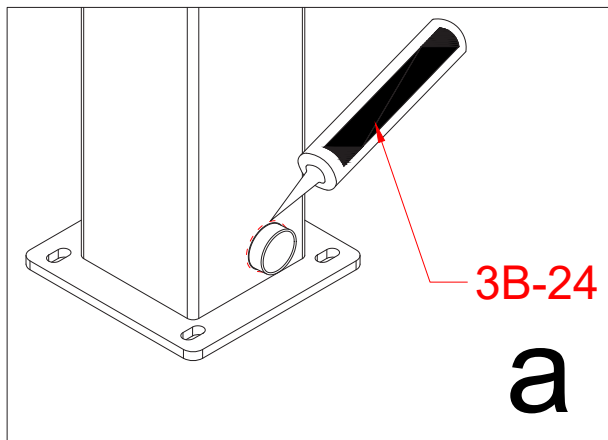

3B-24		1
-------	---	---

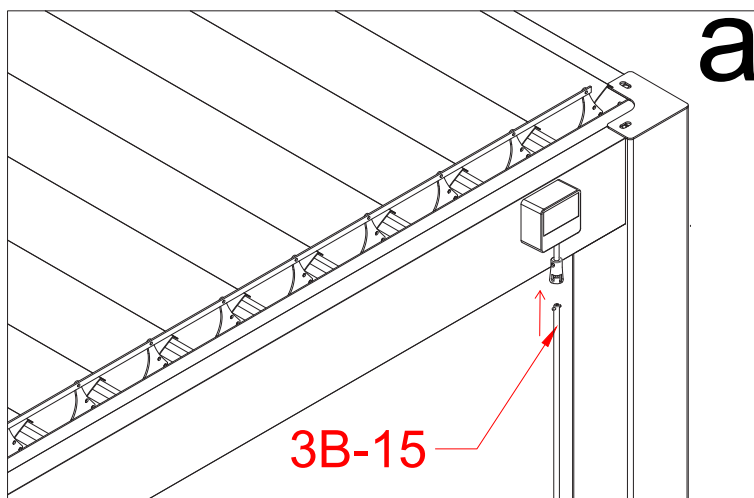

Warning
In Snow / Wind season or in case of
snow / wind forecast open up your shutters
in vertical position to avoid any damaging
on your pergola.

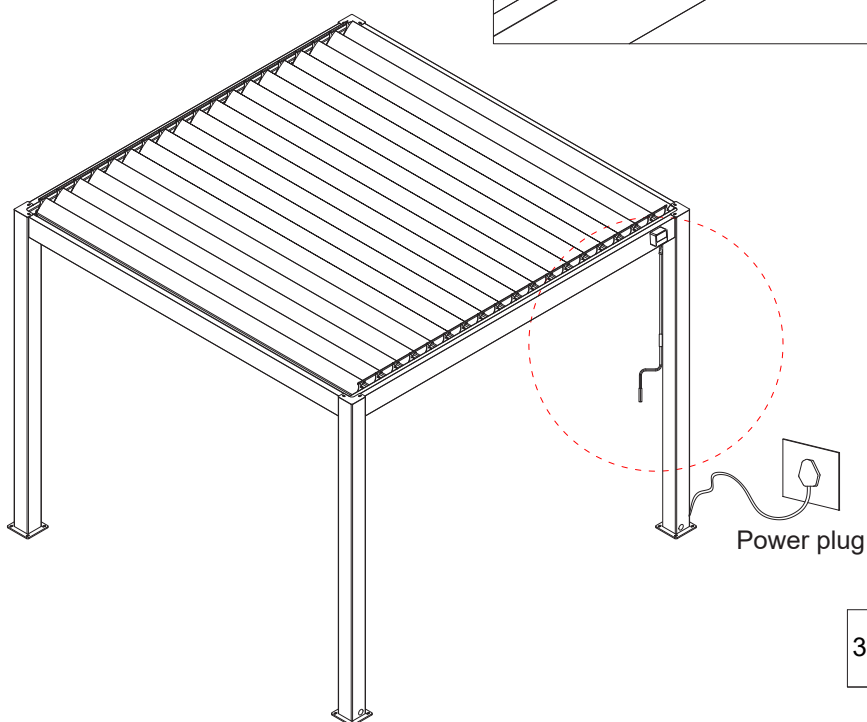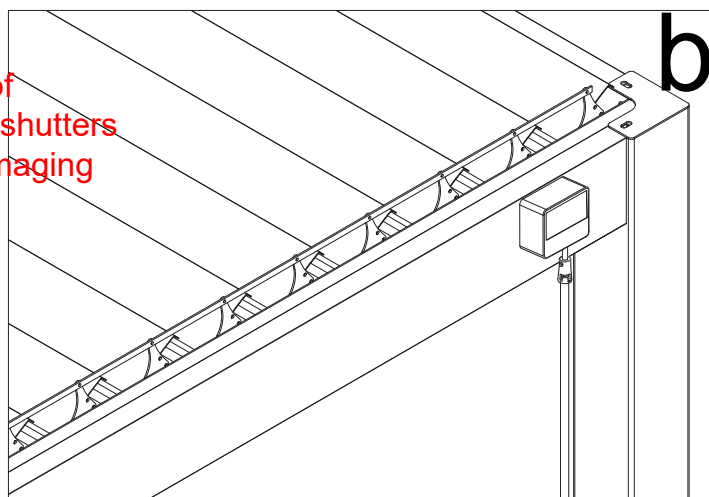

3B-15		1
-------	---	---