




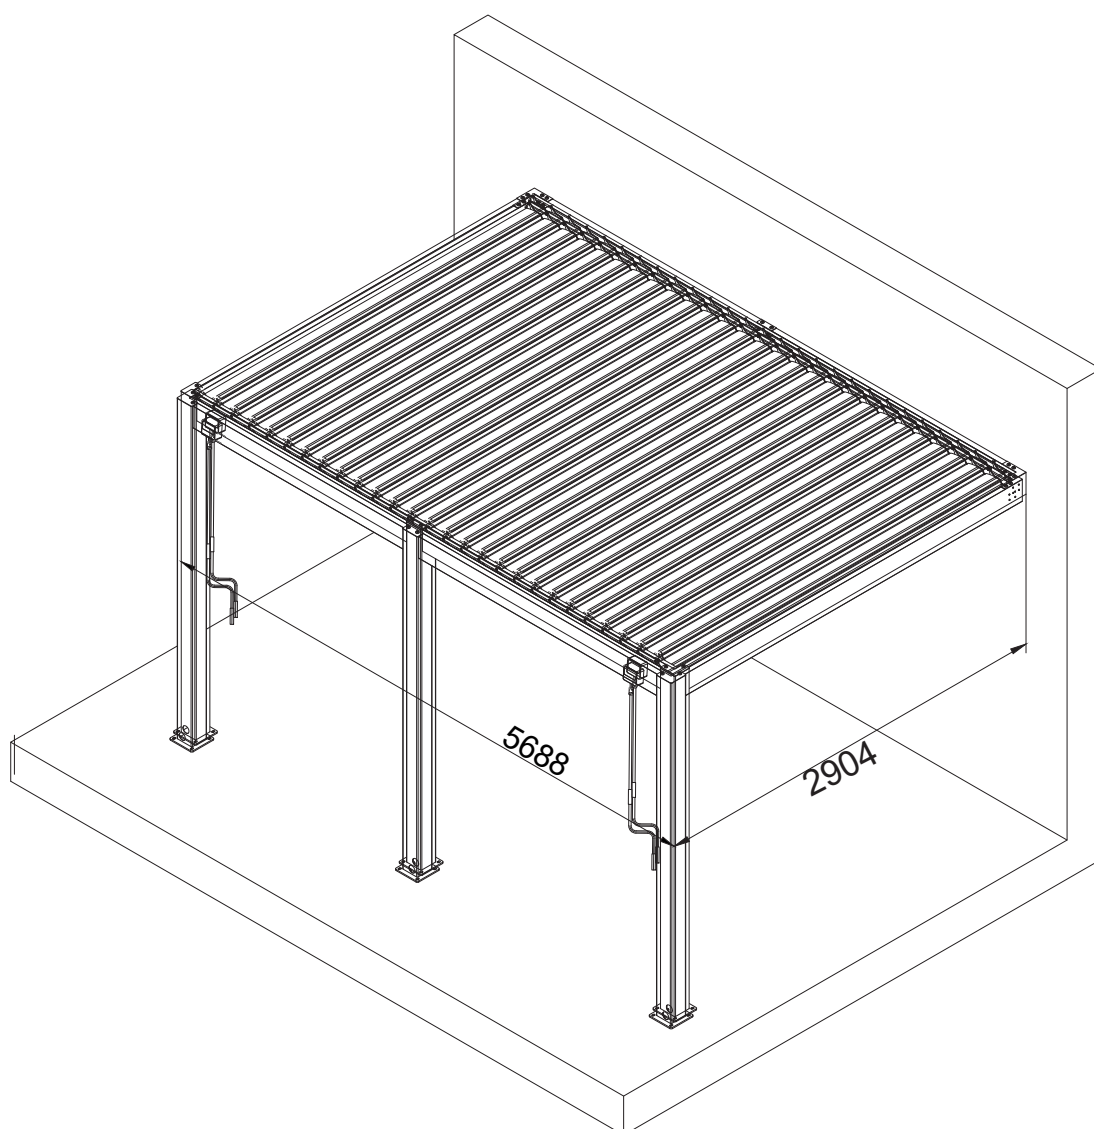






MANUAL PERGOLA WALL MOUNTED 2 POSTS 3 x 5m / 3 x 6m

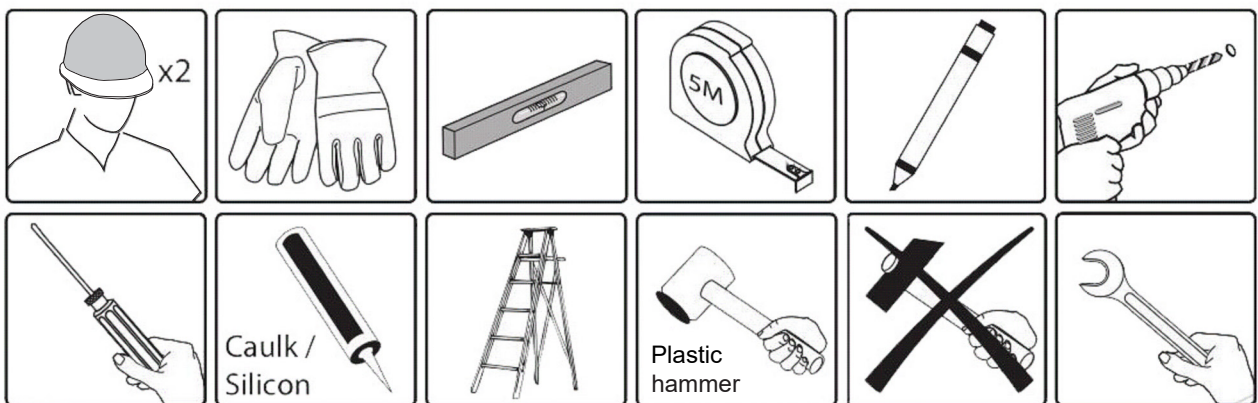

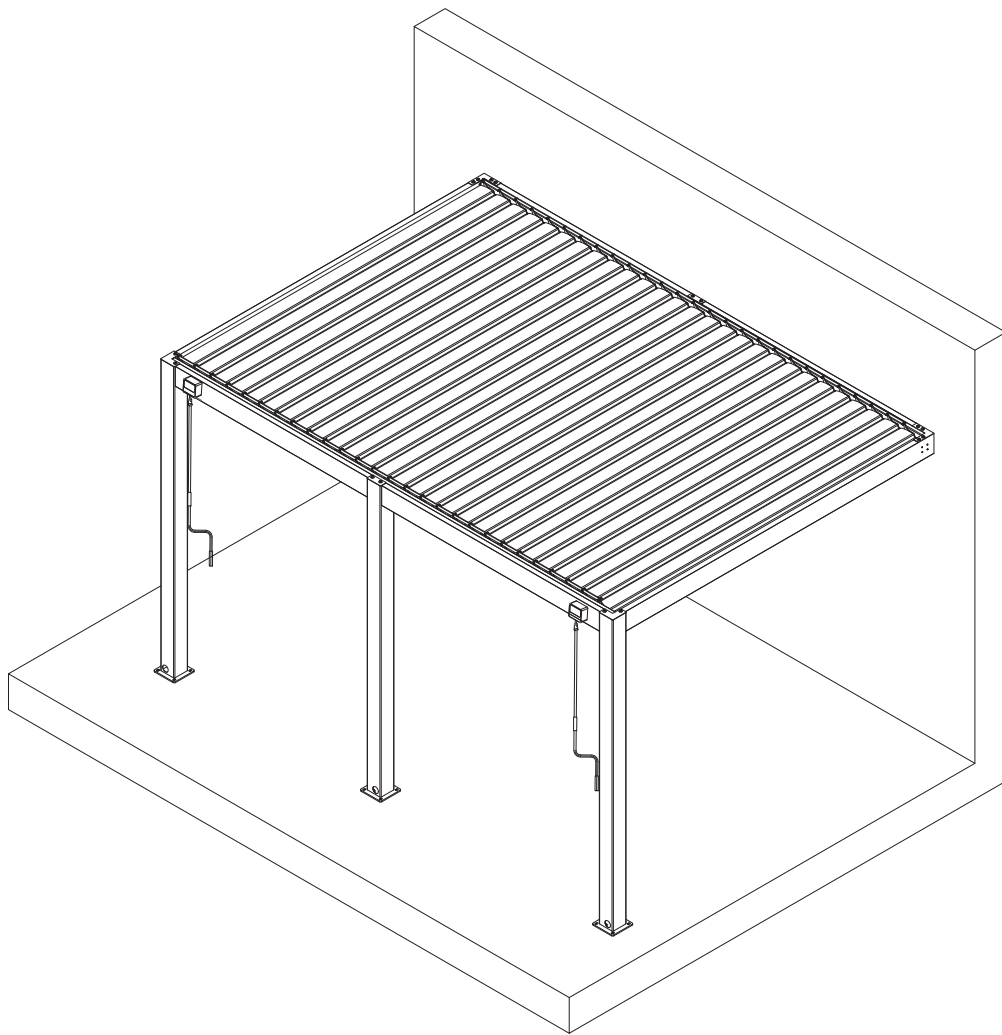


MANUAL PERGOLA WALL MOUNTED 2 POSTS 3 x 5m

Extra parts required for freestanding pergola turned to wall mounted pergola.


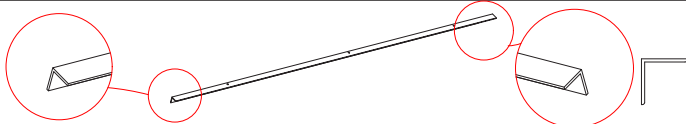
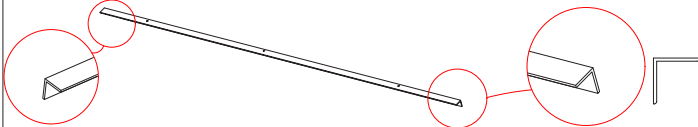



Item	Drawings				Qty
3B-34					1
3B-34B					1
Item	Drawings	Qty	Item	Drawings	Qty
3B-35		2	3B-24		3
3B-26B		1			
3B-36		16+			
3B-38	 M5.5*25	8			
3B-40		2			
3B-41		2			
3B-42	 P M8*20	12+			
3B-39	 M8*60	16+			

MANUAL PERGOLA WALL MOUNTED 2 POSTS 3 x 5m

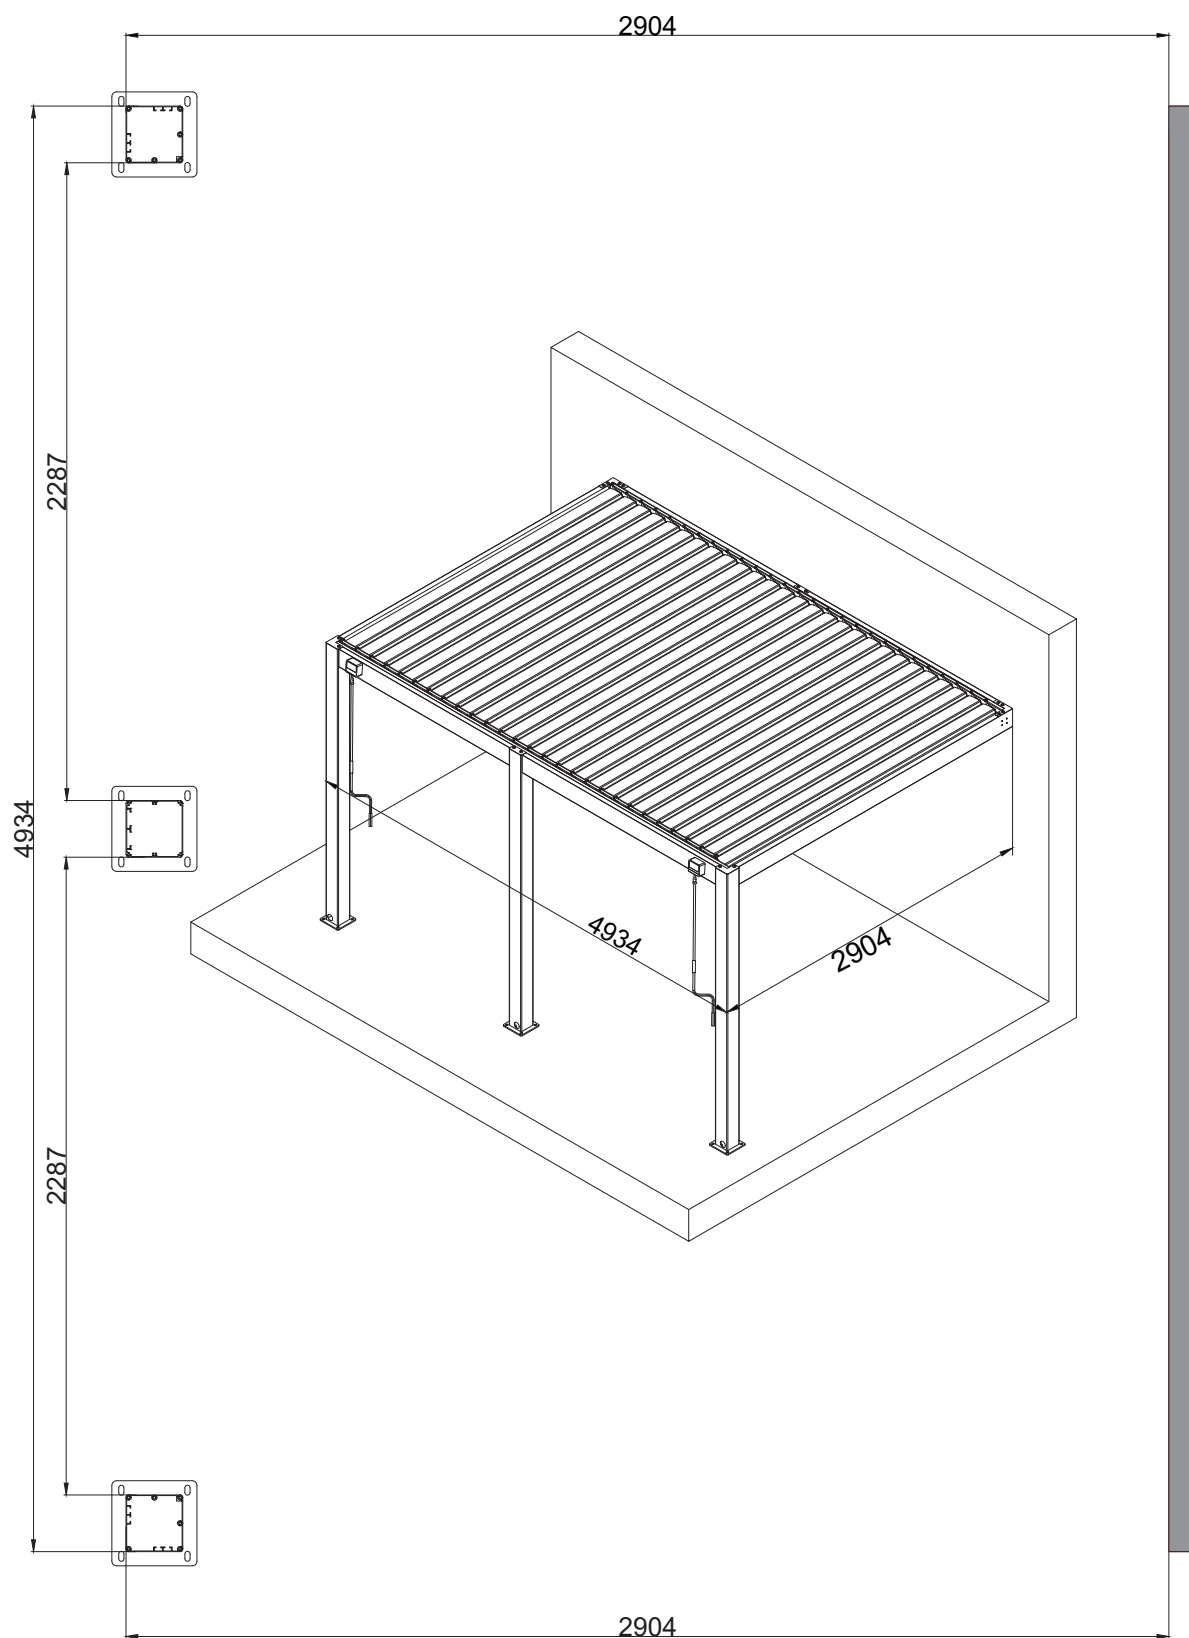



MANUAL PERGOLA WALL MOUNTED 2 POSTS 3 x 6m

Extra parts required for freestanding pergola turned to wall mounted pergola.

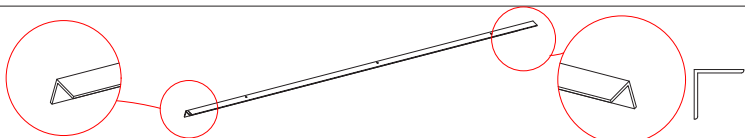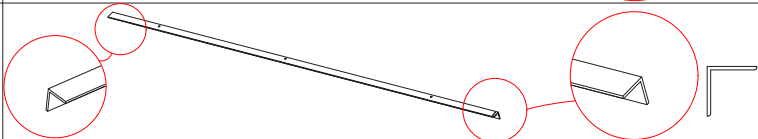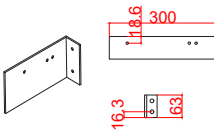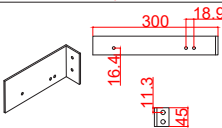Item	Drawings				Qty
3B-34					1
3B-34B					1
Item	Drawings	Qty	Item	Drawings	Qty
3B-35		2	3B-24		4
3B-26B		1			
3B-36		16+			
3B-38	 M5.5*25	8			
3B-40		2			
3B-41		2			
3B-42	 P M8*20	12+			
3B-39	 M8*60	16+			



MANUAL PERGOLA WALL MOUNTED 2 POSTS 3 x 6m

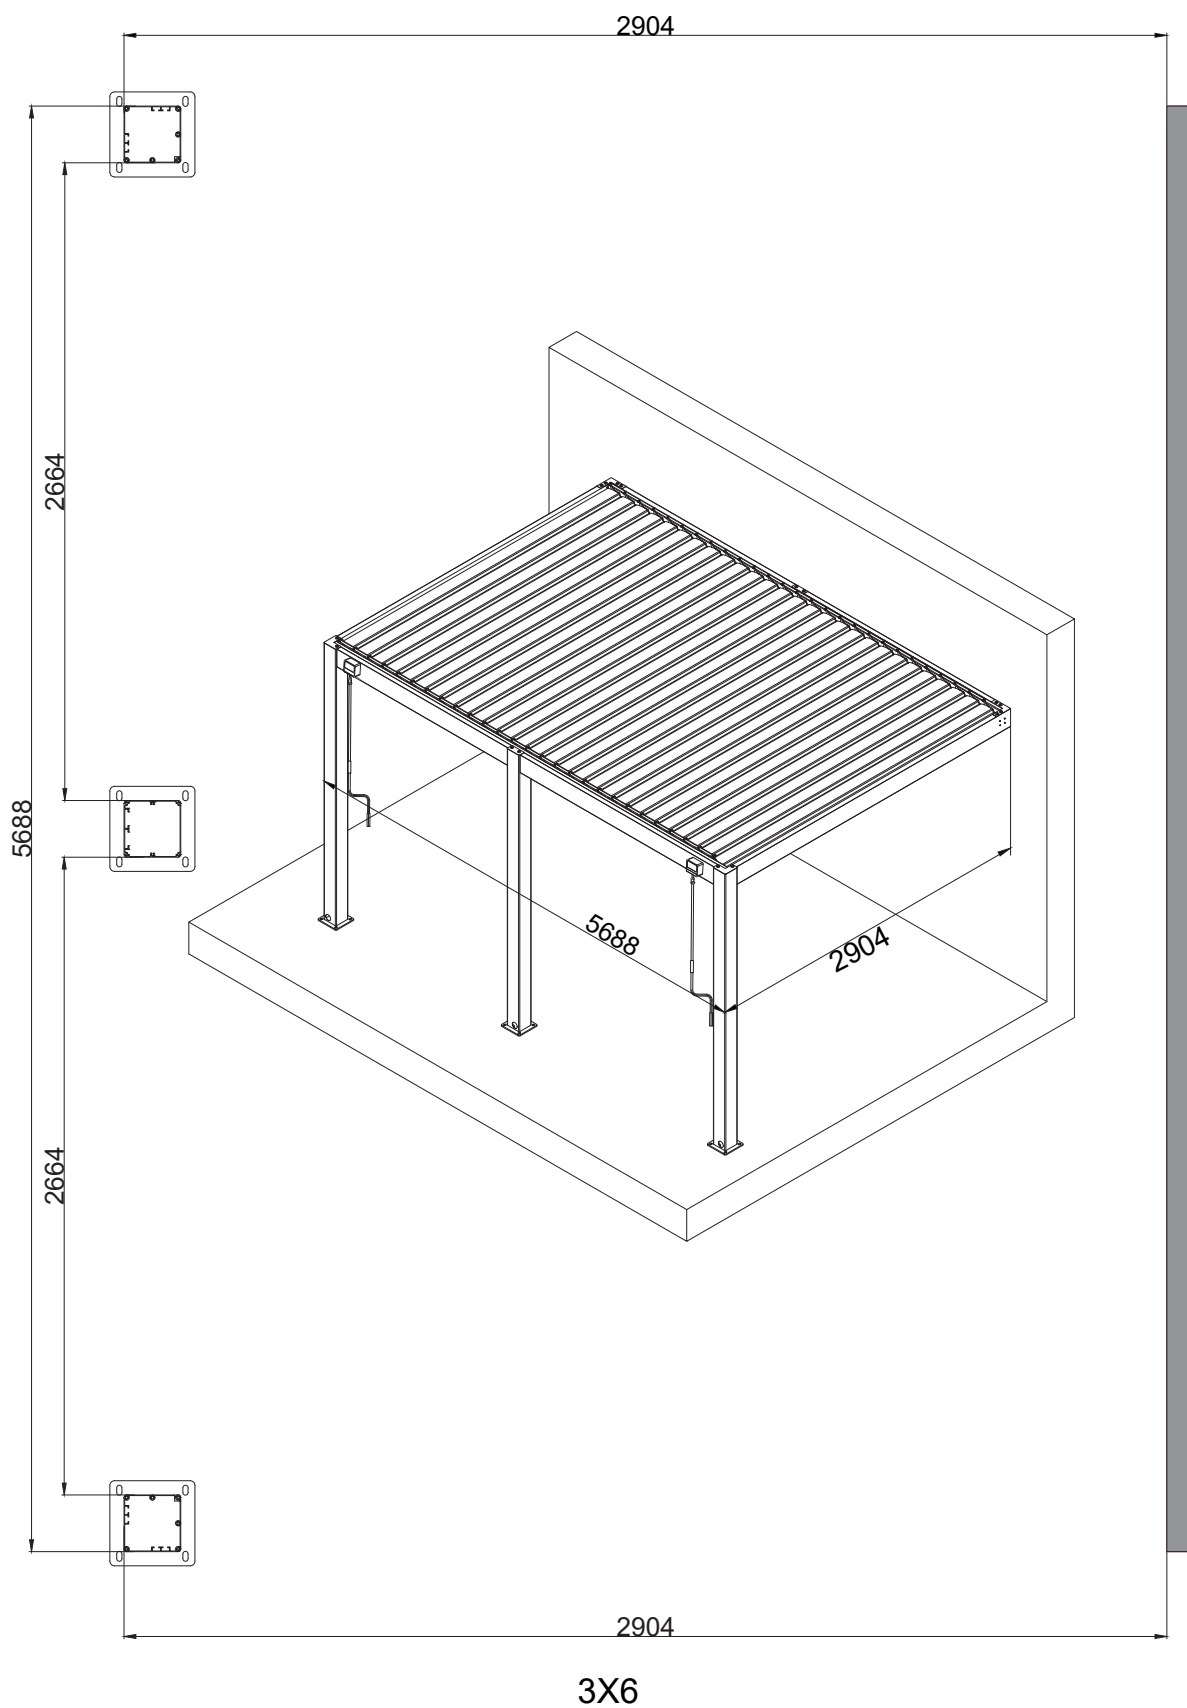


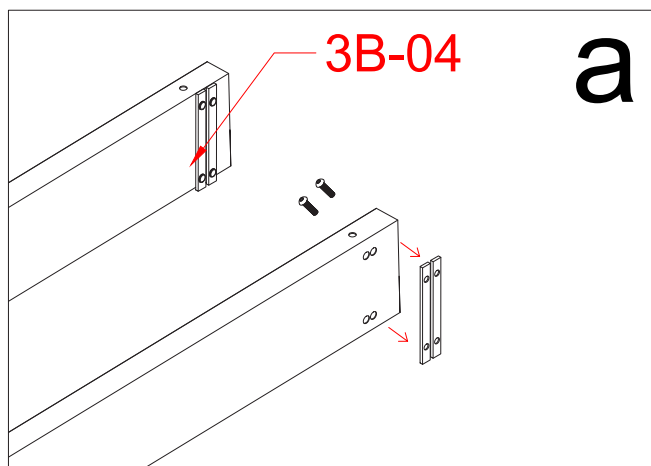



Pls remove one side plug on 3B-04.

Follow the drawing to drill 10mm Oval hole.

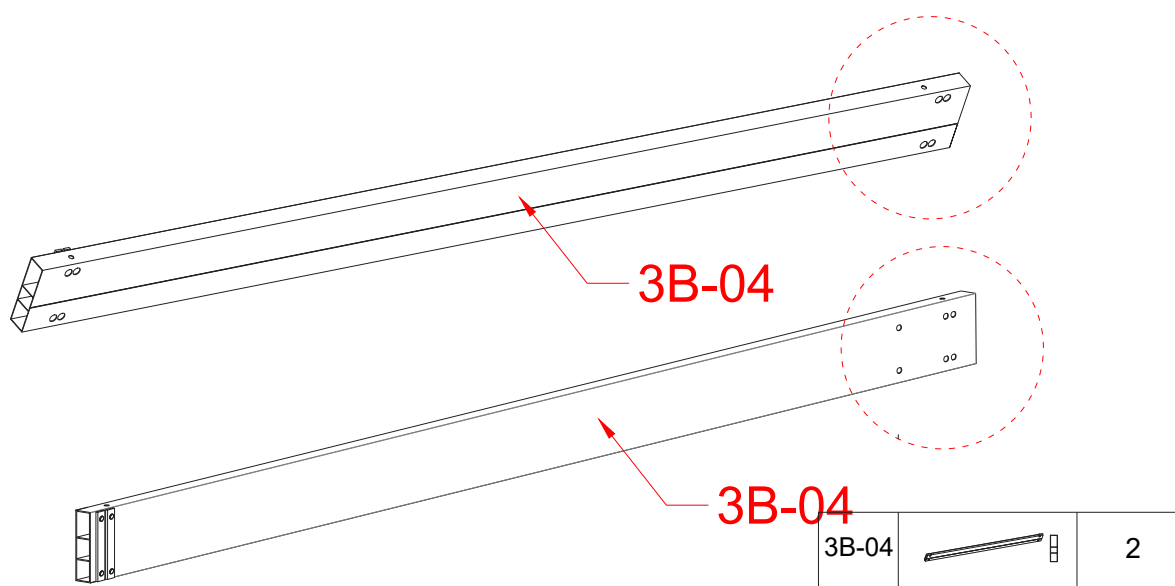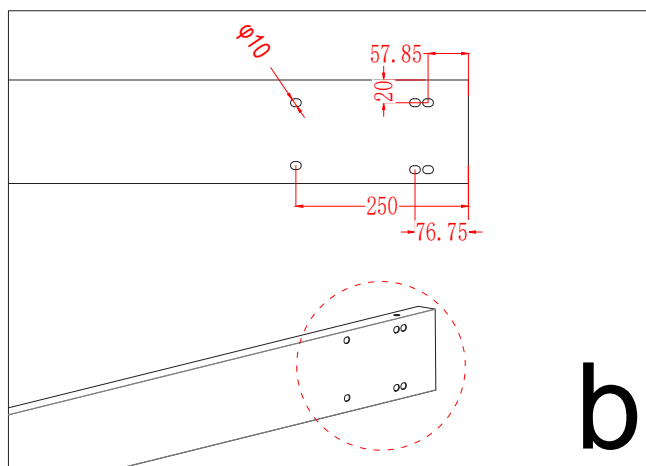


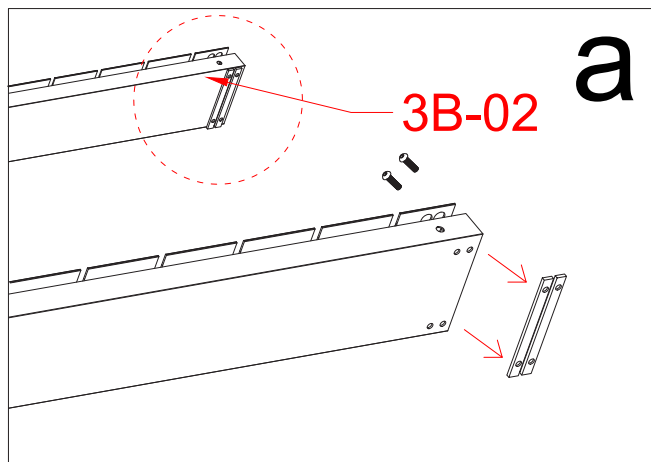



Pls remove both sides
plug on 3B-02/3B-02-2.

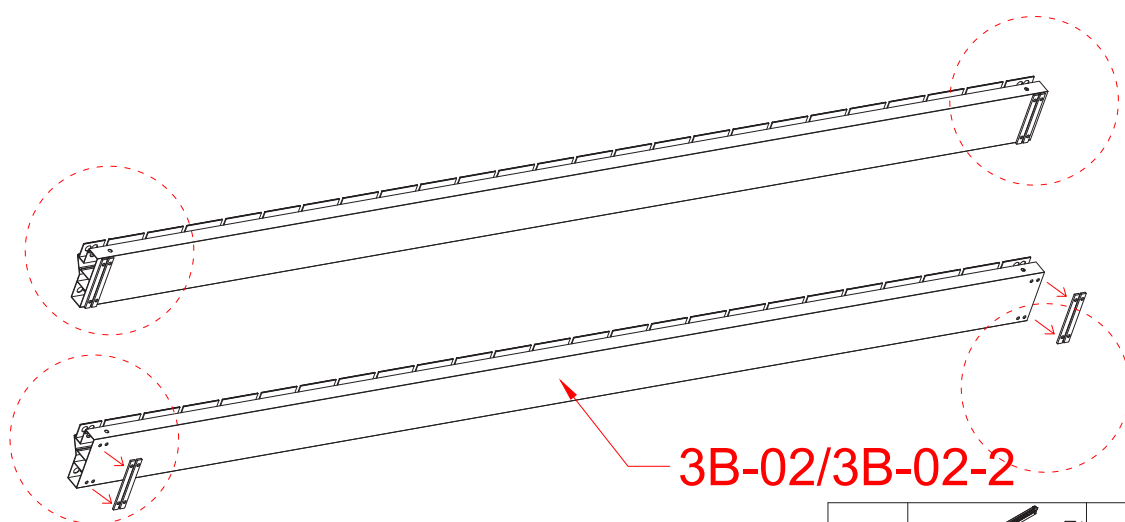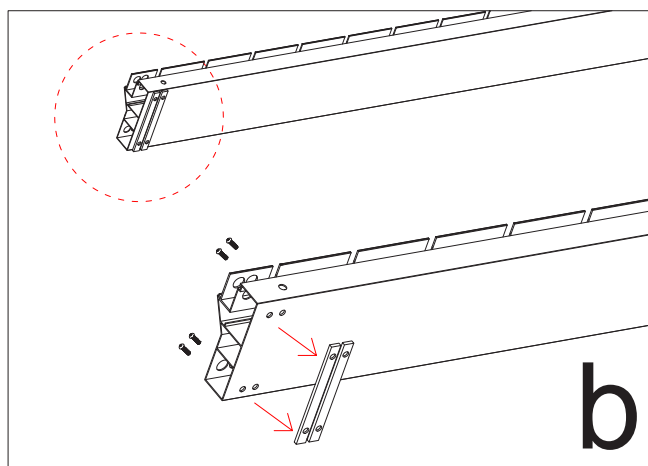





3B-02-2			1
3B-02			1

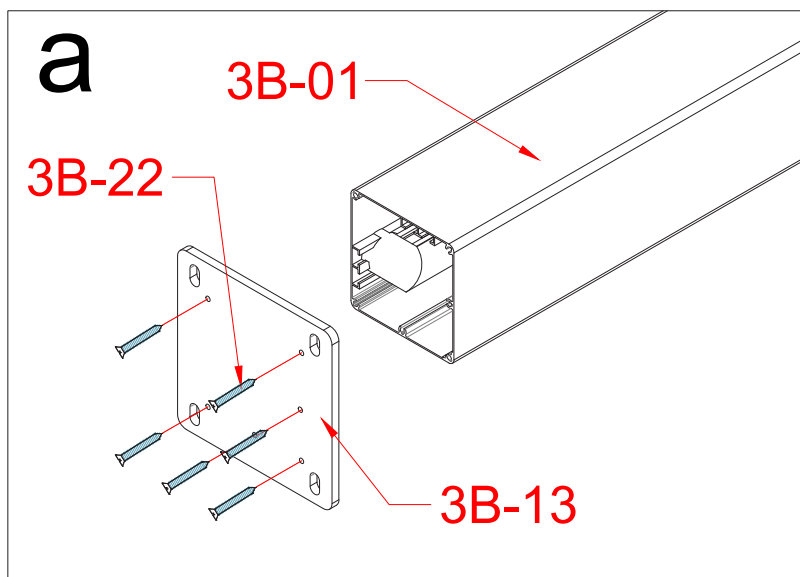





Pls note, if you need to install motorized blind, pls put the cable into post before mounting 3B-13 base plate with post.

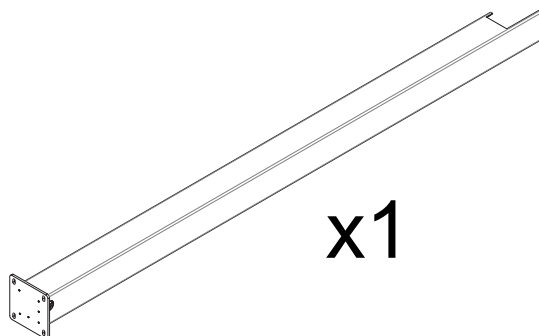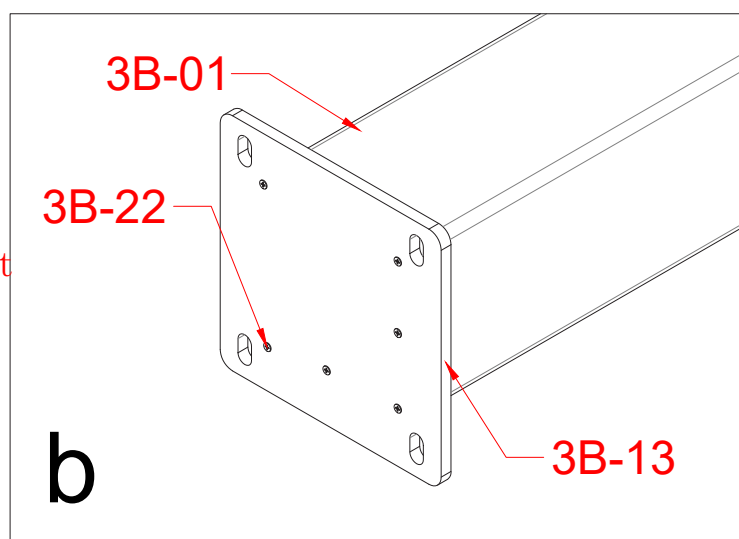




3B-01		1
3B-13		1
3B-22		6

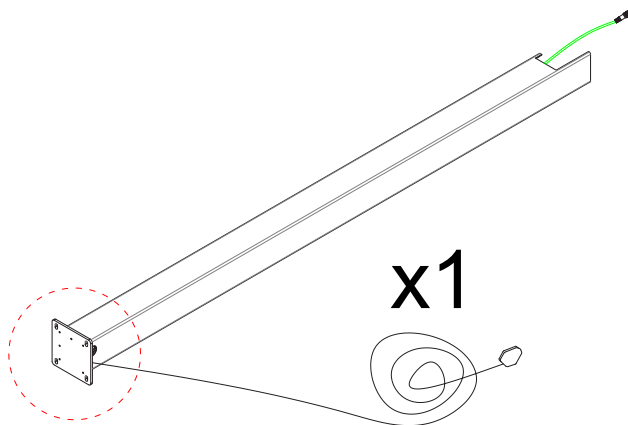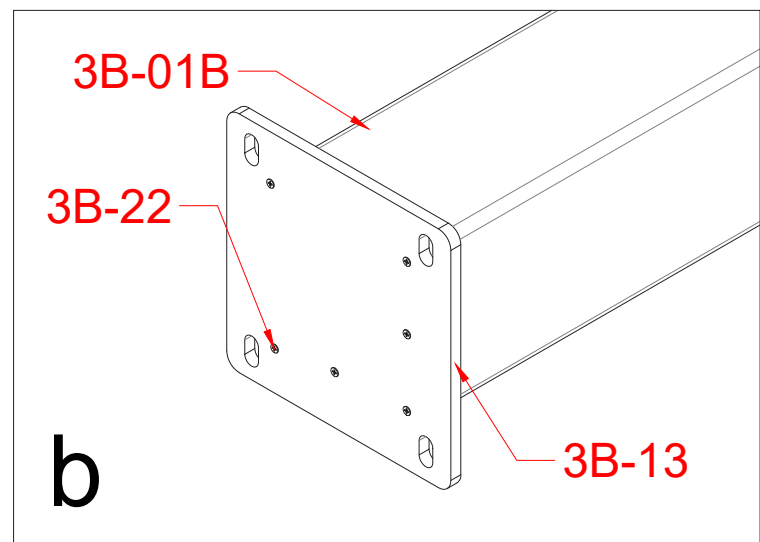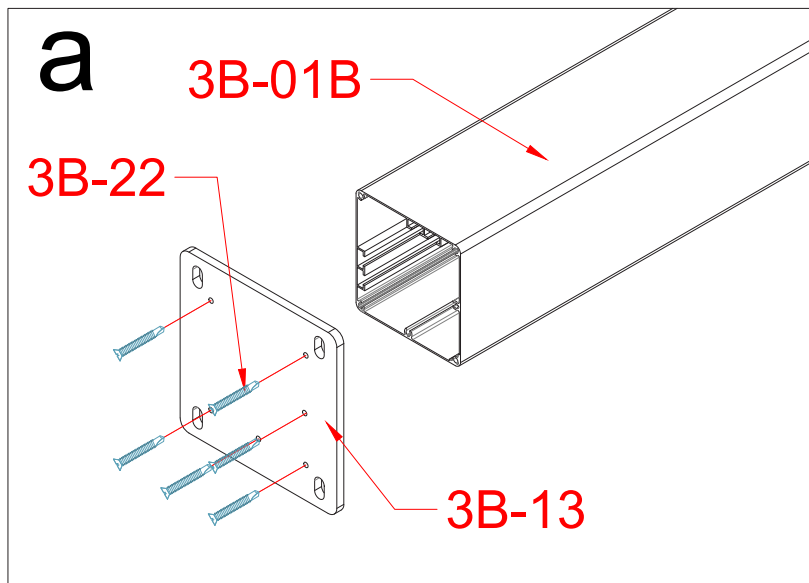




3B-01B		1
3B-13		1
3B-22		6

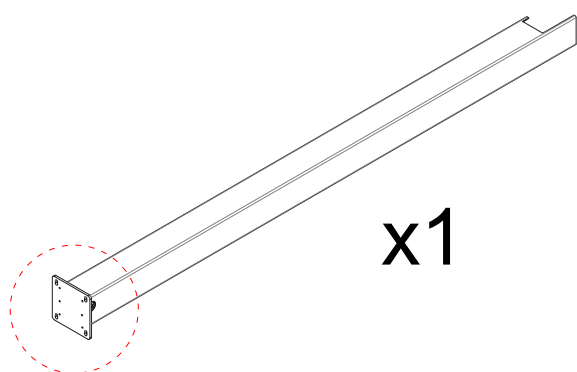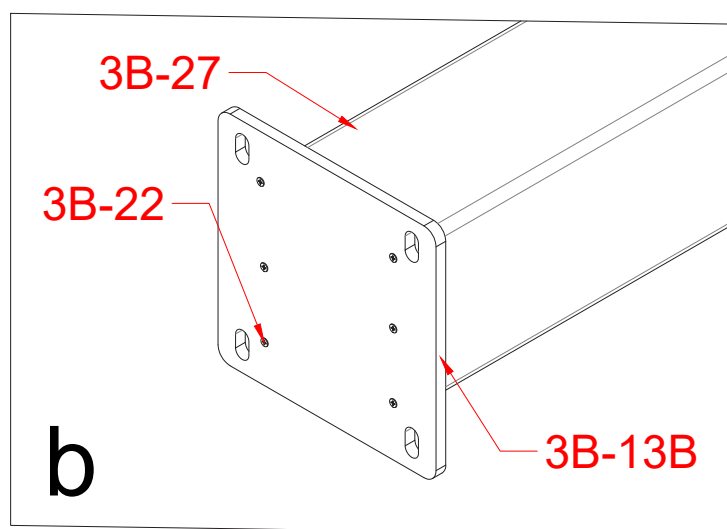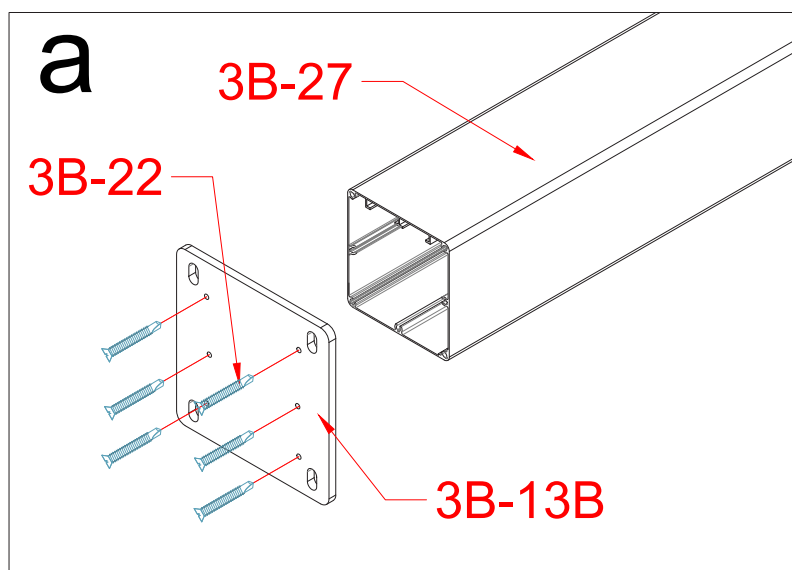





3B-27		1
3B-13B		1
3B-22		6

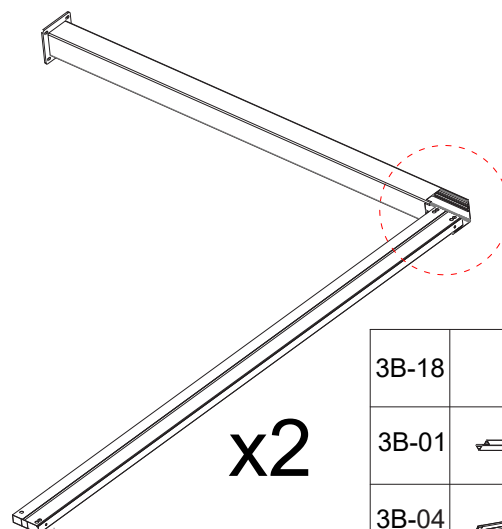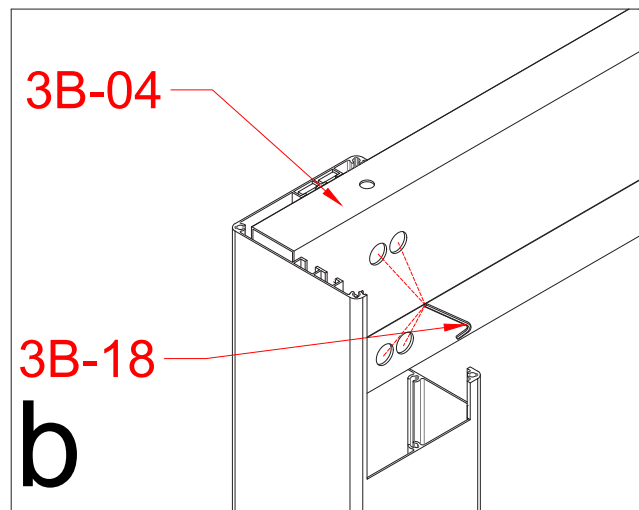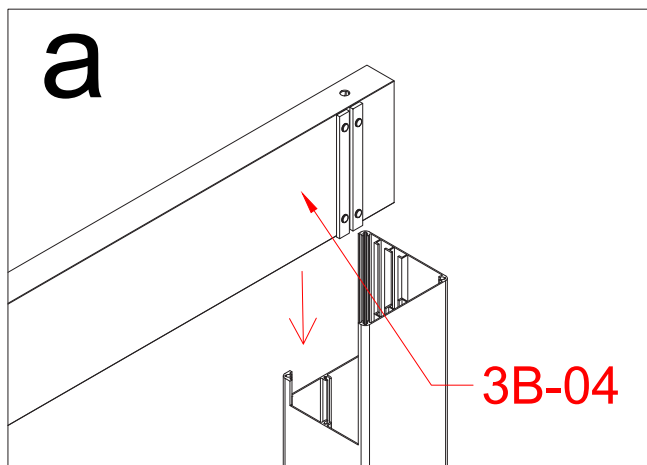






3B-18		1
3B-01		2
3B-04		2

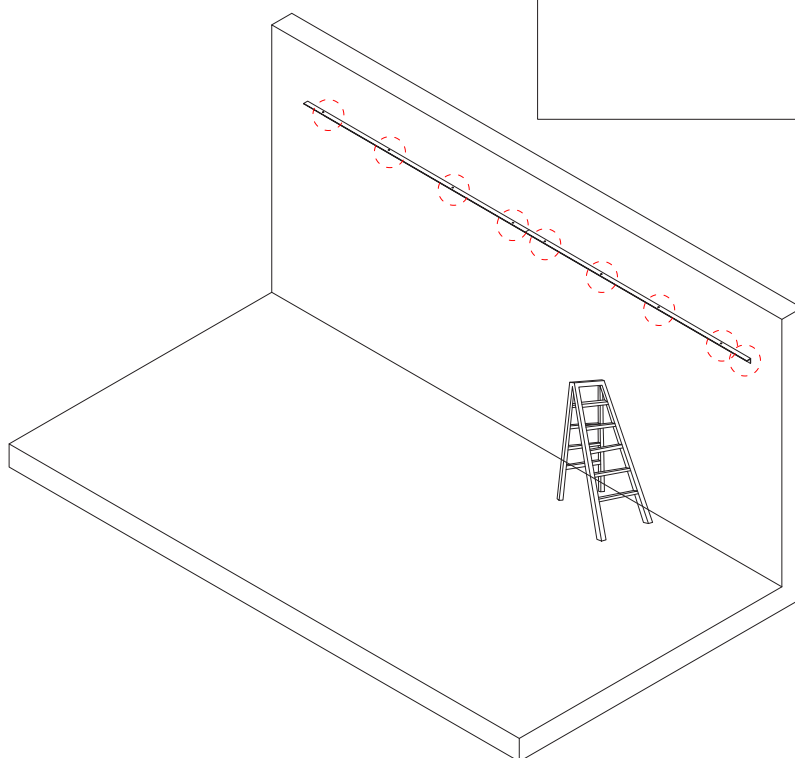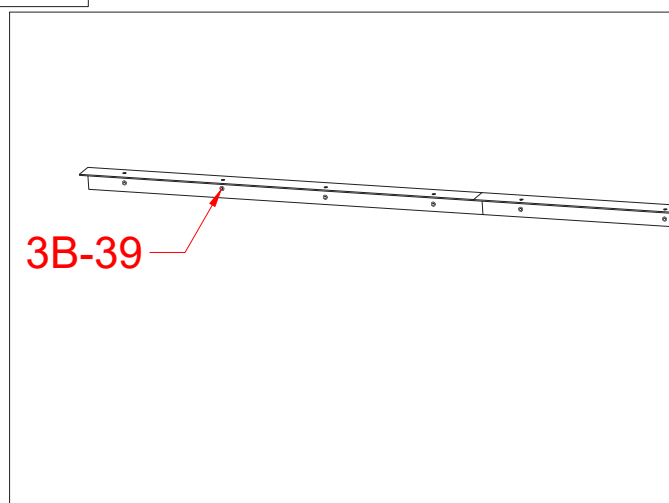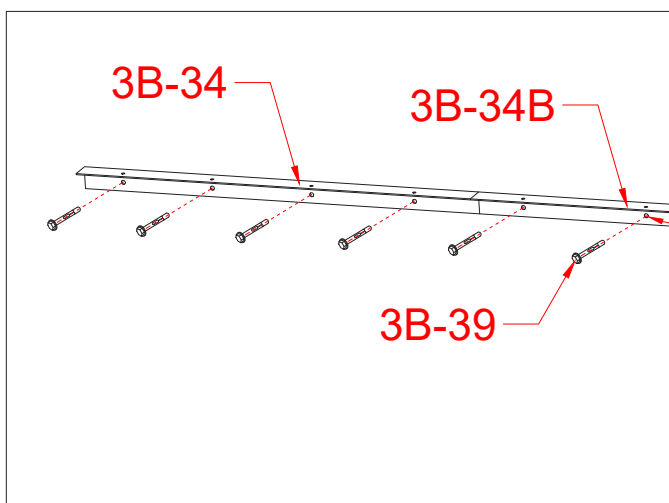





3B-34		2
3B-39	 M8*60	x

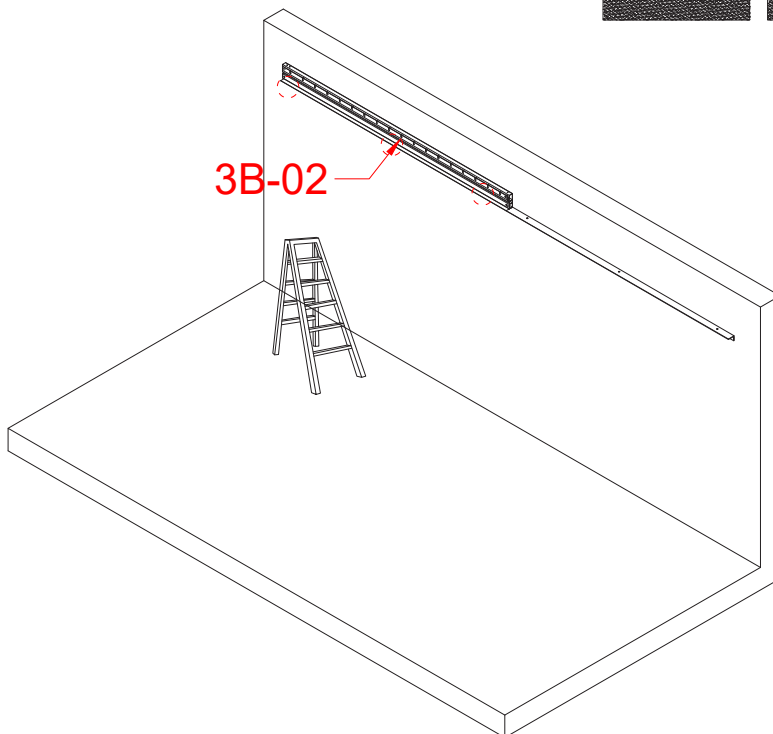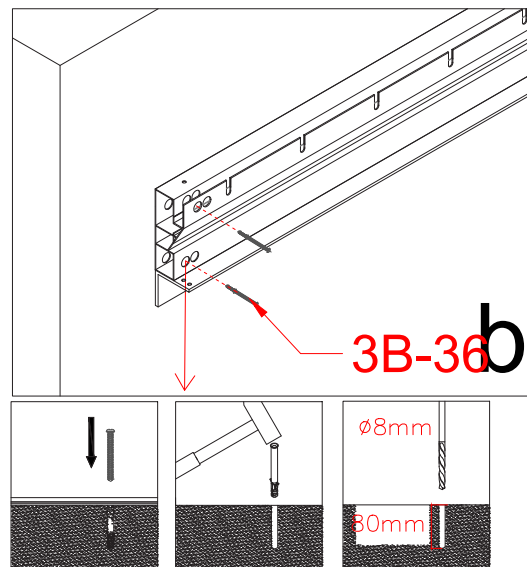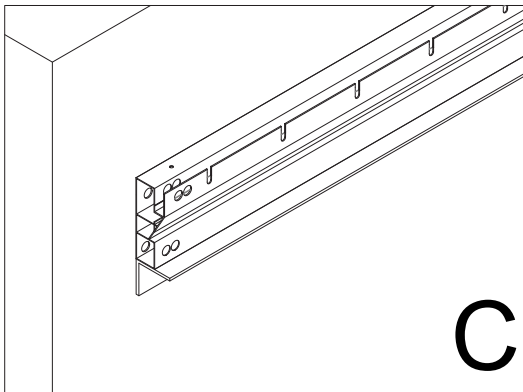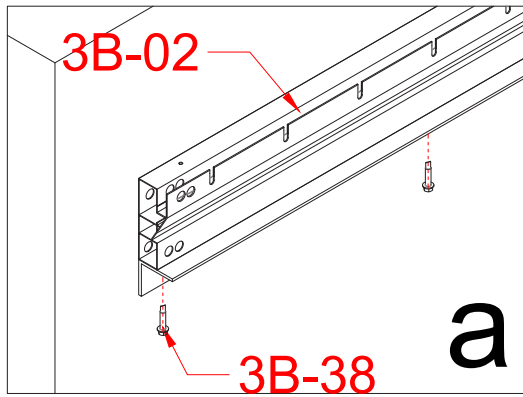


3B-36		2
3B-38		4
3B-02		1

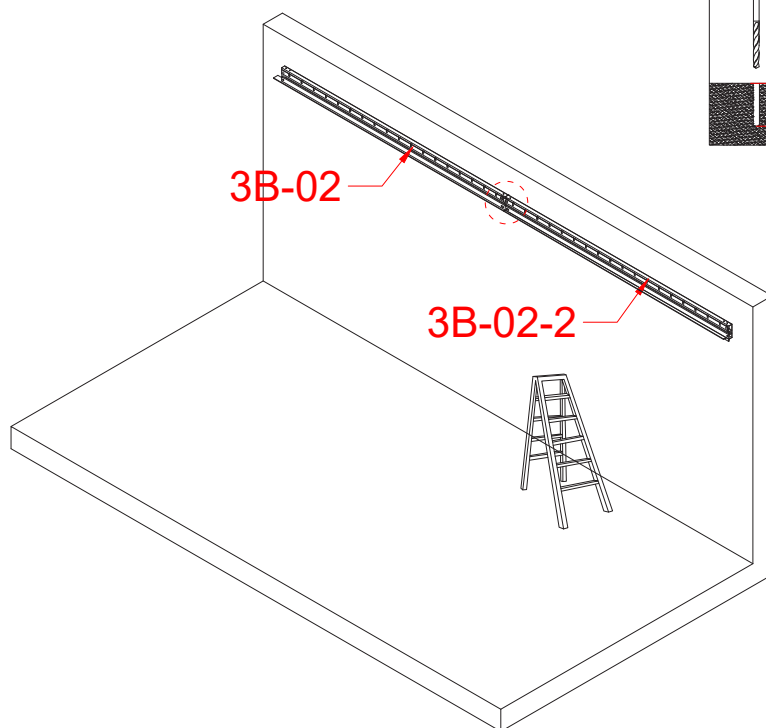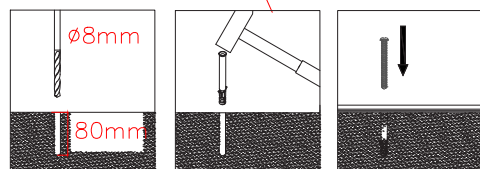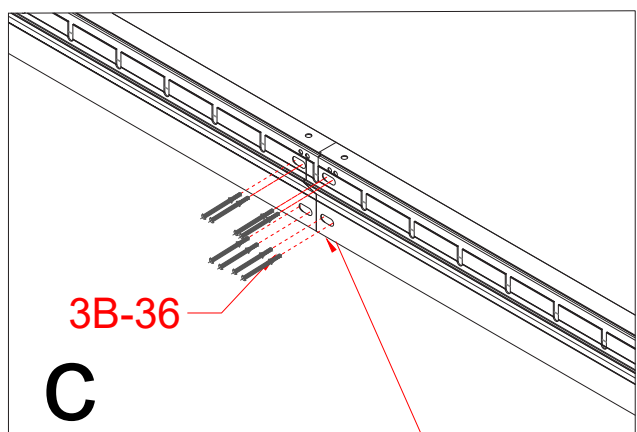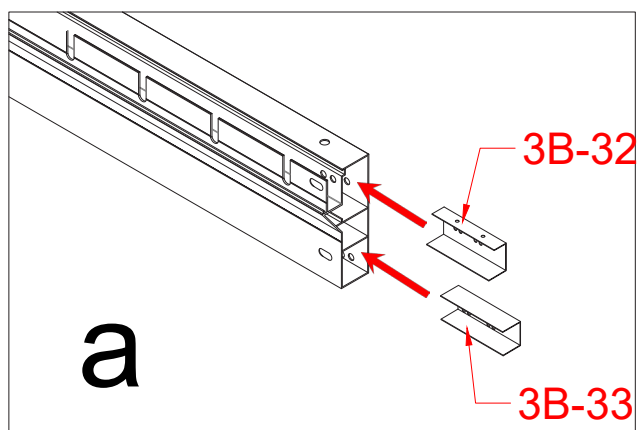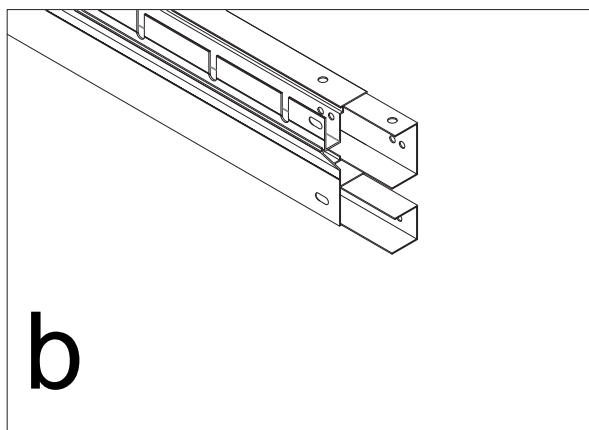





3B-38		4
3B-36		8
3B-32		1
3B-33		1
3B-02-2		1

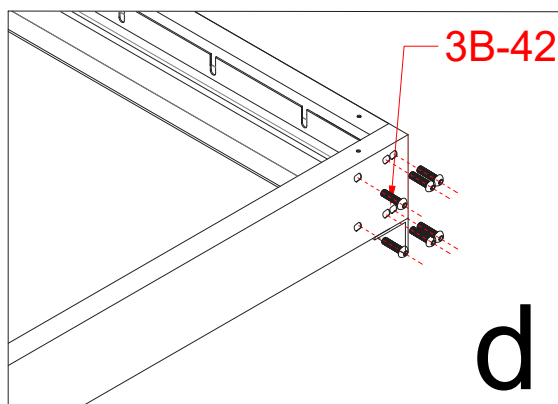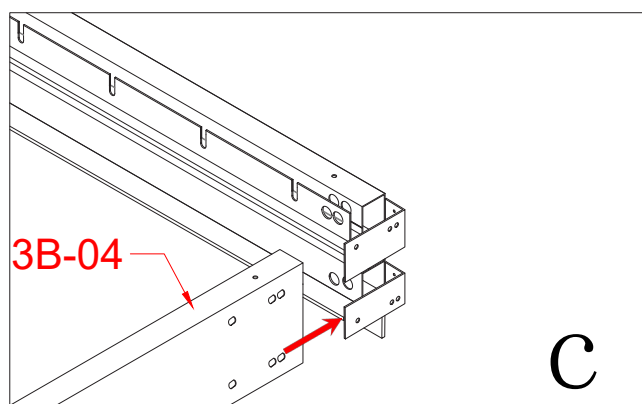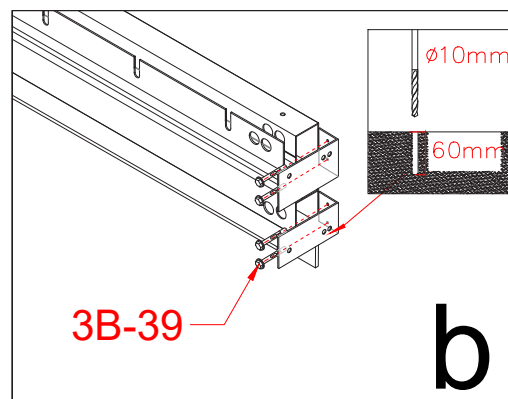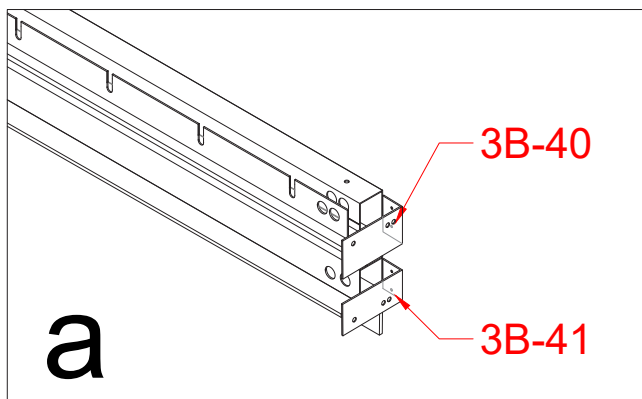







Note: When installing the 3B-01B post to 3B-03-2 beam, need to make sure the post installed closely to the handle crank side of beam.

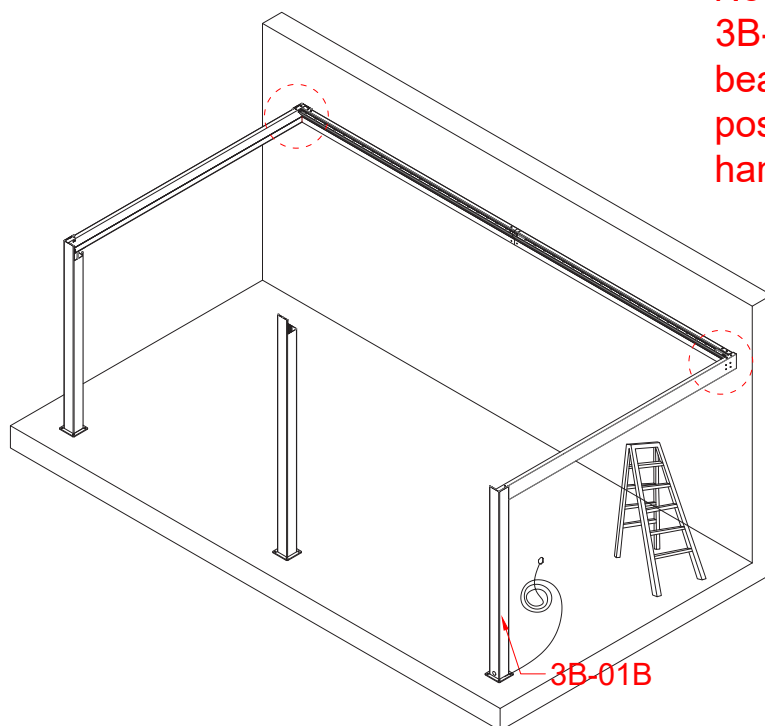


3B-42		12
3B-40		2
3B-41		2
3B-04		2
3B-39		8

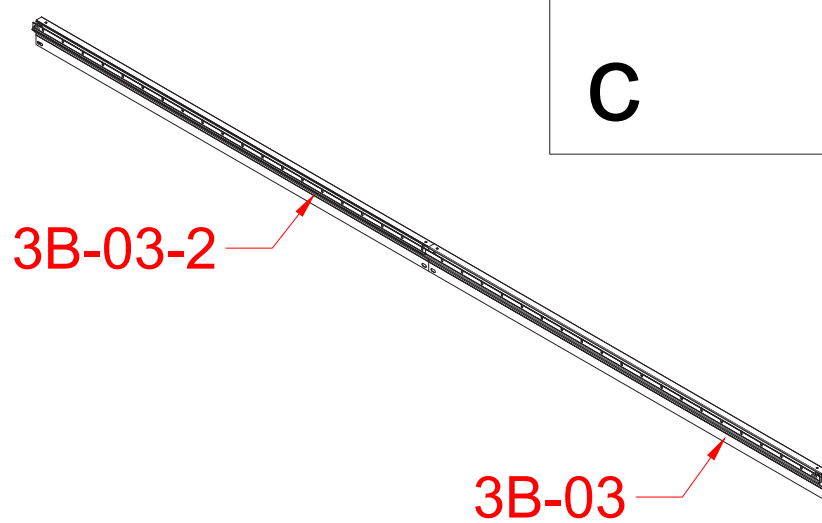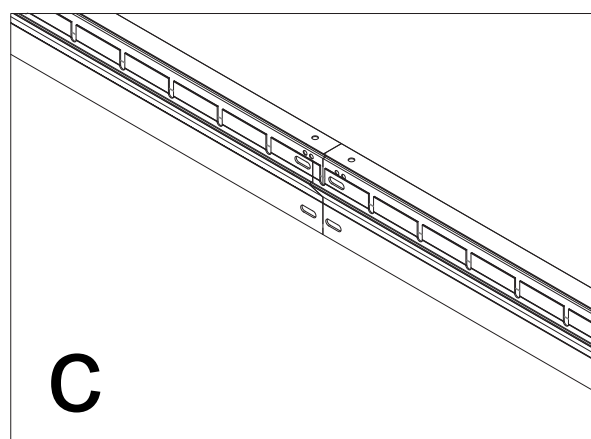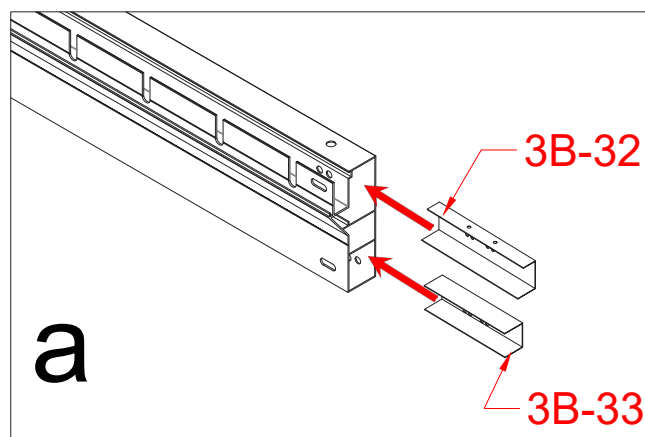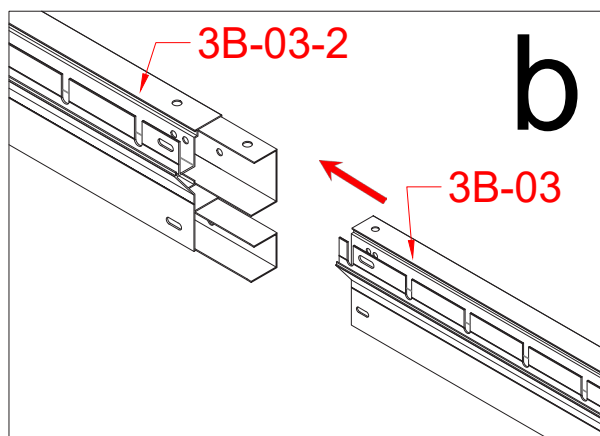



3B-03			1
3B-03-2			1
3B-32			1
3B-33			1

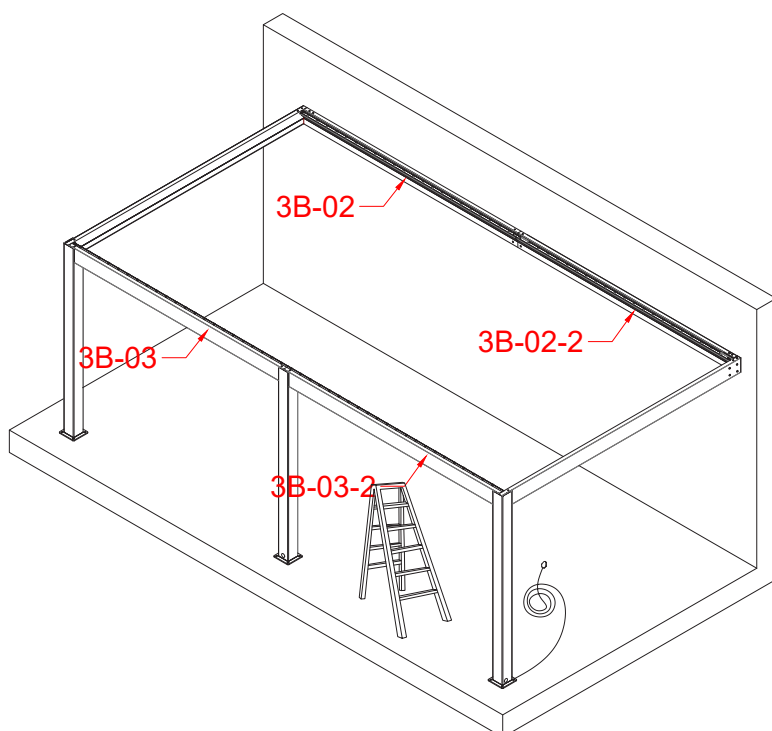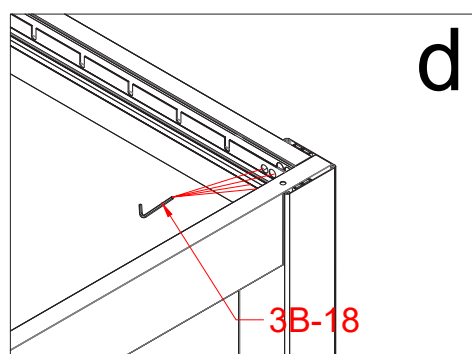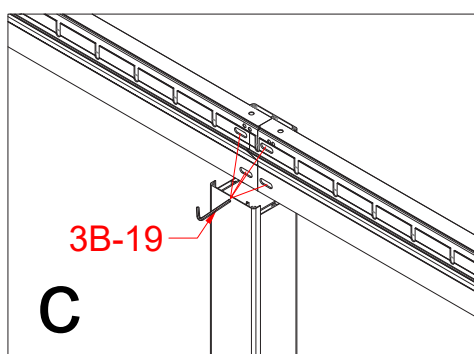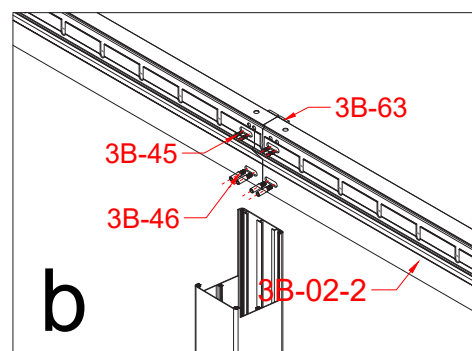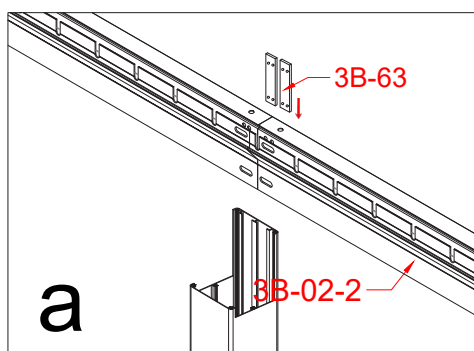




3B-63		2
3B-46		4
3B-18		1
3B-45		4


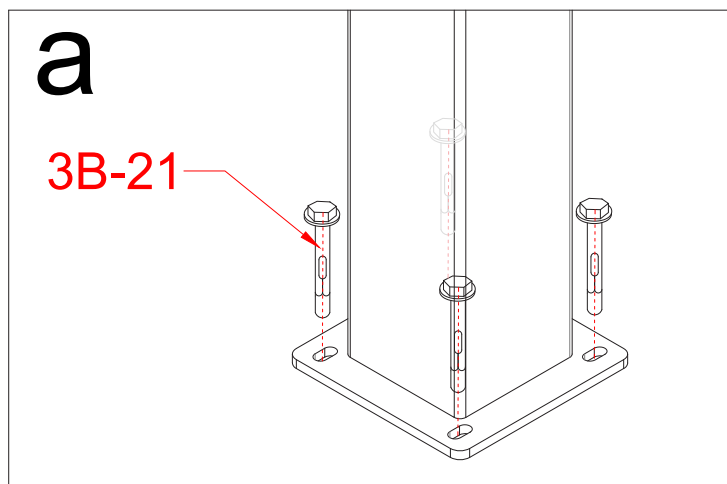



Pls measure the diagonal size and make sure the diagonal size keeps same before screw 3B-21 mounted. If not, pls adjust it to same size.

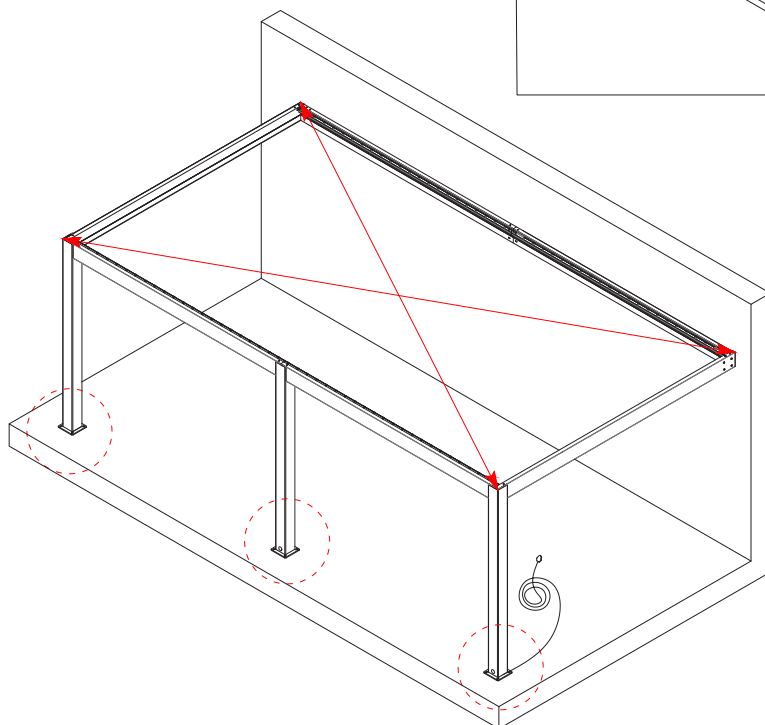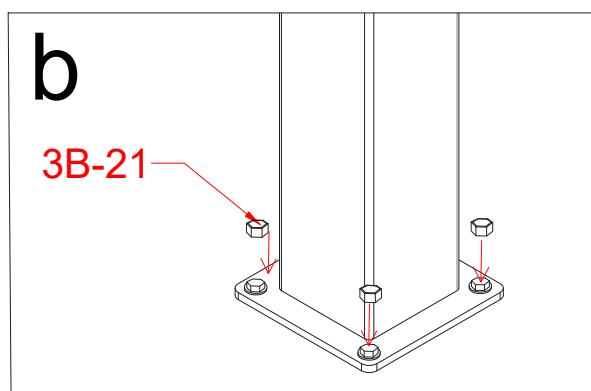




3B-21		12
-------	---	----

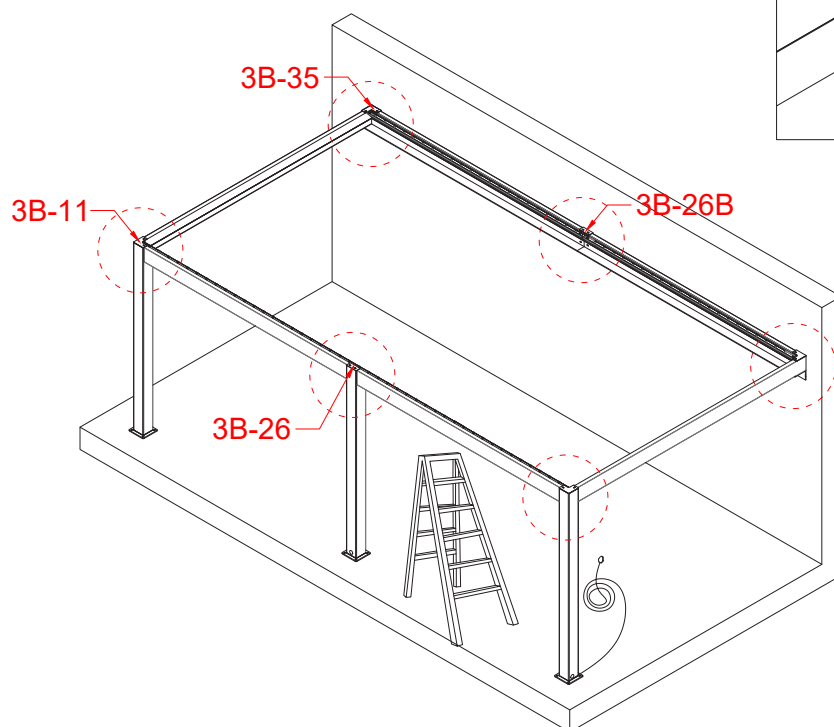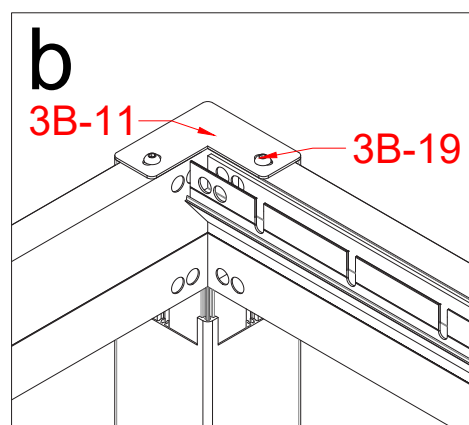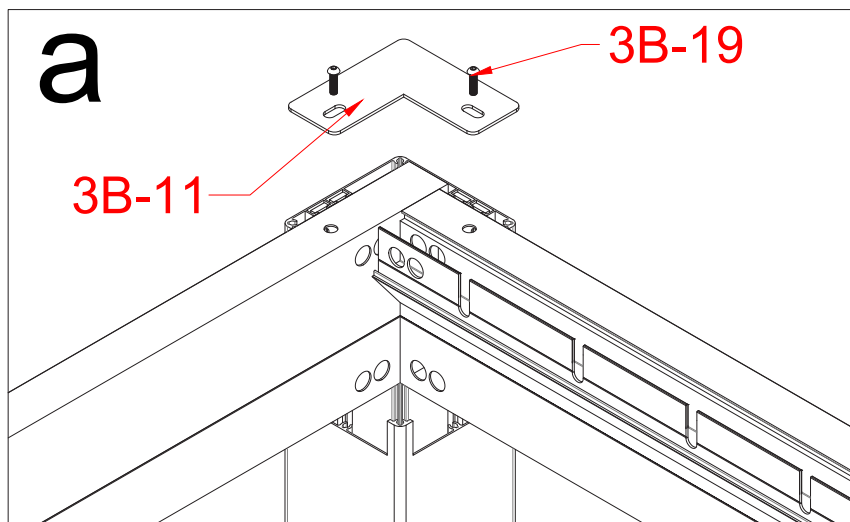

3B-35		2
3B-26/ 26B		2
3B-11		2
3B-19		12

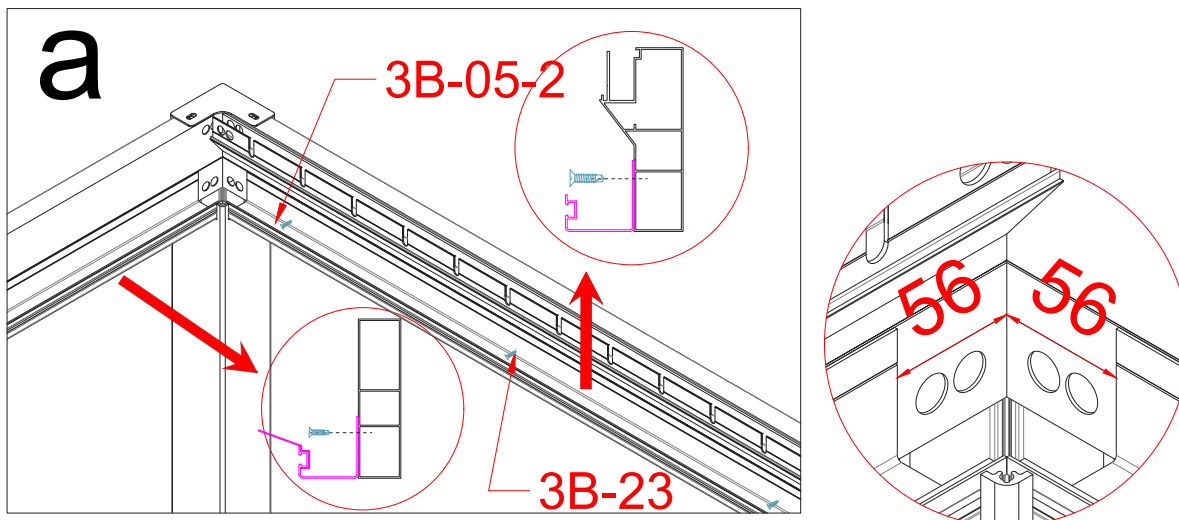





Warning:
Before installation, tear off the protective film of the tape on the back side of Gutter.

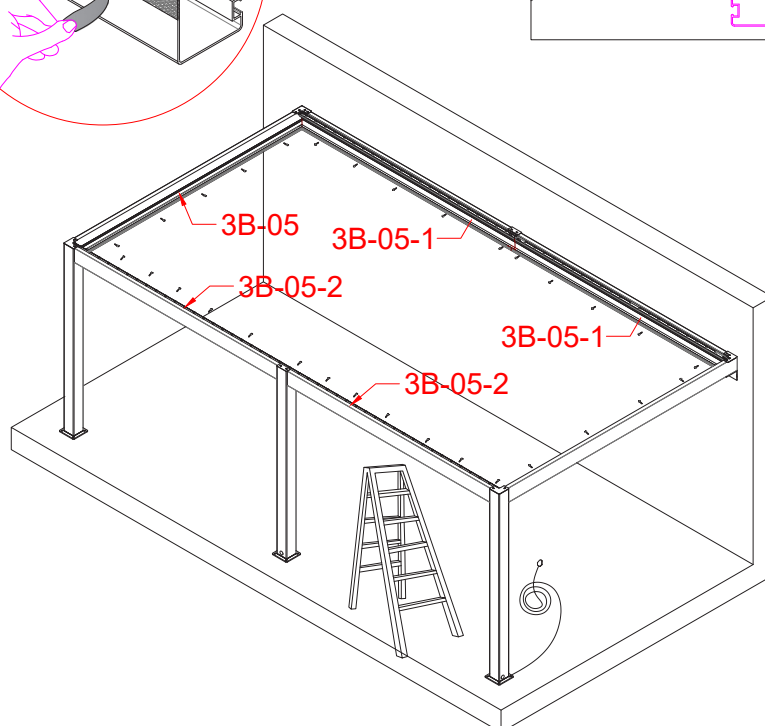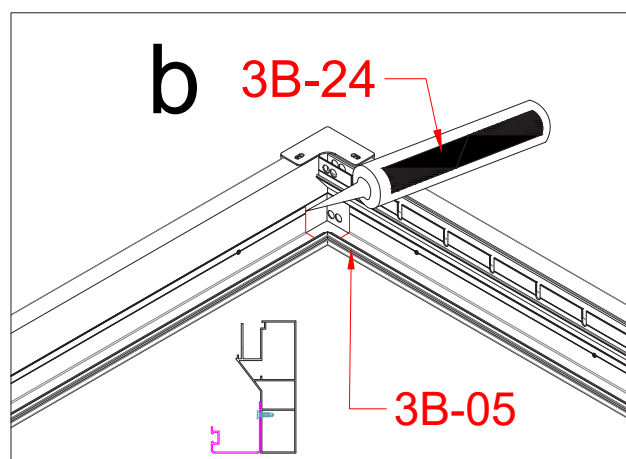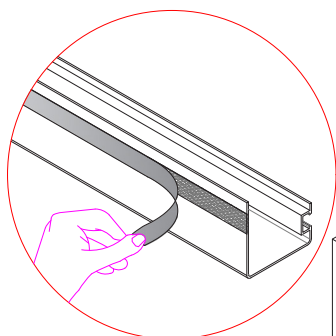


6screws/5m side
8screws/6m side

3B-05-1		2
3B-05-2		2
3B-05		4
3B-23		20

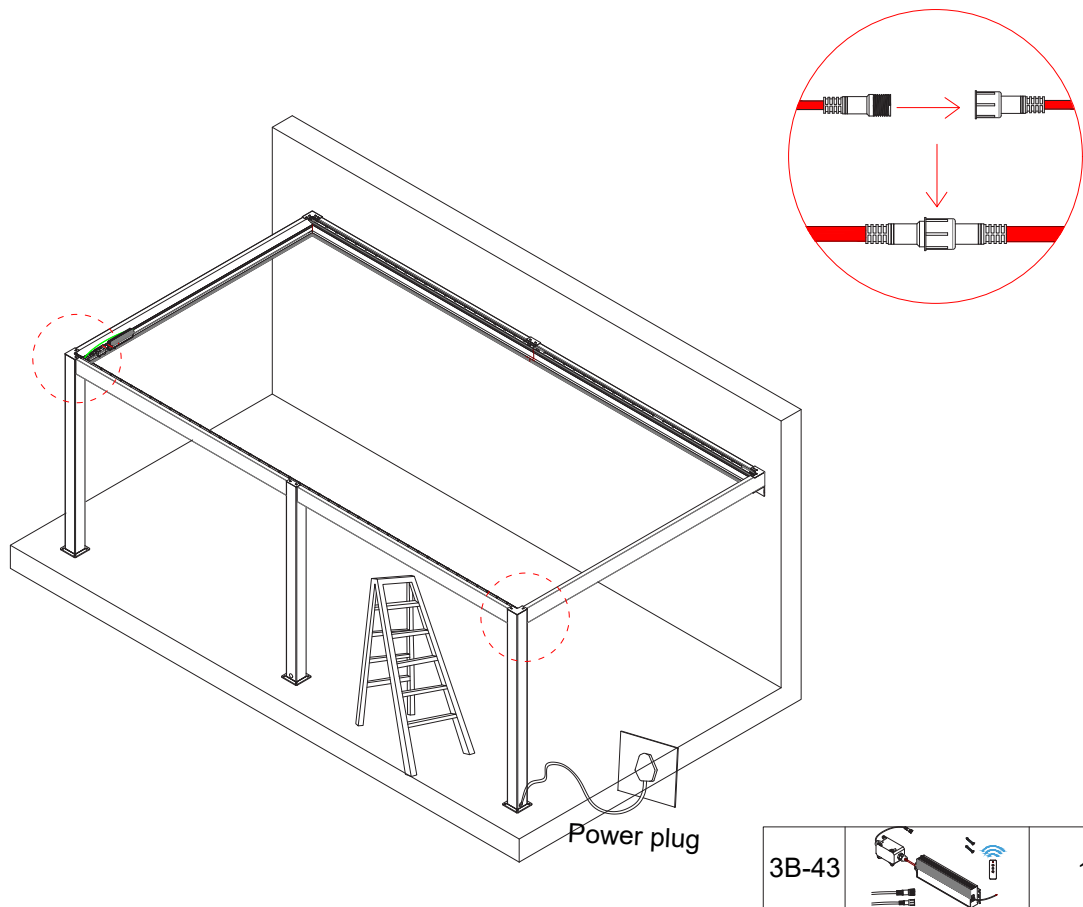


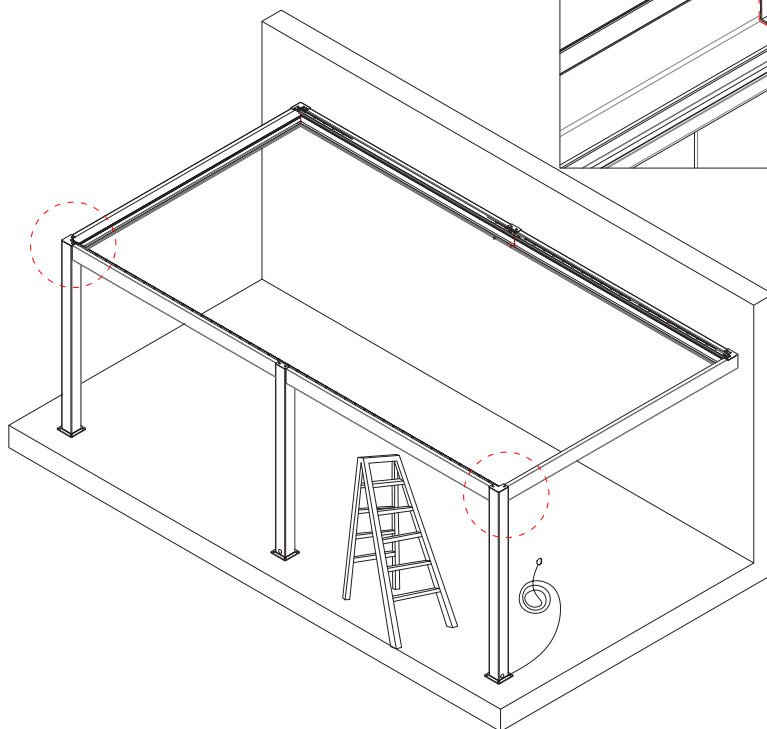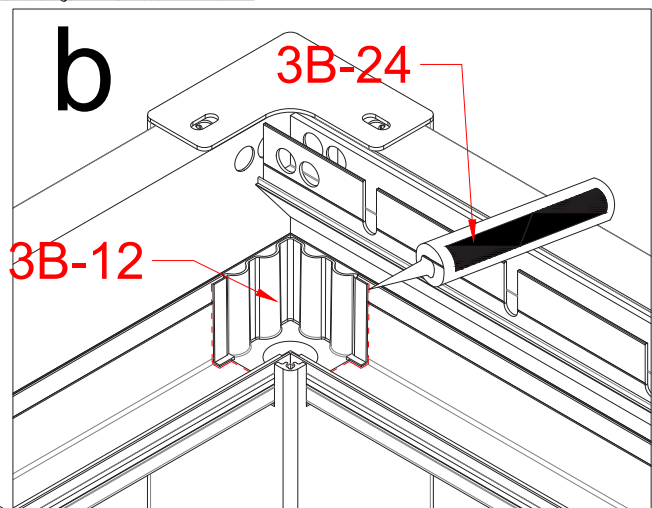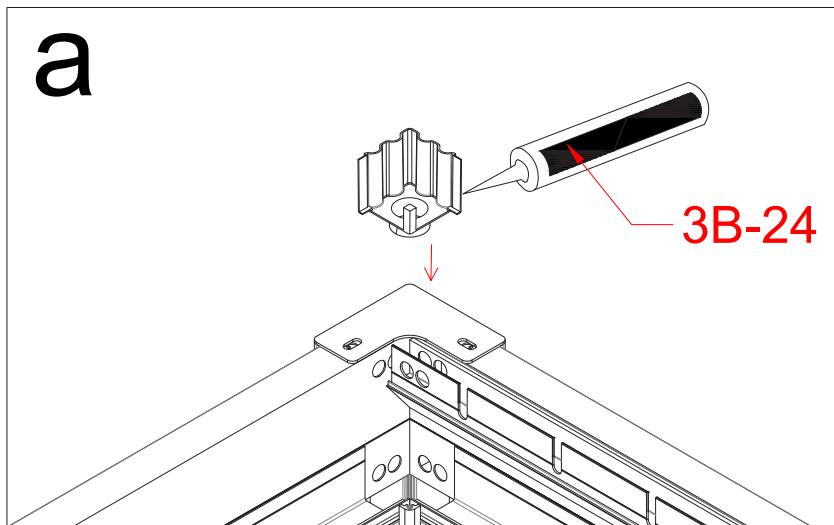







3B-24		1
3B-12		2

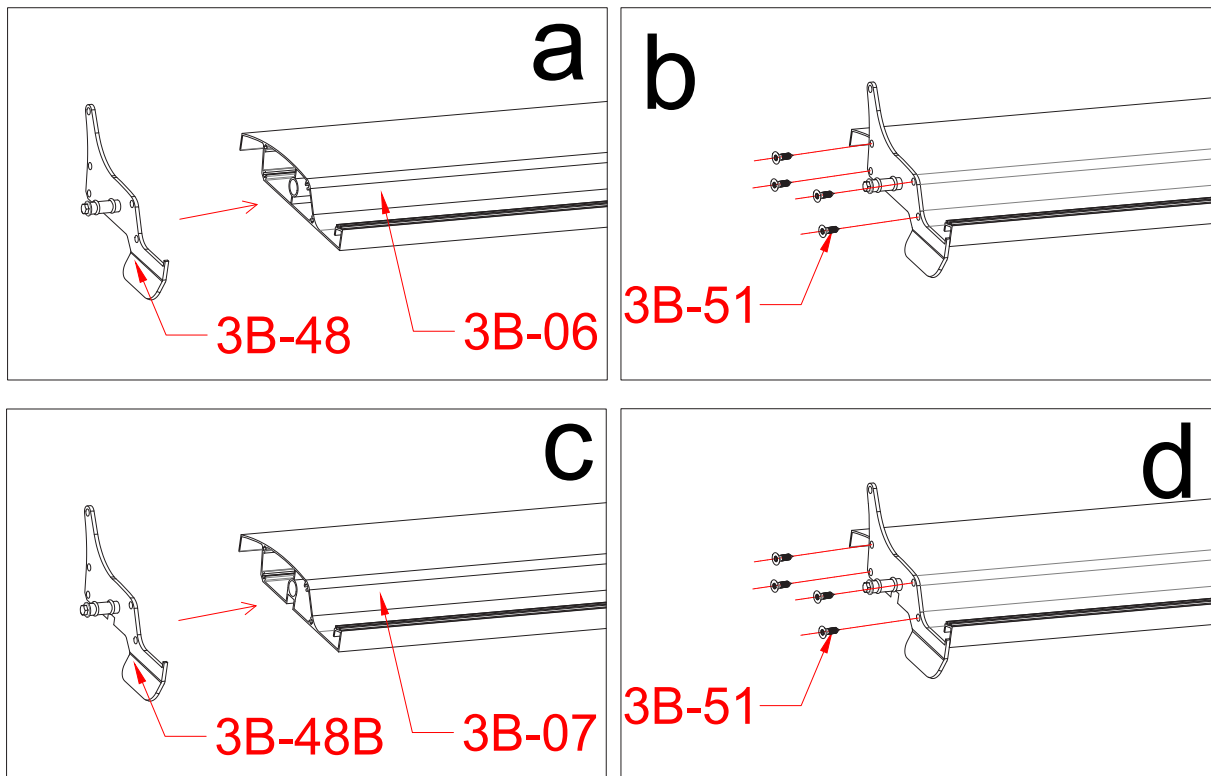




When installing the end cap for louvers, pls don't use the highest gear shift.

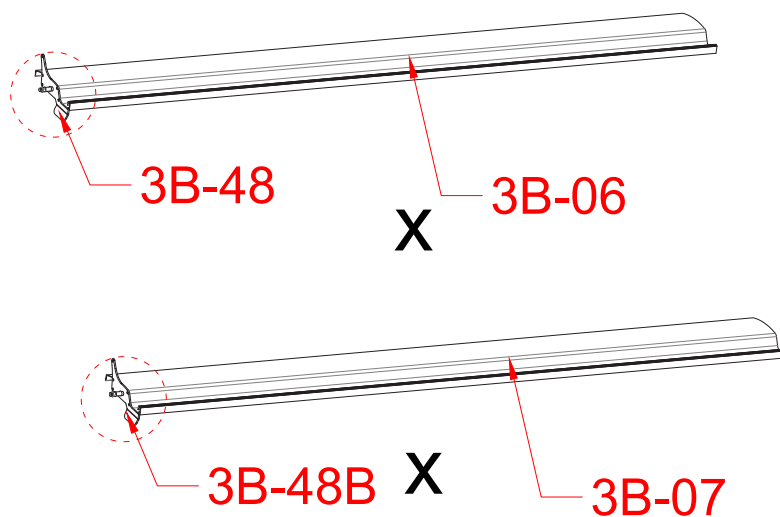





3B-64		1
3B-51		X*4
3B-06		X
3B-07		X
3B-48		X
3B-48B		X



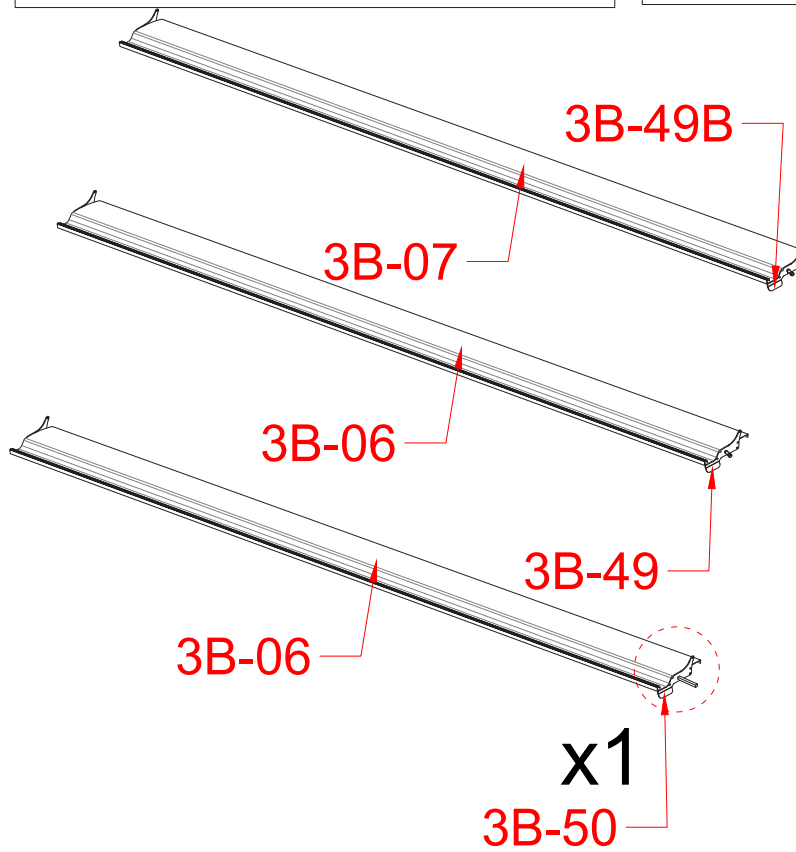
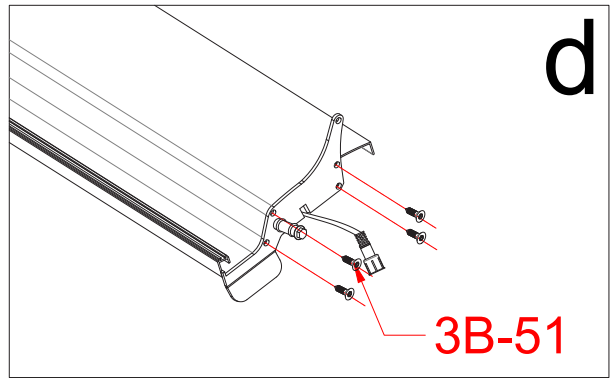
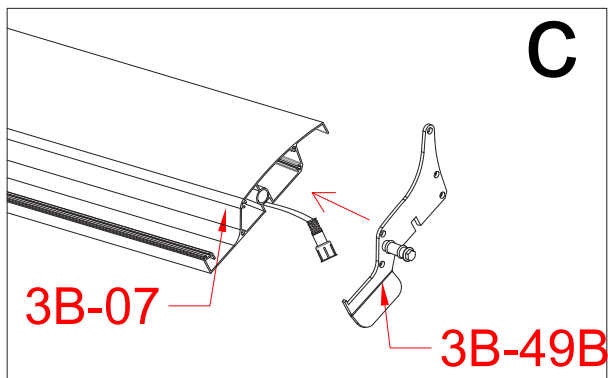
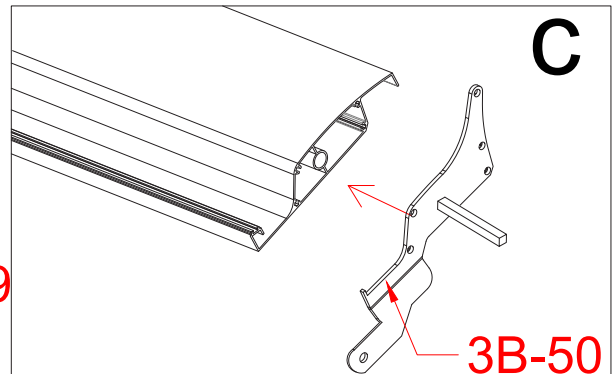
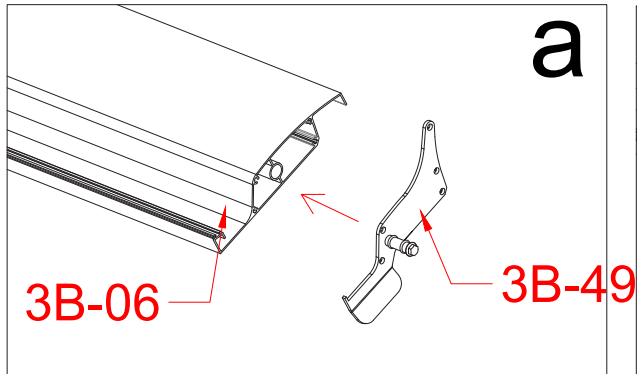


3B-07		X
3B-49B		X
3B-64		1
3B-49		X
3B-50		2
3B-51		X*4

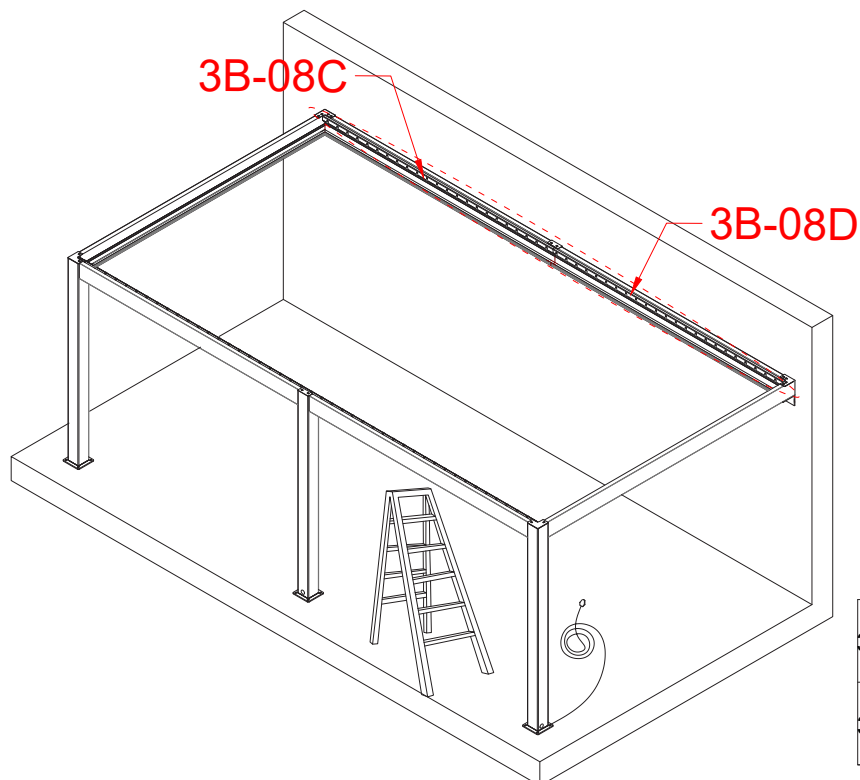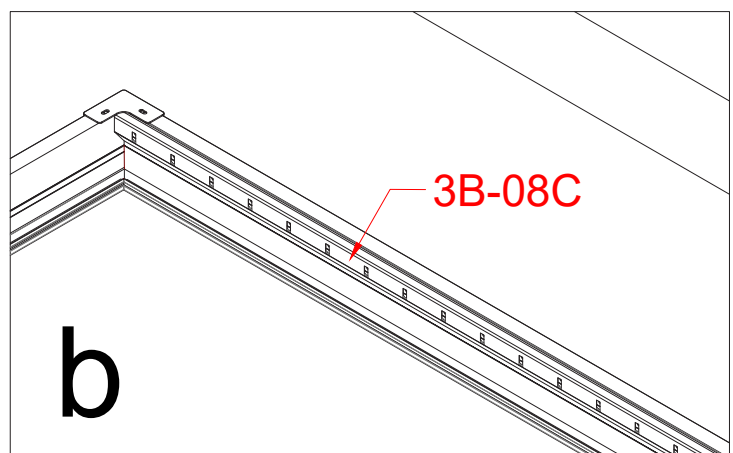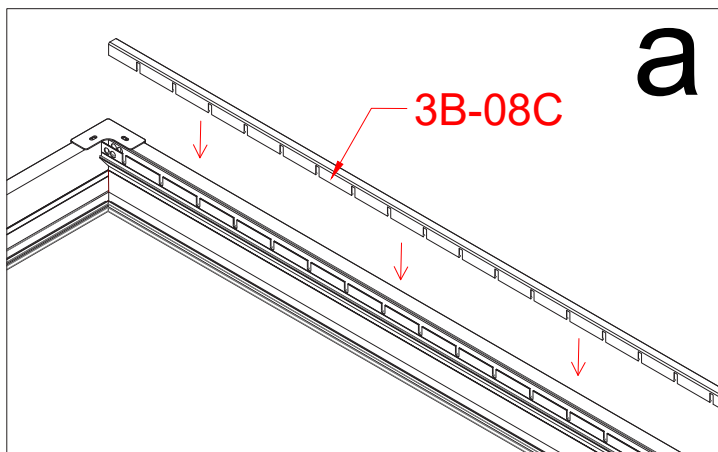





3B-08C		1
3B-08D		1

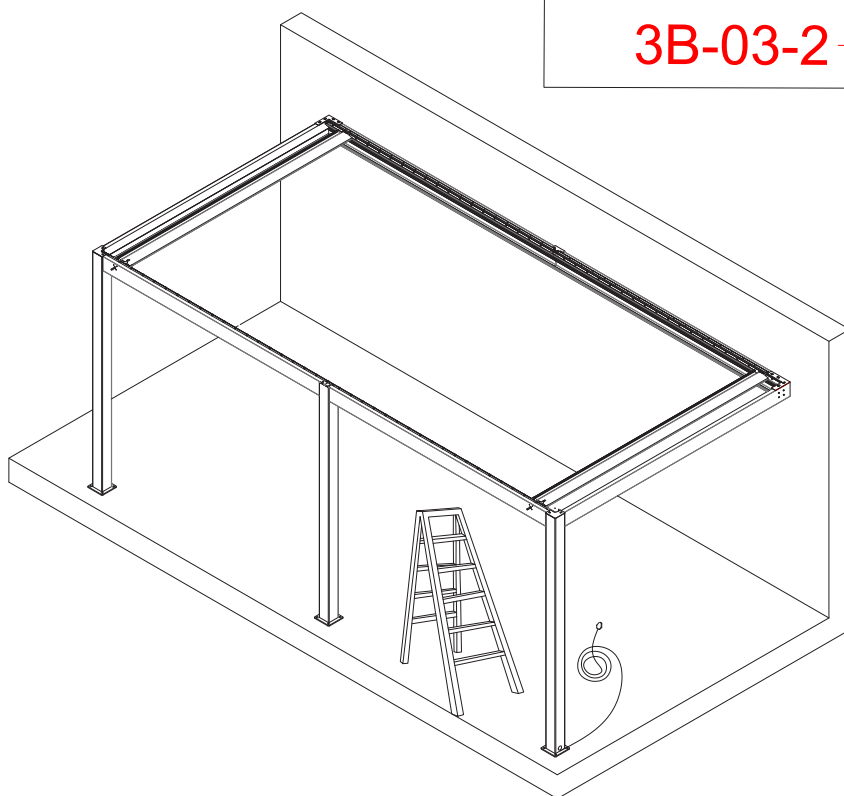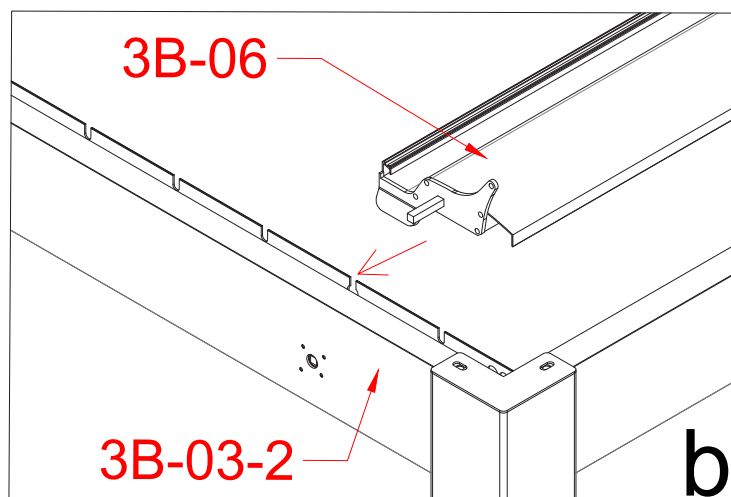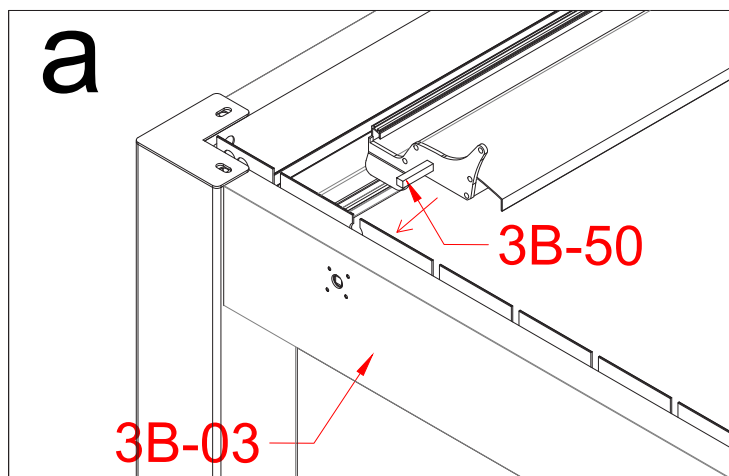

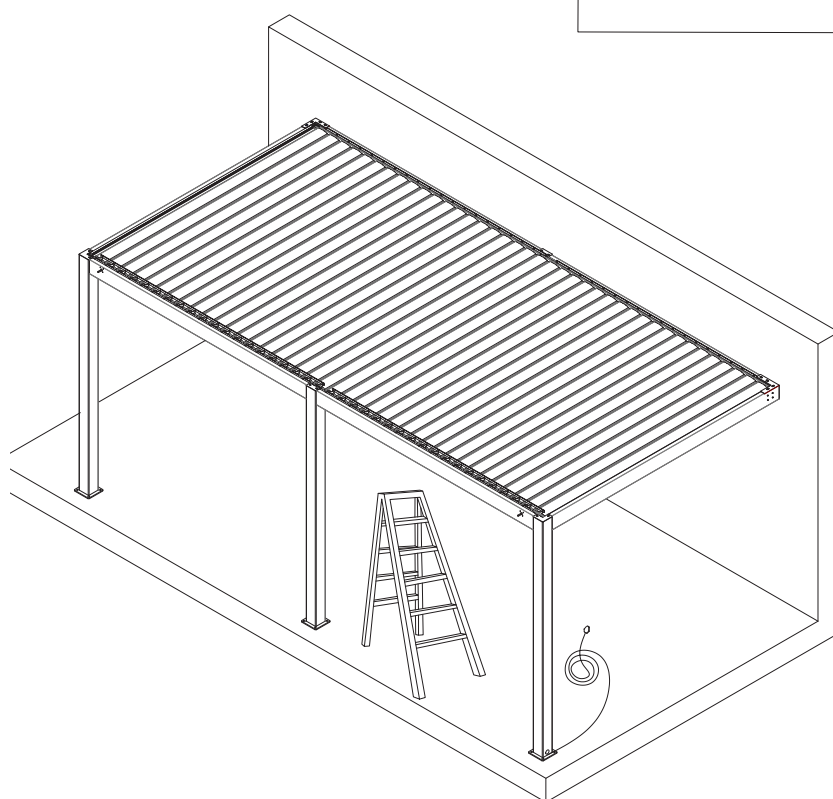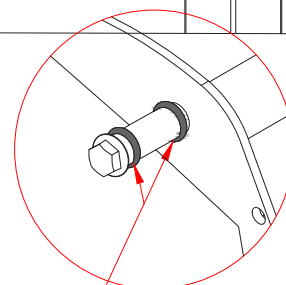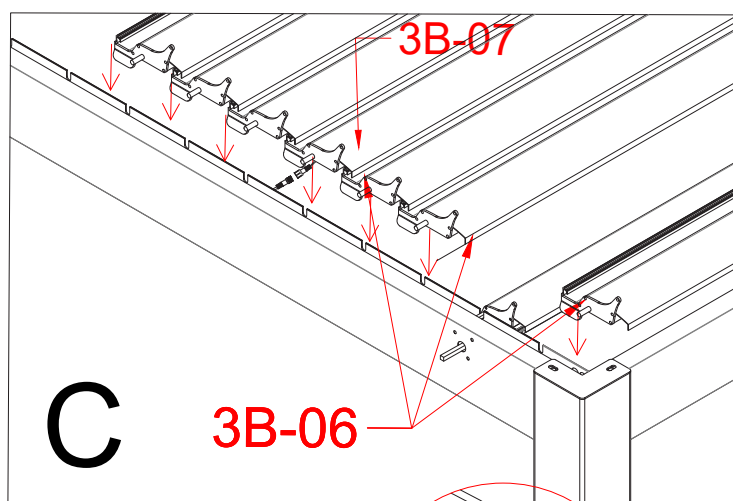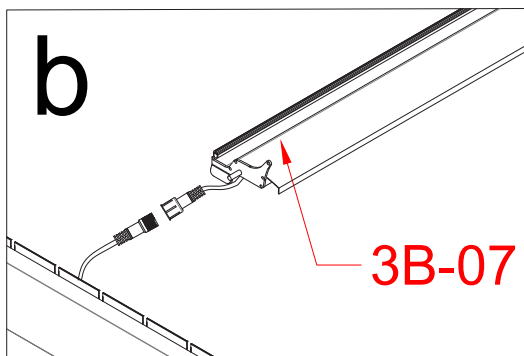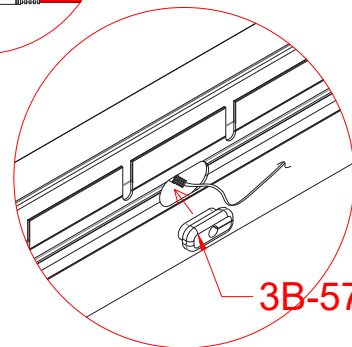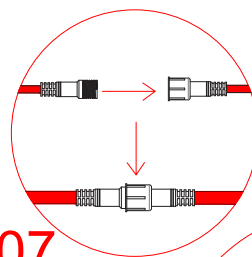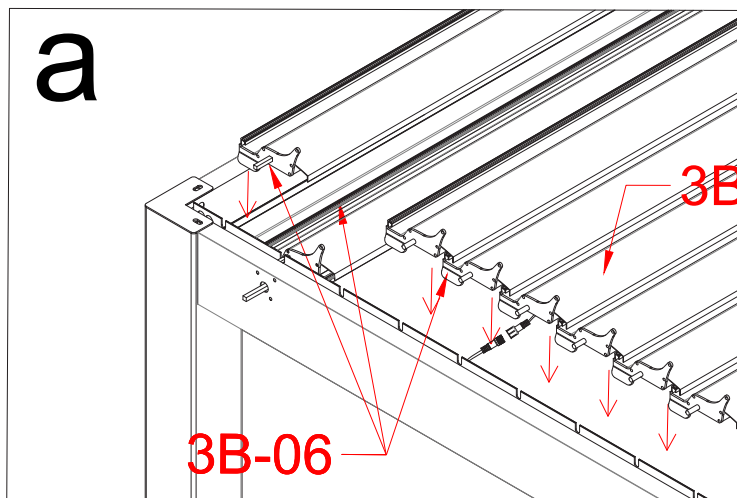


When installing louvers, first separate the two rubber gaskets and slide them to both ends of the circular shaft. Then, please ensure they are closed tightly before proceeding with the next steps of the installation.



3B-57		X
3B-06		X

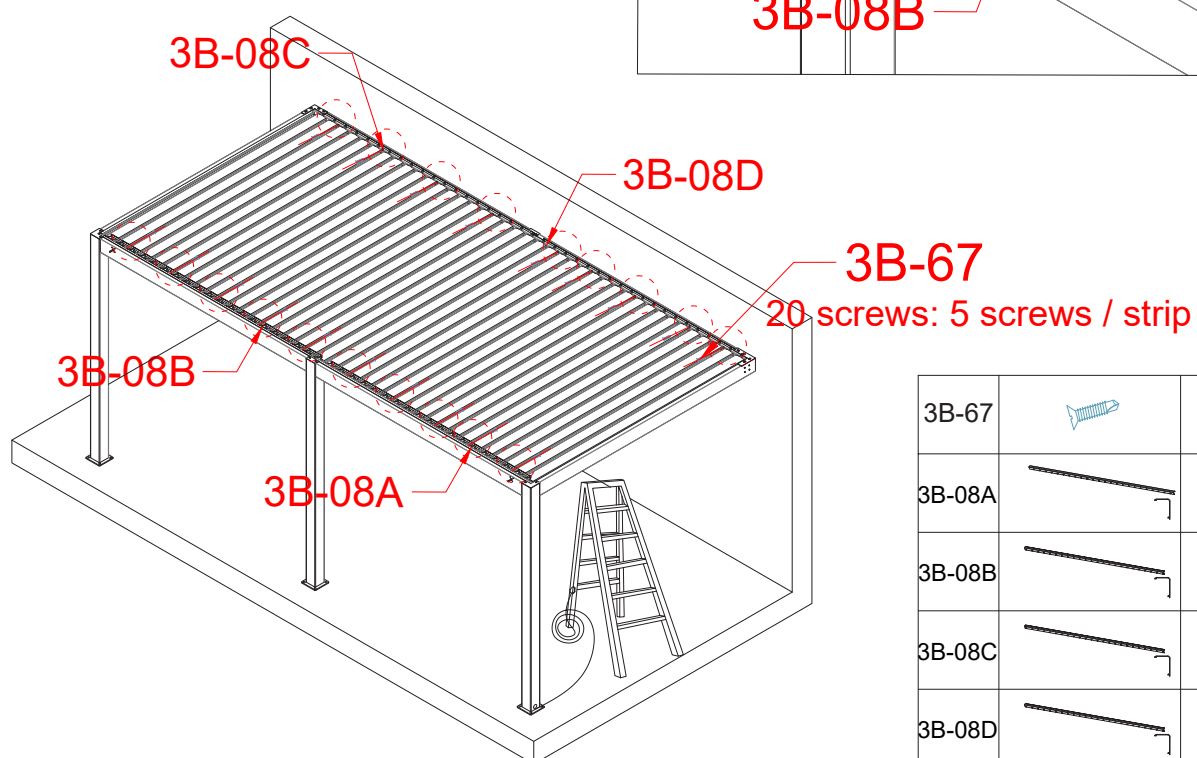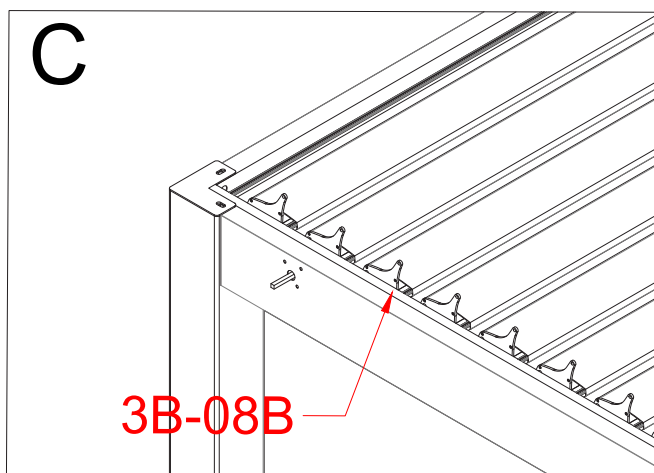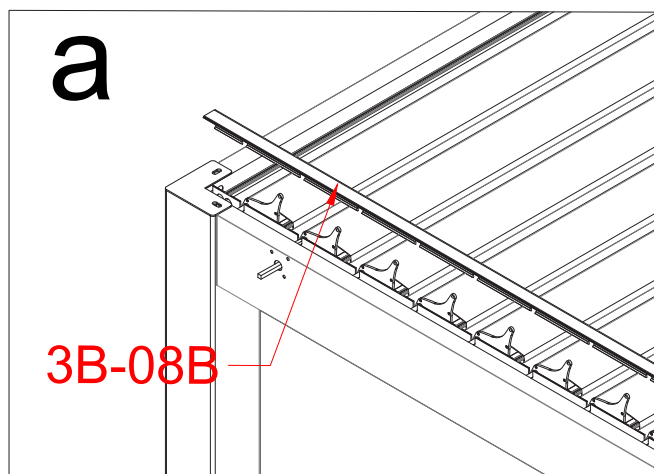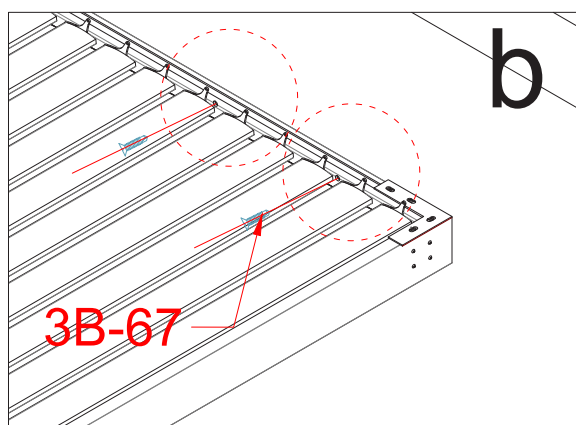





3B-67		X
3B-08A		1
3B-08B		1
3B-08C		1
3B-08D		1

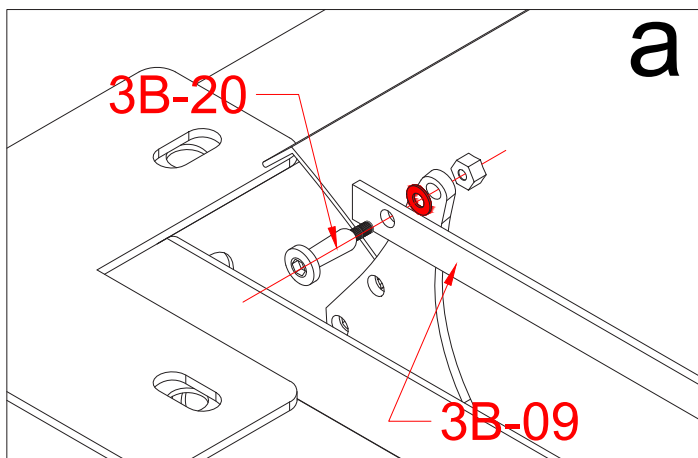




warning:
Bolts must be tightened

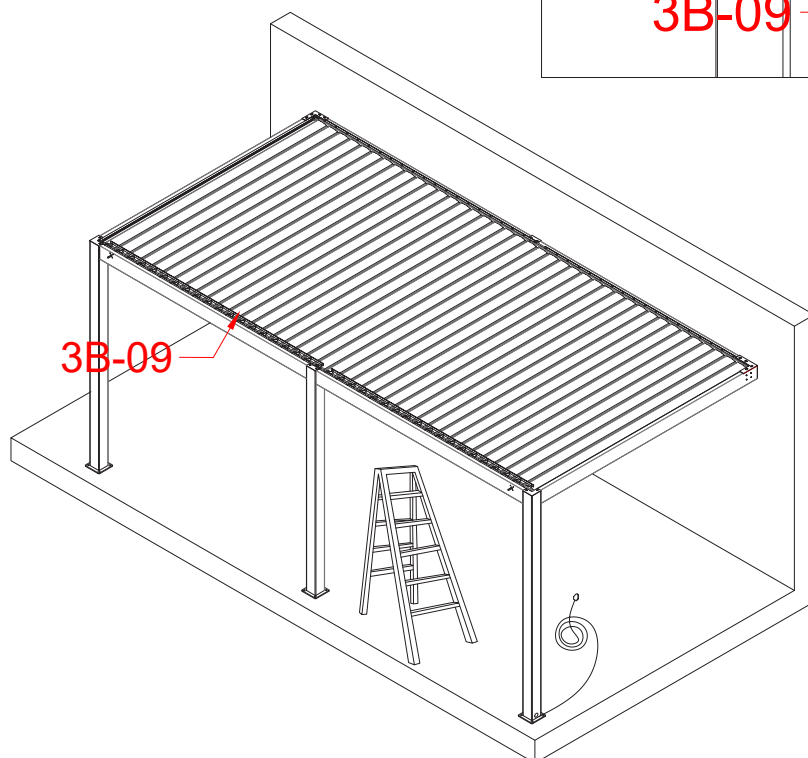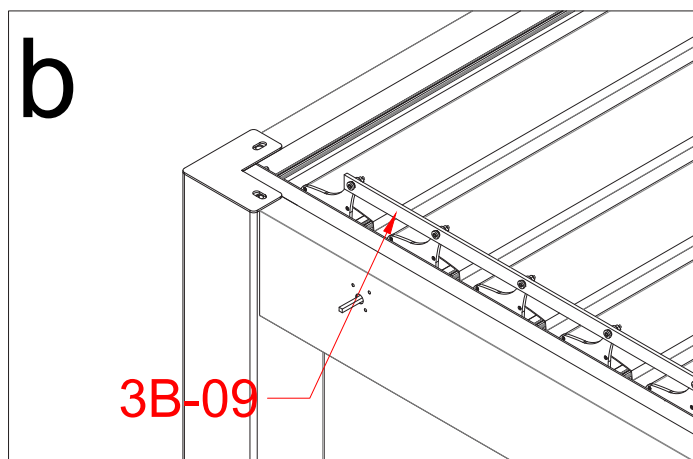



3B-09		4
3B-20		X

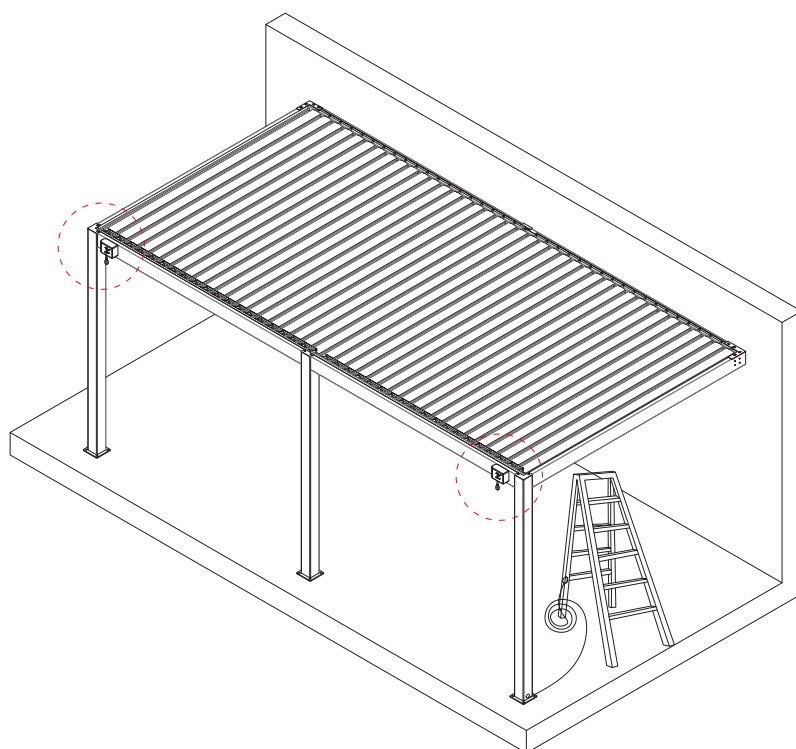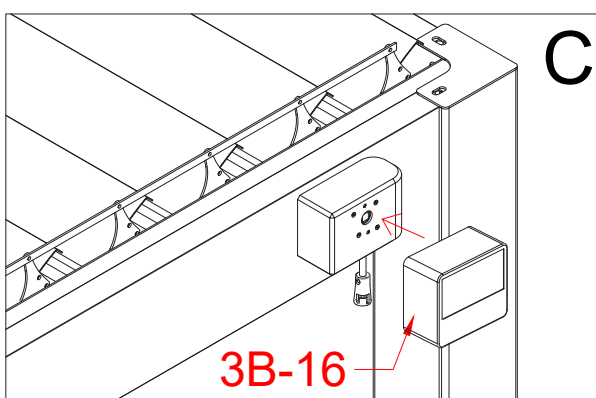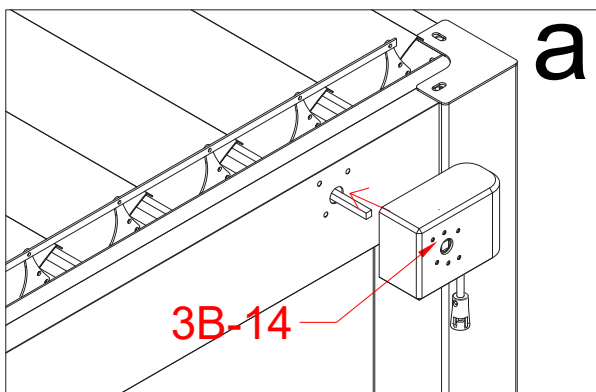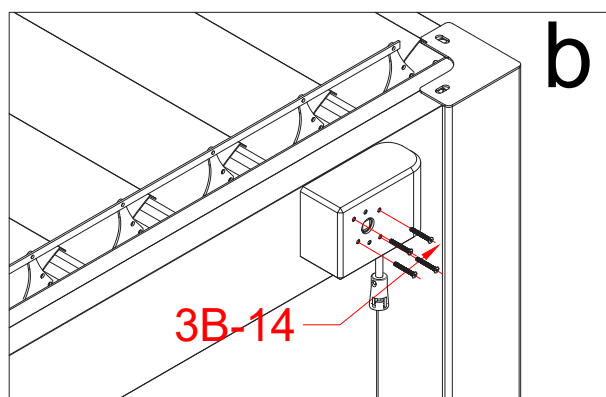


3B-14	 + 	2
3B-16		2

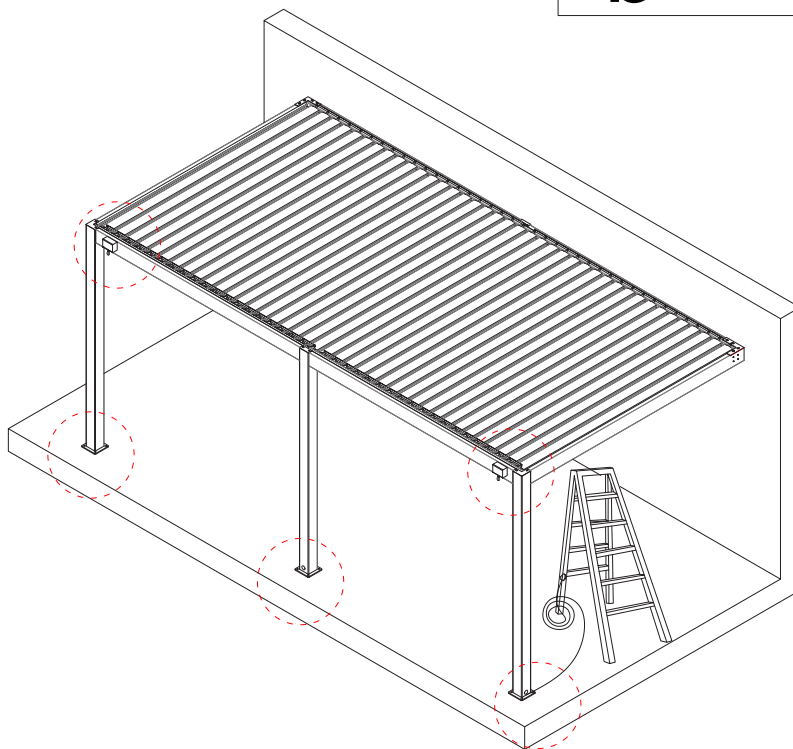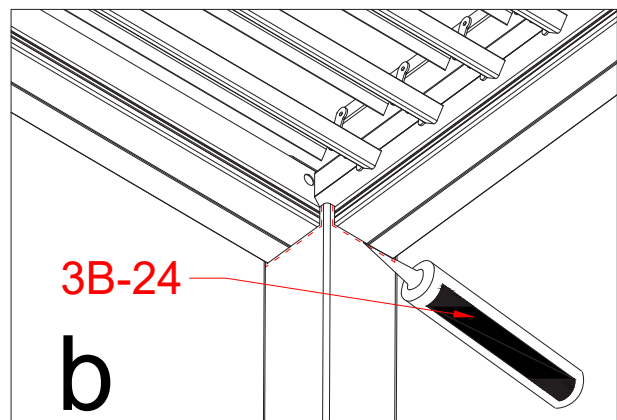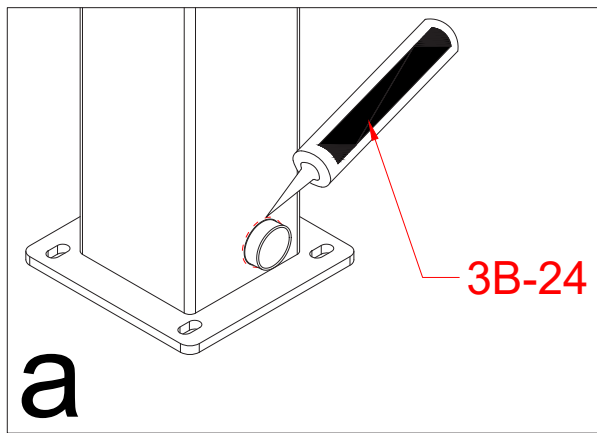

3B-24		1
-------	---	---

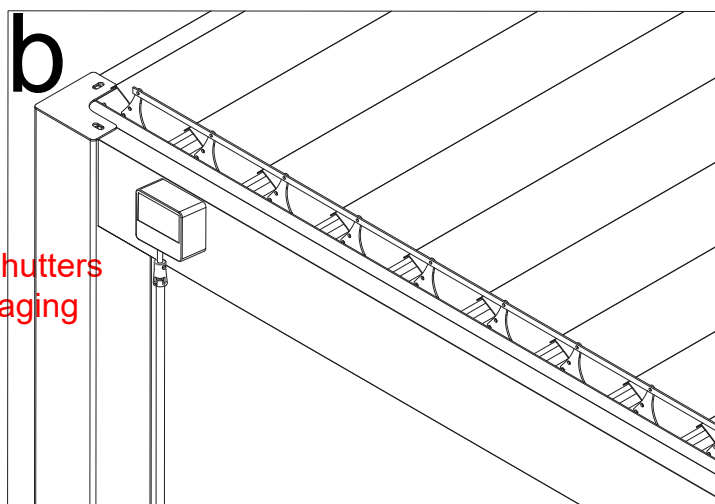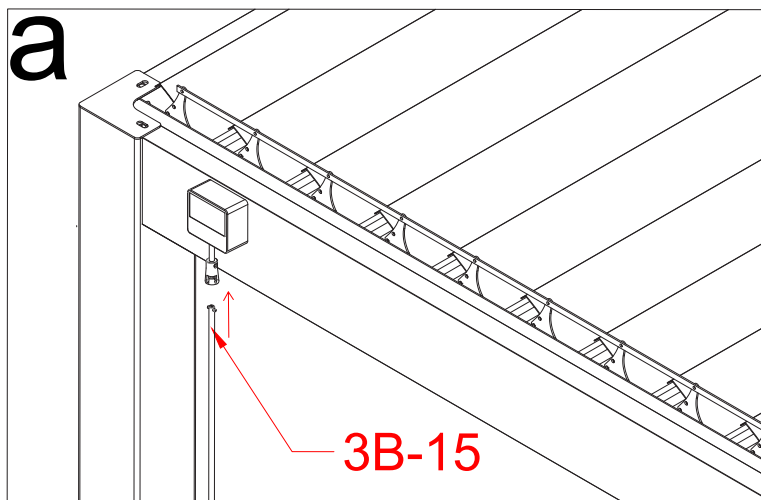

Warning
In Snow / Wind season or in case of
snow / wind forecast open up your shutters
in vertical position to avoid any damaging
on your pergola.

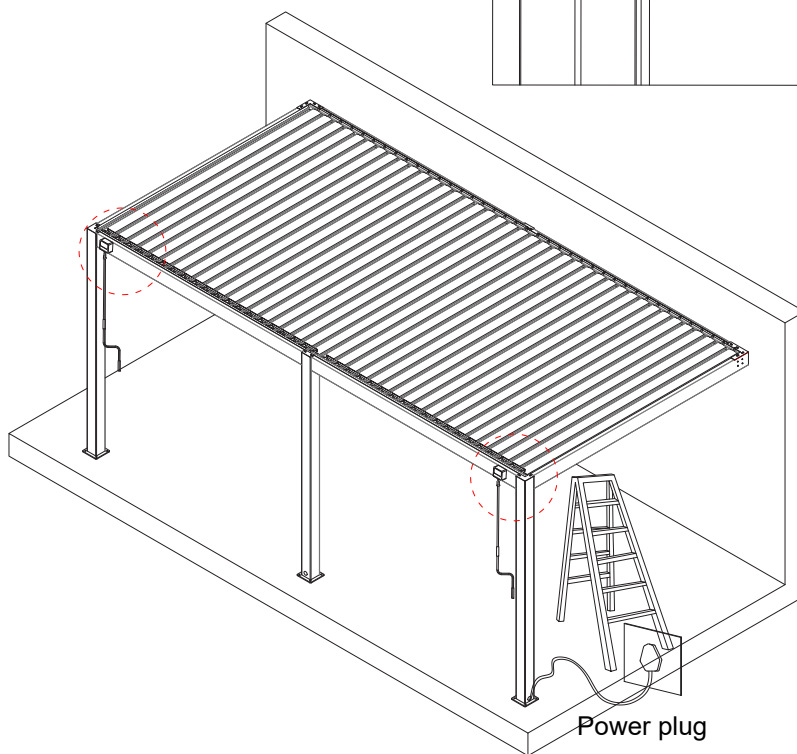

3B-15		2
-------	---	---